



For more information,  
visit [freescale.com/  
sensortoolbox](http://freescale.com/sensortoolbox)

Freescale and the Freescale logo are  
trademarks of Freescale Semiconductor, Inc.,  
Reg. U.S. Pat. & Tm. Off. All other  
product or service names are the  
property of their respective owners.  
© 2015 Freescale Semiconductor, Inc.  
FRDMK22FSA9500QRC REV 1  
920-28990 REV A

FRDM-  
K22F-  
SA9500

# FRDM-K22F-SA9500

FRDM-  
K22F-  
SA9500



## Quick Reference Card

### 3-Axis Sensor Toolbox Demonstration Kit

Freescale FRDM-STBC-SA9500 and FRDM-K22F  
demonstration and development kit



### Get Started


Download tools and  
documentation under  
**Jump Start Your Design**  
at [freescale.com/  
sensortoolbox](http://freescale.com/sensortoolbox)



FREESCALE FREEDOM PLATFORM

- 1 Verify package contents:
  - FRDM-K22F/FRDM-STBC-SA9500 assembly
  - USB cable
- 2 Download the mbed Windows serial port driver: [developer.mbed.org/handbook/Windows-serial-configuration](http://developer.mbed.org/handbook/Windows-serial-configuration)
- 3 Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.
- 4 Download and install the latest Sensor Toolbox software at: [freescale.com/sensortoolbox](http://freescale.com/sensortoolbox)
- 5 Start the Sensor Toolbox software.

FXLC95000CL motion-sensing platform integrating a 3-axis MEMS accelerometer and a 32-bit MCU  
 24 LGA (3 mm x 5 mm x 1 mm)

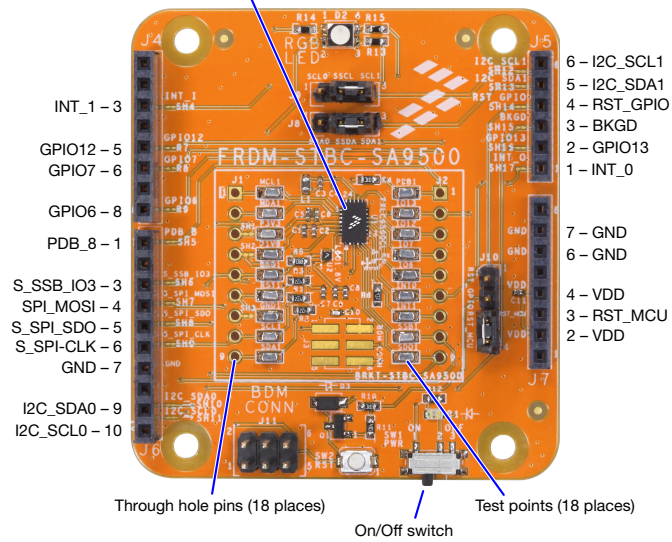

Get to Know the FRDM-K22F-SA9500



Learn more at [freescale.com/sensortoolbox](http://freescale.com/sensortoolbox)