




For more information,  
visit [freescale.com/  
sensortoolbox](http://freescale.com/sensortoolbox)

FRDM  
KL25-  
A8471

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc. Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. © 2015 Freescale Semiconductor, Inc. FRDMKL25A8471QRC REV 1 920-28976 REV A

# FRDMKL25-A8471

FRDM  
KL25-  
A8471

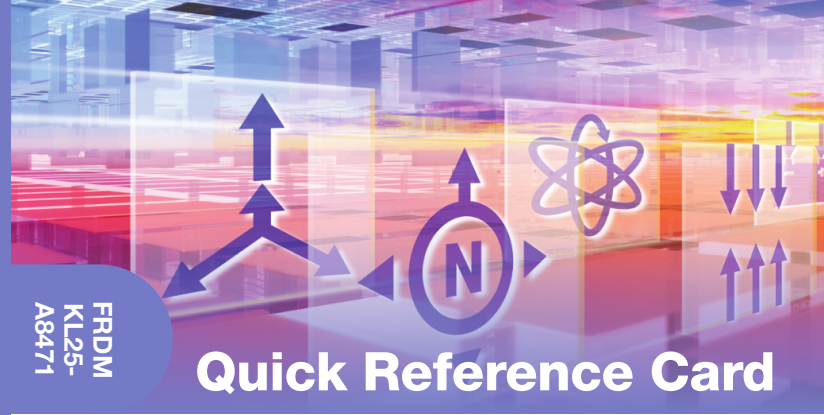

## Quick Reference Card

### 3-Axis Sensor Toolbox Demonstration Kit

FRDMSTBC-A8471 3-Axis Sensor Toolbox Board and  
Freescale Freedom FRDM-KL25Z development board




### Get Started

Download tools and  
documentation under  
**Jump Start Your Design**  
at [freescale.com/  
sensortoolbox](http://freescale.com/sensortoolbox)



FREESCALE FREEDOM PLATFORM

- 1 Verify package contents:
  - FRDM-KL25Z/FRDMSTBC-A8471 assembly
  - USB cable
- 2 Download and install the P&E OpenSDA USB drivers: [pemicro.com/opensda](http://pemicro.com/opensda)
- 3 Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.
- 4 Download and install the latest Sensor Toolbox software at: [freescale.com/sensortoolbox](http://freescale.com/sensortoolbox)
- 5 Start the Sensor Toolbox software.

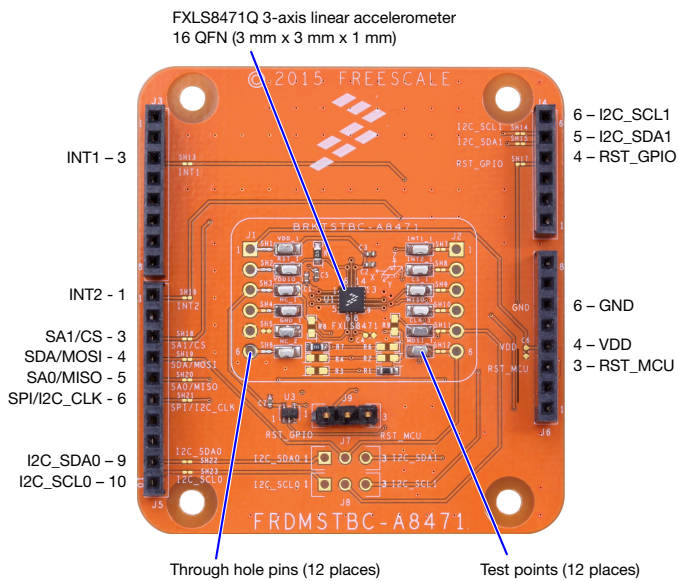

Get to Know the FRDMKL25-A8471



Learn more at [freescale.com/sensortoolbox](http://freescale.com/sensortoolbox)