## **General Description**

The MAX15026C evaluation kit (EV kit) is a fully assembled and tested PCB that contains all the components necessary to evaluate the performance of the MAX15026C 10A synchronous step-down controller.

The EV kit requires a 5V to 16V power supply that provides up to 4A for normal operation. The EV kit output is configured to 1.5V and delivers up to 10A output current. The controller switching frequency is programmed to 600kHz. The EV kit includes PCB pads to enable the circuit and to monitor the power-good output.

## Features

- ♦ 5V to 16V Input Range
- Optional 4.5V to 5.5V Input Range for IC
- ♦ 1.5V at 10A Output
- 600kHz Switching Frequency
- Enable Input
- Power-Good Output
- Fully Assembled and Tested

## **Ordering Information**

| PART            | ТҮРЕ   |
|-----------------|--------|
| MAX15026CEVKIT+ | EV Kit |
|                 | 15.110 |

+Denotes lead(Pb)-free and RoHS compliant.

## **Component List**

| DESIGNATION | QTY | DESCRIPTION  |
|-------------|-----|--|
| C1          | 1   | 330µF ±20%, 25V electrolytic<br>capacitor (10mm x 10.2mm)<br>Panasonic EEEFC1E331P |
| C2          | 1   | 4.7μF ±10%, 25V X5R ceramic<br>capacitor (0805)<br>Murata GRM21BR61E475K           |
| C3          | 1   | 1μF ±10%, 25V X5R ceramic capac-<br>itor (0603)<br>Murata GRM188R61E105K           |
| C4          | 1   | 4.7μF ±10%, 6.3V X5R ceramic<br>capacitor (0603)<br>Murata GRM188R60J475K          |
| C5          | 1   | 2.2µF ±10%, 6.3V X5R ceramic<br>capacitor (0603)<br>Murata GRM188R60J225K          |
| C6          | 1   | 10μF ±10%, 25V X5R ceramic<br>capacitor (1206)<br>Murata GRM31CR61E106K            |
| C7          | 0   | Not installed, ceramic capacitor (1206)  |
| C8          | 1   | 0.47µF ±10%, 16V X7R ceramic<br>capacitor (0603)<br>Murata GRM188R71C474K          |
| C9          | 1   | 2700pF ±5%, 50V C0G ceramic<br>capacitor (0805)<br>Murata GRM2165C1H272JA          |

or visit Maxim's website at www.maxim-ic.com.

| DESIGNATION | QTY | DESCRIPTION  |
|-------------|-----|--|
| C10         | 1   | 470µF ±20%, 6.3V electrolytic<br>capacitor (8mm x 10.5mm)<br>SUNCON 6HVA470M |
| C11, C12    | 2   | 22μF ±10%, 6.3V X5R ceramic<br>capacitors (1206)<br>Murata GRM31CR60J226K    |
| C13         | 1   | 68pF ±5%, 50V C0G ceramic<br>capacitor (0603)<br>Murata GRM1885C1H680J       |
| C14         | 1   | 15pF ±5%, 50V C0G ceramic<br>capacitor (0603)<br>Murata GRM1885CH150J        |
| C15         | 1   | 1500pF ±10%, 50V C0G ceramic<br>capacitor (0603)<br>Murata GRM1885C1H152K    |
| C16         | 1   | 2200pF ±5%, 50V C0G ceramic<br>capacitor (0603)<br>Murata GRM1885C1H222J     |
| C17         | 0   | Not installed, ceramic capacitor (0603)                                      |
| JU1         | 1   | 3-pin header   |
| JU2         | 1   | 2-pin header   |
| L1          | 1   | 1.4µH, 22A inductor<br>Coilcraft MSS1278-142ML                               |
| N1          | 1   | 30V, 74A n-channel MOSFET (8FL SO)<br>ON Semiconductor NTMFS4837NT1G         |

## 

Maxim Integrated Products 1 For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642,

| DESIGNATION            | QTY | DESCRIPTION   |  |
|------------------------|-----|---|--|
| N2                     | 1   | 30V, 104A n-channel MOSFET (8FL SO)<br>ON Semiconductor NTMFS4835NT1G |  |
| PGND (2),<br>VIN, VOUT | 4   | Uninsulated banana jacks  |  |
| R1, R6, R8             | 0   | Not installed, resistors (0603)                                       |  |
| R2                     | 1   | 200k $\Omega$ ±1% resistor (0603)                                     |  |
| R3                     | 1   | $10\Omega \pm 5\%$ resistor (0603)                                    |  |
| R4                     | 1   | 51k $\Omega$ ±5% resistor (0603)                                      |  |
| R5                     | 1   | 2.2Ω ±5% resistor (0603)  |  |
| R7                     | 1   | $1\Omega \pm 1\%$ resistor (1210)                                     |  |
| R9                     | 1   | 11.8k $\Omega$ ±1% resistor (0603)                                    |  |
| R10                    | 1   | 22.6k $\Omega$ ±1% resistor (0603)                                    |  |

| DESIGNATION | QTY | DESCRIPTION   |  |
|-------------|-----|---|--|
| R11         | 1   | 5.9k $\Omega$ ±1% resistor (0603)   |  |
| R12         | 1   | 15.4k $\Omega$ ±1% resistor (0603)  |  |
| R13         | 1   | 10kΩ ±1% resistor (0603)  |  |
| R14         | 1   | $27k\Omega \pm 1\%$ resistor (0603)   |  |
| R15         | 1   | $49.9\Omega \pm 1\%$ resistor (0805)  |  |
| TP1, TP2    | 2   | PC mini red test points   |  |
| U1          | 1   | 10A synchronous step-down controller<br>(14 TDFN-EP*)<br>Maxim MAX15026CETD+<br>(Top Mark: AET) |  |
|             | 2   | Shunts (JU1, JU2)   |  |
|             | 1   | PCB: MAX15026C EVALUATION<br>KIT+   |  |

## **Component List (continued)**

\*EP = Exposed pad.

## **Component Suppliers**

| SUPPLIER                               | PHONE        | WEBSITE                     |
|--|--------------|-----------------------------|
| Coilcraft, Inc.                        | 847-639-6400 | www.coilcraft.com           |
| Murata Electronics North America, Inc. | 770-436-1300 | www.murata-northamerica.com |
| ON Semiconductor                       | 602-244-6600 | www.onsemi.com              |
| Panasonic Corp.                        | 800-344-2112 | www.panasonic.com           |
| SUN Electronic Industries Corp.        | 619-661-8288 | www.sunelec.co.jp           |

Note: Indicate that you are using the MAX15026C when contacting these component suppliers.

## \_Quick Start

### **Required Equipment**

- MAX15026C EV kit
- Adjustable 5V to 16V, 4A DC power supply
- Electronic load capable of sinking 10A (e.g., HP6060B)
- Two voltmeters

### Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify board operation. Caution: Do not turn on the power supply until all connections are completed.

- 1) Install a shunt across pins 1-2 of jumper JU1 (VIN input source for U1).
- 2) Install a shunt at jumper JU2 (VOUT enabled).
- 3) Connect a voltmeter to the VOUT and PGND pads.

- 4) Connect a voltmeter to the PGOOD and AGND pads.
- 5) Connect a 10A electronic load to the VOUT and PGND banana jack connectors.
- 6) Connect a DC power supply to the VIN and PGND banana jack connectors and set the voltage to 12V.
- 7) Enable the power supply.
- 8) Enable the electronic load and set it to 10A.
- 9) Verify that the voltmeters at VOUT and PGOOD are 1.5V and approx 5.2V, respectively.

## \_Detailed Description of Hardware

The MAX15026C EV kit is a fully assembled and tested PCB that contains all the components necessary to evaluate the performance of the MAX15026C 10A synchronous step-down controller. The circuit uses a step-down controller IC to implement a step-down synchronous DC-DC converter circuit. The EV kit is designed to



operate from a single DC power supply that provides 5V to 16V and 4A of current. The IC controller can also be operated using a separate 4.5V to 5.5V power source applied at the VCC and AGND PCB pads. When operating the EV kit using separate power-supply sources at the VIN connector and VCC PCB pad, apply power at the VIN and PGND connectors first and then the VCC and AGND PCB pads.

The EV kit converter is configured to 1.5V and provides up to 10A output current. The switching frequency is set to 600kHz using resistor R14. The EV kit features PCB pads to evaluate the enable input signal (EN) and to monitor the power-good (PGOOD) and VCC output signals.

### **Converter Input Source**

Banana jack connectors VIN and PGND are used as the power source for the converter. The EV kit converter output performance is optimized over the 5V to 16V VIN input voltage range and up to 10A output current. The EV kit can operate above the 16V maximum input voltage range and at higher output currents; however, performance may be degraded due to the limitation of the components used in the circuit.

### MAX15026C IC Bias Input (JU1)

The EV kit features an option to select the bias input for the IC controller when configuring the EV kit to operate with an input source less than 6V. Jumper JU1 selects the input-voltage source for the IC controller. Place a shunt across pins 1-2 to power the IC using the power source applied at the VIN and PGND banana jack connectors. Place a shunt across pins 2-3 to power the IC input using the power source applied at the VCC and AGND PCB pads. Note that the power source applied to the VCC PCB pad has a 4.5V to 5.5V input voltage range. When operating the EV kit using separate power-supply sources at the VIN connector and VCC PCB pad, apply power at the VIN and PGND connectors first and then the VCC and AGND PCB pads.

# Table 1. MAX15026C Bias InputConfiguration (JU1)

| SHUNT<br>POSITION | IN PIN           | INPUT RANGE (V) |
|-------------------|------------------|-----------------|
| 1-2               | Connected to VIN | 5 to 16         |
| 2-3               | Connected to VCC | 4.5 to 5.5      |

### **Configuring the Output Voltage (VOUT)**

The VOUT voltage can be reconfigured from 0.6V to 0.85 x VIN. To configure the EV kit's output voltage, refer to the *Setting the Output Voltage* section in the MAX15026 IC data sheet for instructions on selecting new resistor values.

Capacitors C13–C16 and resistors R10 and R11 provide a compensation network for VOUT on the EV kit.

Refer to the *Inductor Selection, Input Capacitor,* and *Compensation* sections in the MAX15026 IC data sheet to verify if other components need replacement for proper operation after reconfiguring the output voltage.

### **Current-Limit Thresholds**

The IC employs a current-sensing algorithm using the onresistance of the low-side MOSFET as a current-sensing element to limit the inductor current. The inductor current is sensed in the converter by sensing the voltage drop across the on-resistance R<sub>DSON</sub> of the low-side MOSFET (N2). The EV kit's valley and sink current limits are set to approximattely 16.5A and 8A, respectively.

Resistor R9 sets VOUT valley current-limit voltage thresholds (V<sub>ITH</sub>) to 59mV. The sink current-limit voltage threshold is approximately half the valley current-limit voltage threshold. Use the following equation to reconfigure the valley current-limit voltage threshold:

$$\mathsf{R}_{\mathsf{LIM}}(\Omega) = \frac{\mathsf{V}_{\mathsf{ITH}} \times 10}{50 \times 10^{-6}}$$

where  $V_{\text{ITH}}$  is the valley current-limit voltage threshold in volts and  $R_{\text{LIM}}$  is R9 in ohms.

Refer to the *Current-Limit Circuit (LIM)* and Setting the Valley Current Limit sections in the MAX15026 IC data sheet for further instructions on computing the EV kit valley and sink current limits.

A PCB pad for resistor R8 is provided to implement foldback current-limit capabilities, if required.

#### **Switching Frequency**

The IC controller switching frequency is set to 600kHz by resistor R14. Replace resistor R14 with a new resistor value to program the switching frequency between 200kHz and 2MHz. Use the following equation to calculate R14 when reconfiguring the switching frequency:

$$R14 = \frac{17.3 \times 10^9}{f_{SW} + (1 \times 10^{-7}) \times (f_{SW}^2)}$$

where fsw is in hertz and R14 is in ohms.

When reconfiguring the EV kit controller switching frequency, it may be necessary to change the compensation network component to new values. Refer to the *Compensation* section in the MAX15026 IC data sheet for computing new compensation component values.

### **Power-Good Output (PGOOD)**

The EV kit provides a PCB pad to monitor the status of the power-good output. PGOOD is high when VOUT rises 94.5% (typ) above its programmed output voltage. When VOUT falls below 92% (typ) of its nominal regulated voltage, PGOOD is pulled low.

### **Enable Control (JU2)**

Jumper JU2 configures the EV kit's output for turn-on/ turn-off control. Install a shunt across jumper JU2 to enable VOUT. VOUT is disabled or can also be externally controlled by placing an independent voltage source at the EN and AGND PCB pads when a shunt is not installed on jumper JU2. An additional PCB resistor pad (R1) is included to set the output to a desired turn-on voltage.

### Table 2. Enable Control (JU2)

| SHUNT<br>POSITION | EN PIN                            | VOUT OUTPUT  |
|-------------------|-----------------------------------|--|
| Installed         | Connected to VCC                  | Enabled  |
| Not installed     | Pulled down to<br>AGND through R2 | Disabled or voltage<br>source applied at EN<br>PCB pad |

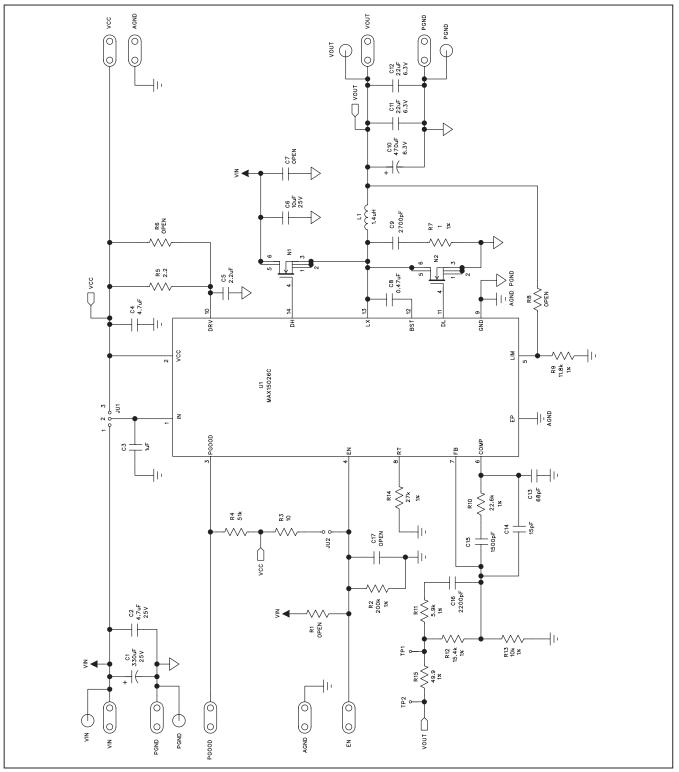


Figure 1. MAX15026C EV Kit Schematic

**Evaluates: MAX15026C** 

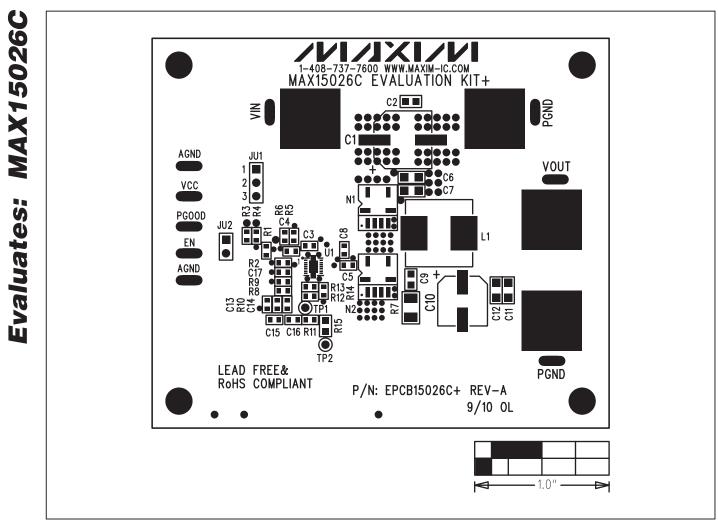


Figure 2. MAX15026C EV Kit Component Placement Guide—Component Side

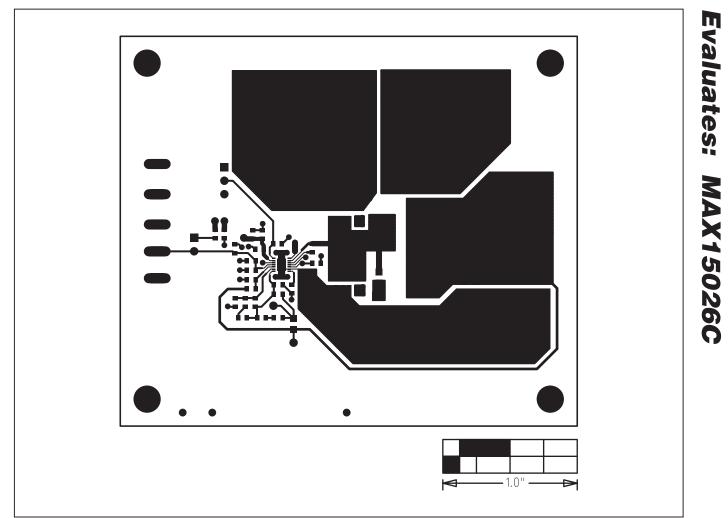


Figure 3. MAX15026C EV Kit PCB Layout—Component Side

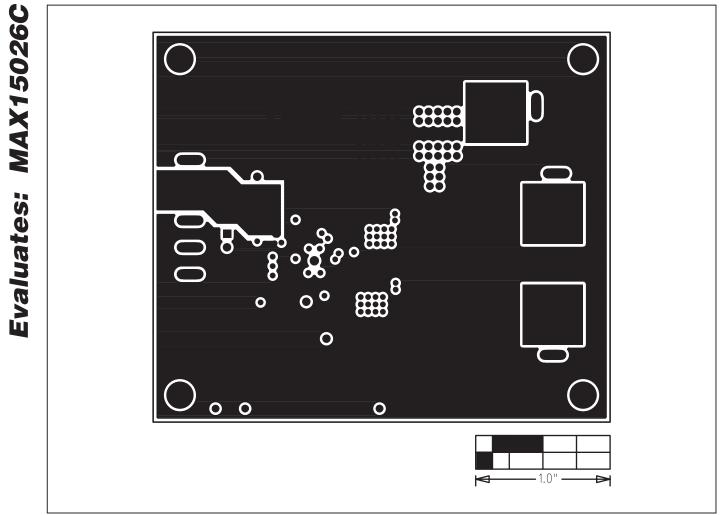


Figure 4. MAX15026C EV Kit PCB Layout—Power Layer 2

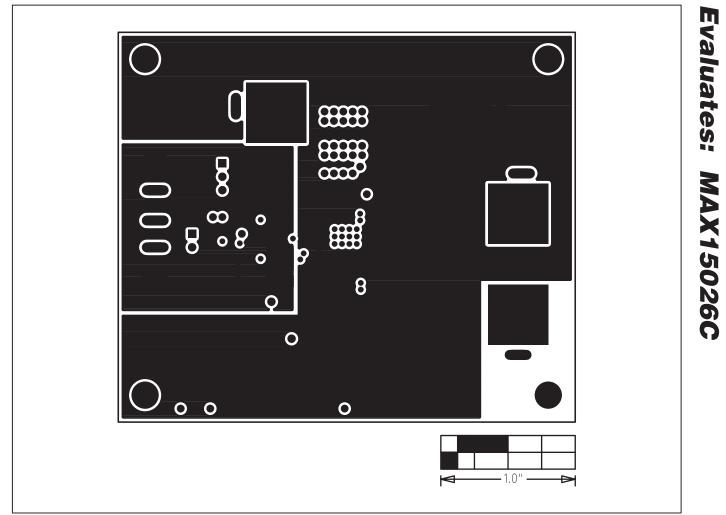


Figure 5. MAX15026C EV Kit PCB Layout—GND Layer 3

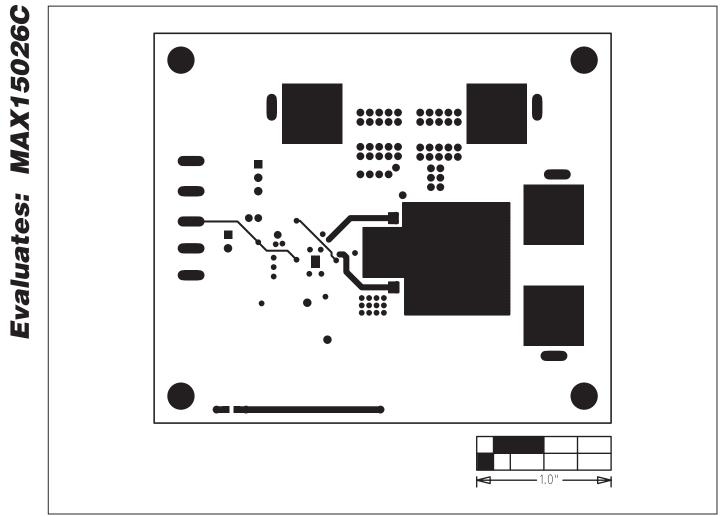


Figure 6. MAX15026C EV Kit PCB Layout—Solder Side

10