

P.SLC... Series Sealed Lens Enclosure



Datasheet

Waterproof Lens Enclosure for use with Sealed PresencePLUS Sensors



- Rugged, waterproof housing, rated IEC IP68
- Available with 316 stainless steel or nickel-plated aluminum housing and a choice of either acrylic or tempered optical glass windows
- Mounts directly to PresencePLUS® Sealed Pro and Sealed P4 models (when ring light is not used)

(Lens enclosure shown mounted to camera)

Model	Window	For use with	Length	Housing
PPSLC50-G	Glass	PPROCAMS	50 mm (1.96 inch)	Nickel-plated aluminum
PPSLC50-P	Acrylic			
PPSLC75-G	Glass	PPROCAMS and P4.RS	75 mm (2.95 inch)	
PPSLC75-P	Acrylic			
PPSSLC50-G	Glass	PPROCAMSS	50 mm (1.96 inch)	316 Stainless steel
PPSSLC50-P	Acrylic			
P4SLC50-G	Glass	P4.RS	50 mm (1.96 inch)	Nickel-plated aluminum
P4SLC50-P	Acrylic			

Specifications

Construction

Housing: Nickel-plated aluminum or 100% 316 stainless steel depending on model
Window: Acrylic or tempered optical glass, depending on model

Environmental Rating

Nickel models: IEC IP68 when installed on Sealed PresencePLUS Sensors
Stainless steel models: NEMA 4X; IEC IP68

Outside Dimensions

PPSLC50-: 49.3 mm diameter by 48.9 mm long overall (1.94 inches diameter by 1.93 inches long)
PPSLC75-: 49.3 mm diameter by 75 mm long overall (1.94 inches diameter by 2.95 inches long)

Installing the Lens Enclosure



NOTE: Before installing this product, Banner Engineering Corp. recommends installing a light filter behind the lens. The filter improves image quality by reducing unwanted ambient light.

1. Install and focus the lens.
2. Thread the lens enclosure onto the lens until the enclosure is seated against the sensor.



Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.

Copyright Notice

Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change. Banner reserves the right to modify product specifications or update documentation at any time. For the most recent version of any documentation, refer to: www.bannerengineering.com. © Banner Engineering Corp. All rights reserved.