




Part number	Interface
R191 368 020	1.0/2.3 Male - SMA Female

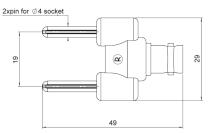


Part number	Interface
R191 455 000	2B4 Male - BNC Female

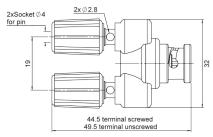


Part number	Interface
R191 453 000	2B4 Female - BNC Male

 


Part number	Interface
R191 454 000	2B4 Female - BNC Male

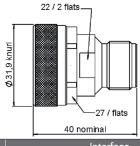


Part number	Interface
R191 907 000	7/16 Male - HN Female

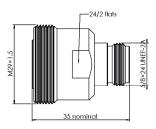

\	Part number	Interface
\	R191 723 NNN	7/16 Female - N Female

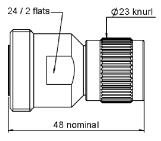


Part number	Interface
R191 908 000	7/16 Female - HN Male

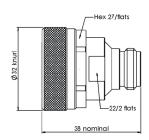


Part number	Interface
R191 722 000	7/16 Male - N Female




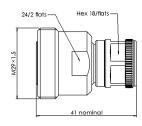



Part number	Interface
R191 720 000	7/16 Female - N Male

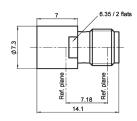


Part number	Interface
R191 353 711	BMA Female - SMA Female

 

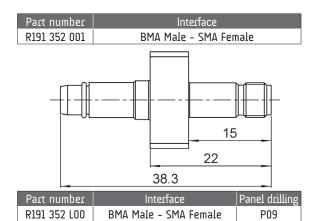


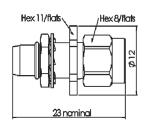


Part number	Interface	Panel drilling
R191 354 001	BMA Male – SMA Male	P03

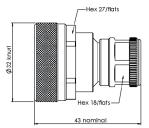


Part number	Interface
R191 721 000	7/16 Male - N Male

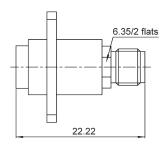


Part number	Interface	Panel drilling
R191 353 701	BMA Female - SMA Female	P12

 

Part number	Interface	Panel drilling
R191 355 001	BMA Male - SMA Female	P03

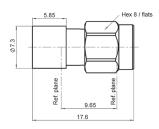


Part number	Interface
R191 351 701	BMΔ Female - SMΔ Male

 



Part number	Interface
R191 350 001	BMA Male - SMA Male



 


Part number	Interface	Panel drilling
R191 811 100	BMA Male - SMP Female	P13

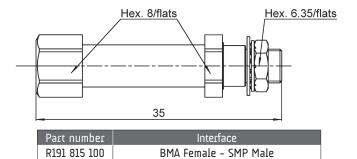

 


Part number	Interface
R191 449 000	BNC Female - HN Male

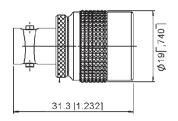


Part number	Interface
R191 429 000	BNC Female - C Male




Part number	Interface	Panel drilling
R191 477 120	BNC Female - MCX Female	P10

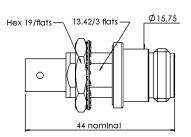


Part number	Interface	Panel drilling
R191 422 NNN	BNC Female - N Female	P11

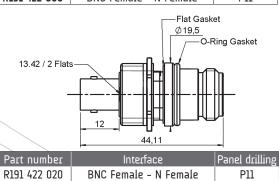

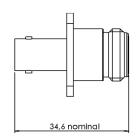


Part number	Interface	Panel drilling
R191 424 000	BNC Female - N Female	P01

 


Part number	Interface
R191 419 000	BNC Male - N Female




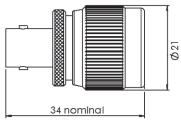


ı	Part number	Interface
ĺ	R191 421 000	BNC Female - N Male

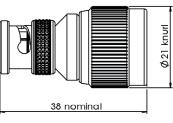


Part number	Interface
R191 417 000	BNC Male - N Male

 


Part number	Interface
R191 305 000	BNC Male - SMA Female

 


Part number	Interface
R191 303 000	BNC Female - SMA Male

 


	<del></del>
Part number	Interface
R191 301 000	BNC Male - SMA Male
	Ø11 diamond knurl 6,9
	17,7 9,3
Part number	Interface
R191 215 000	BNC Female - SMB Female

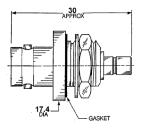

Part number	Interface	Panel drilling
5512-7501-000	BNC Female - SMB Male	P17

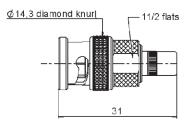


Part number		Interface
	R191 214 000	BNC Male - SMB Female

 


Part number	Interface	Panel drilling
R191 212 500	BNC Female - SMB Male	P14






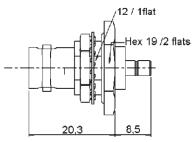


Part number	Interface	Panel drilling
R191 213 000	BNC Female - SMB Male	P04

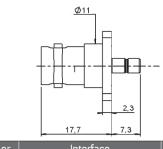


Part number	Interface	Panel drilling
R191 212 000	BNC Female - SMB Male	P02

 


Part number	Interface
R191 209 000	BNC Male - SMB Male

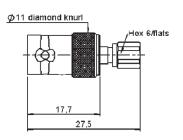


Part number	Interface
R191 123 000	BNC Female - SMC Female

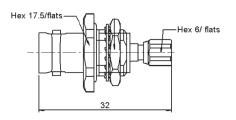


Part number	Interface	Panel drilling
R191 124 000	BNC Female - SMC Female	P06

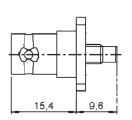


Part numb	oer	Interface	Panel drilling
R191 120 0	00   BNC	Female - SMC Mal	e P02

 

Part number	Interface
R191 117 000	BNC Male - SMC Male

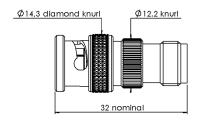


\		
\	Part number	Interface
\	R191 403 000	BNC Male - TNC Female

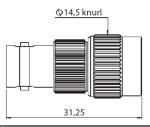


Part number	Interface
R191 405 000	BNC Female - TNC Male




 


Part number	Interface
R191 445 000	BNC Male - UHF Female

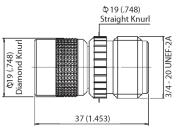


Part number	Interface
R191 933 000	C Male - HN Female

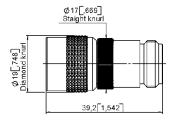


Part number	Interface
R191 705 000	C Male - N Female

 


Part number	Interface
R191 737 000	HN Male - N Female

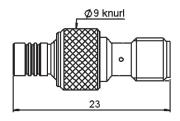


Part number	Interface
R191 388 000	MCX Female - SMA Female

 


Part number	Interface
R191 447 000	BNC Female - UHF Male

 


Part number	Interface	Panel drilling
R191 708 000	C Female - N Female	P01

 

Part number	Interface
R191 703 000	C Female - N Male

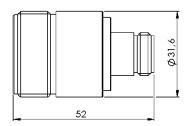


Part number	Interface	
R191 741 NNN	IC Female - N Female	

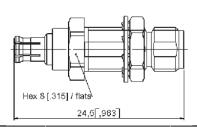


Part number	Interface	Panel drilling
R191 387 107	MCX Male - SMA Female	P07






 


Part number	Interface
R191 387 000	MCX Male - SMA Female

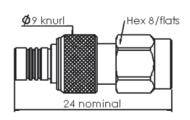


Part number	Interface	
R191 386 000	MCX Female - SMA Male	

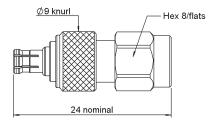


Part number	Interface
R191 385 000	MCX Male - SMA Male

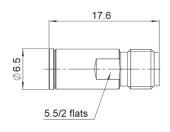


Part number	Interface	
R191 389 400	MMBX Female - SMA Female	

 


Part number	Interface	
R191 389 200	MMBX Male - SMA Female	

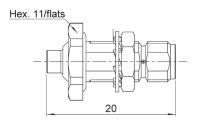


Part number	Interface	Panel drilling
R191 399 100	MMCX Female - SMA Female	P07

 

Part number	Interface	
R191 398 020	MMCX Male - SMA Female	

 


Part number	Interface
R191 389 300	MMCX Female - SMA Male

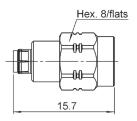


Part number	Interface
R191 389 100	MMCX Male - SMA Male



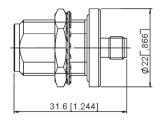


Waterproof


Part number	Interface	Panel drilling
R191 334 000	N Female - SMA Female	P05

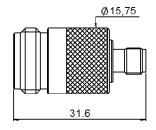


Part number	Interface	
R191 331 000	N Female - SMA Female	

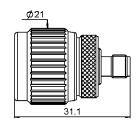


Part number Interface	
R191 329 000	N Male - SMA Female

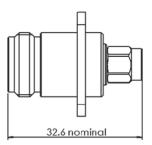


Part number	Interface	Panel drilling
R191 377 000	N Female - SMA Male	P01

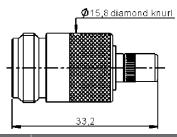


Part number	Interface
R191 239 000	N Female - SMB Female

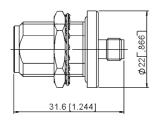


Part number	Interface	Panel drilling
R191 332 000	N Female - SMA Female	P05

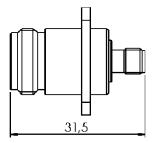

Part number	Interface	Panel drilling
R191 381 000	N Female - SMA Female	P01

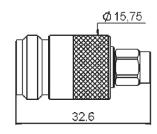

Part number	Interface
R191 327 000	N Female - SMA Male

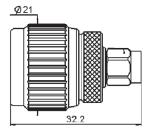

Part number	Interface
R191 325 000	N Male - SMA Male
8,51	31


Part number	Interface	Panel drilling
R191 236 000	N Female - SMB Male	P01

18-23


To download data sheets and assembly instructions, visit **www.radiall.com** & enter the part number in the Search box. **Bold** part numbers represent products typically in stock & available for immediate shipment.

See page 8 and 9 for packaging information.




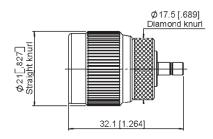


Part number	Interface
R191 233 000	N Male - SMB Male

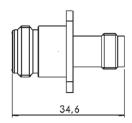


Part number	Interface	Panel drilling
R191 514 000	N Female - TNC Female	P01

 


Part number	Interface
R191 513 000	N Male - TNC Female

 


Part number	Interface
R191 513 050	N Male - TNC Female

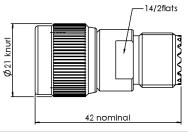


Part number	Interface
R191 731 000	N Male - UHF Female

 


R191 511 000 N Female - TNC Male	

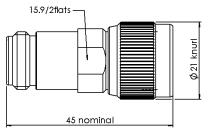

Part number	Interface
R191 733 000	N Female - UHF Male

 


\		
\	Part number	Interface
\	R191 203 007	SMA Female - SMB Female

 


Part number	Interface
R191 201 007	SMA Female - SMB Male




 


Part number	Interface
R191 200 007	SMA Male - SMB Male

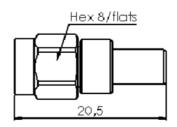


Part number	Interface
R191 374 000	SMA Male - SMC Female

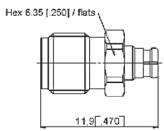

Part number	Interface
R191 844 002	SMA Female - SMP Female

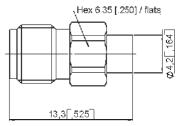


Part number	Interface
R191 843 001	SMA Female - SMP Male

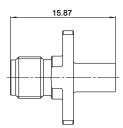


SMP full detent


Part number	Interface	Panel drilling
R191 843 401	SMA Female - SMP Male	P15

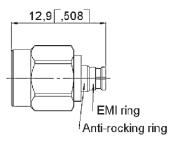

Part number	Interface
R191 842 002	SMA Male - SMP Female

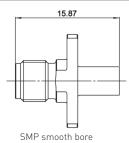

Part number	Interface	Panel drilling
R191 843 421	SMA Female - SMP Male	P15

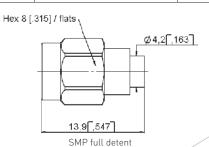

Part number	Interface	
R191 841 001	SMA Male - SMP Male	

18-25

To download data sheets and assembly instructions, visit **www.radiall.com** & enter the part number in the Search box. **Bold** part numbers represent products typically in stock & available for immediate shipment.

See page 8 and 9 for packaging information.

