

DATASHEET

Lama

SRFI065 · flexiiANT®



Features

- Antenna for ISM and LoRa® bands (863 870MHz and 902 928MHz)
- 1.13mm diameter RF cable with I-PEX MHF connector
- Self-adhesive mounted
- Quick integration minimizes design cycle
- · High efficiency within a small area
- 100mm cable (other lengths available)
- Maintains high performance within device: DFI (Designed For Integration)

Contents

1. Description	2
2. Applications	2
3. General data	2
4. Part number	3
5. RF characteristics	3
6. RF performance	4
6.1. Return loss	4
6.2. VSWR	4
6.3. Efficiency	5
6.4. Antenna pattern	6
7. Antenna dimensions	8
7.1. Dimensions FPC section	8
7.2. Dimensions assembled	8
7.3. I-PEX connector MHF1 (20278-112R-13)	9
7.4. Assembly	9
8. Electrical interface	10
8.1. Host interface	10
8.2. Transmission line	10
9. Mechanical fixing	10
10. Antenna integration guide	11
10.1. Antenna placement	11
10.2. Orientation of FPC	12
11. Hazardous material regulation conformance	13
12. Packaging	13
12.1. Optimal storage conditions	14
12 2 Label information	1./

1. Description

Lama is a flexible PCB antenna with a cable that connects to the host PCB giving easy integration. The antenna covers both ISM bands (863 - 870 MHz and 902 - 928 MHz). Dimensions of Lama are 35*10*0.15 mm.

2. Applications

- LoRa® wireless nodes
- LoRa® Gateway/Routers
- Smart meters
- Home automation
- Monitoring equipment
- Smart Grids
- Remote sensors

3. General data

FREQUENCY	863-870MHz 902-928MHz	
POLARIZATION	Linear	
OPERATING TEMPERATURE	-40°C to +85°C	
ENVIRONMENTAL CONDITION TEST	ISO16750-4 5.1.1./5.1.2	
IMPEDANCE	50 Ω	
WEIGHT	<0.5g	
ANTENNA TYPE	FPC Self-adhesive 3M 468MP	
DIMENSIONS(ANTENNA)	35.0 x 10.0 x 0.15 (mm)	
CONNECTION	I-PEX MHF1 (20278-112R-13)	

4. Part number

LAMA SRFI065




5. RF characteristics

	863-870MHZ	902-928MHZ
PEAK GAIN	0.82dBi	1.33dBi
AVERAGE GAIN (LINEAR)	-2.84dBi	-2.78dBi
AVERAGE EFFICIENCY	52%	52%
MAXIMUM RETURN LOSS	-15dB	-15dB
MAXIMUM VSWR	1.5:1	1.5:1


All data measured on SRFI065-100 in a loaded condition adhered to a plastic carrier in free space.

6. RF performance

6.1. Return loss

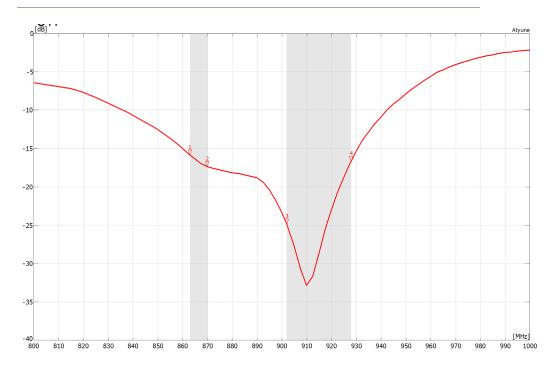


6.2. VSWR

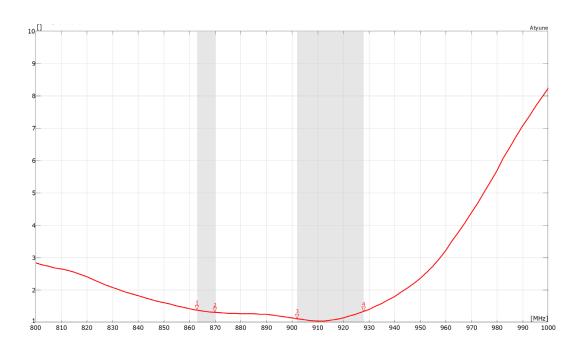

All data measured on SRFI065-100 in a loaded condition adhered to a plastic carrier in free space.

6.3. Efficiency

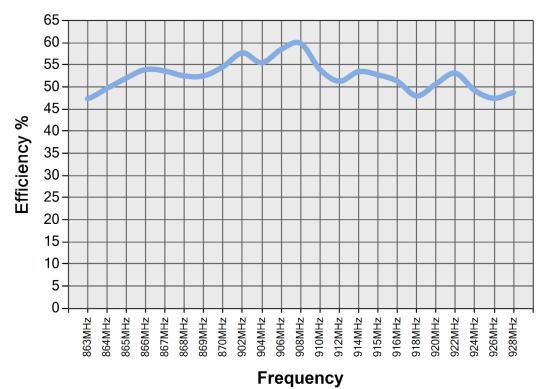



All data measured on SRFI065-100 in a loaded condition adhered to a plastic carrier in free space.


6.4. Antenna pattern


6.4.1. 863 MHz - 870 MHz


3D pattern at 868MHz

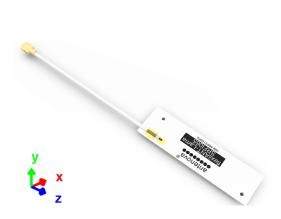

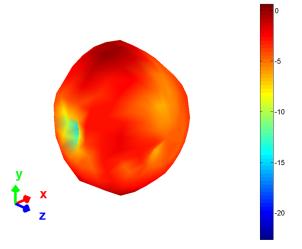

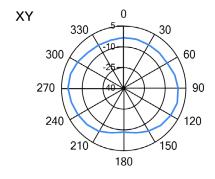


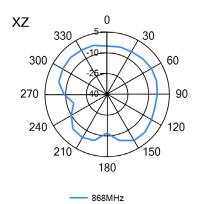


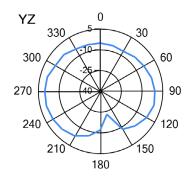



6.4.1. 902 MHz - 928 MHz


3D pattern at 915MHz

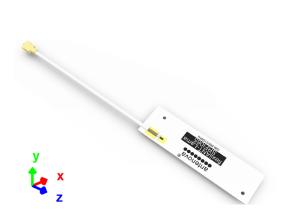

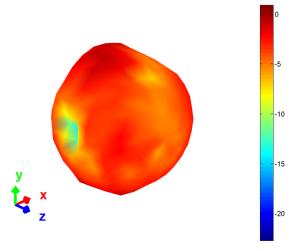

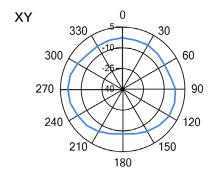


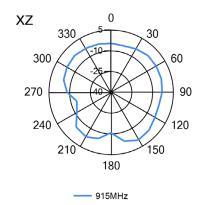

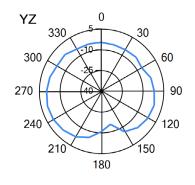

7. Antenna dimensions

7.1. Dimensions FPC section

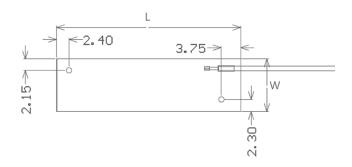

L	W	Т
Length	Width	Thickness
35.0 ±0.1	10.0 ±0.1	0.15 (nominal)

All dimensions in (mm)

7.2. Dimensions assembled




SRFI065-100 Length 127.0 ±2.0


All dimensions in (mm)

Standard cable length for this antenna is 100mm

7.3. I-PEX connector MHF1 (20278-112R-13)

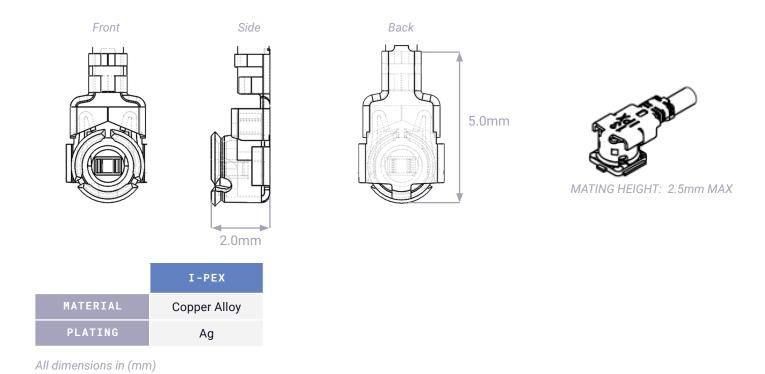

7.4. Assembly

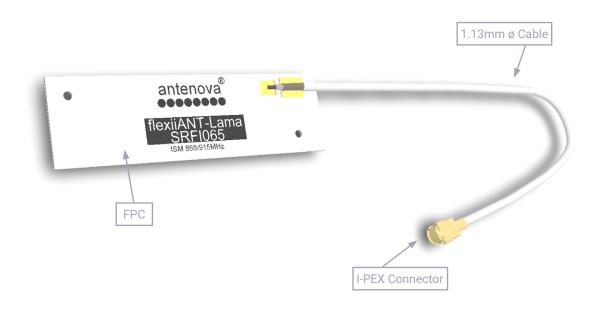

8. Electrical interface

8.1. Host interface


The host PCB requires the mating connector which is the I-PEX MHF (UFL) receptacle. The location should be close to the chip/modules pin for the RF. Any feed from this receptacle should be maintained at 50Ω impedance

8.2. Transmission line

- Must have a characteristic impedance of 50Ω.
- Length should be kept to a minimum.
- Is recommended to be a co-planar waveguide: log on to <u>Antenova.com</u> and try our <u>Transmission line calculator</u> to easily calculate the dimensions most suited to your requirements.
- Should have DC blocking capacitor (e.g. 220pF) placed in line to protect the RF front end.

Mechanical fixing

The antenna uses 3M 468MP adhesive on the reverse side of the FPC. The antenna has an easy access split line to peel off to reveal the adhesive side. It is designed for a one time fix to a clean smooth surface. The antenna is keyed with two 1mm locating holes for easy positioning.

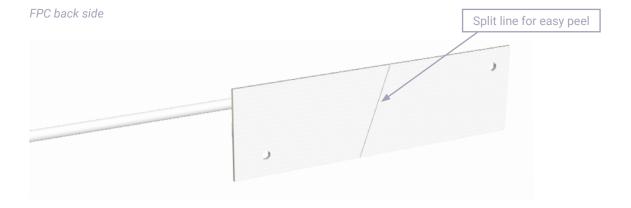

10. Antenna integration guide

We recommend the following during the design phase to maximise antenna performance and minimize noise:

- Minimum 4 layer PCB
- Route signals and power internally where possible
- · Flood all layers with ground
- · Knit ground on all layers together with plenty of vias


Follow placement guidance carefully, in addition Antenova provide technical support to help you through all stages of your design. Register for an account on https://ask.antenova.com/ to access technical support.

10.1. Antenna placement

For FPC antennas the host PCB size is not critical to performance, however consideration must be given to placement. Using six spatial directions, as shown below, the antenna should ideally maintain a minimum of three directions free from obstruction in order to radiate effectively. Where there are obstructions (e.g. PCB, metal parts, battery etc.) a minimum clearance should still be maintained. These minimum clearances are described later in this section.

Six spatial directions relative to FPC

Example with 5 spatial directions clear

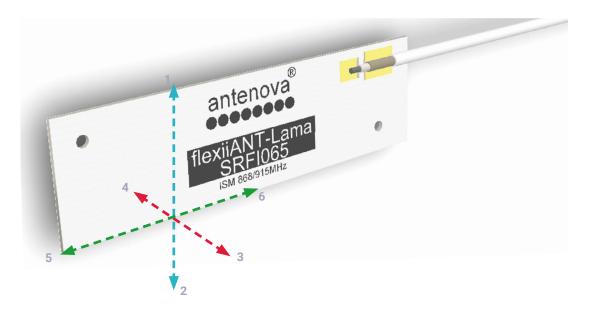


10.2. Orientation of FPC


The orientation of the FPC with respect to the host PCB should be defined depending on the unit. The proximity of the GND will have an influence on the antenna so the PCB location relative to the antenna should be considered.

The FPC will normally be placed in one of the three following options for orientation. In each option a distance (d) is the critical dimension to consider. The diagram below shows the minimum value of (d) for each. Other obstructions may increase this dimension.

Vertical mounted

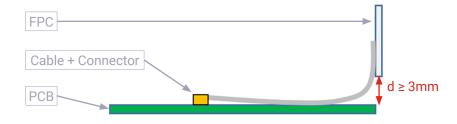

Co-planar to PCB

 

Planar to PCB (Same plane)



11. Hazardous material regulation conformance

The antenna has been tested to conform to RoHS and REACH requirements. A certificate of conformance is available from Antenova's website.

12. Packaging

The antennas are stored within a plastic bag of 100 pcs.

100 units per bag (Labelled)



12.1. Optimal storage conditions

TEMPERATURE	-10°C to 40°C	
HUMIDITY	Less than 75% RH	
SHELF LIFE	18 Months	
STORAGE PLACE	Away from corrosive gas and direct sunlight	
PACKAGING Antennas should be stored in unopened seale manufacturer's plastic packaging.		

Note: The shelf life of the antenna is 18 months, provided the bag of 100 pieces remains factory- sealed.

12.2. Label information



Quality statements

Antenova's products conform to REACH and RoHS legislation. For our statements regarding these and other quality standards, please see antenova.com.











Antenova reserves all rights to the contents of this document. Antenova gives no warranties based solely on the accuracy or completeness of the contents of this document and reserves the right to make changes to the specifications of the products described herein at any time and without notice.

Datasheet version

1.01 released Apr 22th 2022