

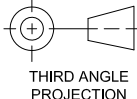

NOTES:

1. OPERATION

1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
2. SWING COVER OFF OF CONTACTS.
3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH0-8J

			METRIC  THIRD ANGLE PROJECTION		DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS OTHERWISE SPECIFIED 1 PL +/- REF. 2 PL +/- REF. ANGLE +/-		 JKL COMPONENTS CORPORATION			
			DRAWN BY L. WENGSTROM		APPV'D BY L.R.		DATE 3/5/13		TITLE NO SOLDER 8mm FLEX TO FLEX TAPE CONNECTOR	
RELEASE & CANCEL PL-1301-04			3/5/13		- CAD DRAWING - MANUAL REVISIONS NOT PERMITTED		SIZE A		FSCM NO. 55335	
REV. NO.			DESCRIPTION/ECO NUMBER		APPV'D DATE		SCALE NONE		DRAWING NO. ZFS-CH0-8J	
							RELEASED DATE 3/5/13		REVISION DATE	
									REV. NO. SHEET 1 OF 1	