



## GSM/GPRS MODEM

### Features:

- Dual Band 900 / 1800 MHz for UK use
- Fax, SMS, Data and internet
- Integral SIM card holder
- Wavecom GSM Engine
- Rugged Extruded Aluminium Enclosure
- Compact form factor 76 x 54 x 25mm
- RS232 Interface with SMA antenna connection
- LED indication of operation
- Supply voltage 6-36Vdc
- 3V SIM card



### Kit Includes:

- GSM Modem
- Antenna
- Power Supply
- RS232 Lead

### Description:

The GSM-Q2403 Modem is ideal for a wide range of applications. The modem can be used to make circuit switched data calls (CSD), making the unit suitable for remote dial-up systems where a fixed phone line is not available. THE SMS functionality enables the sending and receipt of text messages. A common use for the functionality is an SMS server for the automated sending and receipt of bulk test messages.

The modem implements the Wavecom 2403 GSM engine. This ensures high quality and reliable operation along with compatibility with all standard GSM Networks.

The modem is supplied in a rugged extruded aluminium enclosure making it suitable for use in a wide range of industrial and demanding environments. The unit connects directly to a PC or terminal device via the DB-9 RS232 Cable interface. The integral SIM card holder accepts standard SIM cards. The only other connections required are to dc power supply and antenna.

Part Number	Description
GSM-Q22403	GSM/GPRS Modem
SIMCARD	Please see website for various PAYG / Contract

## Key Features:

Features	Implementation
Transmission	Data, SMS, Fax
Power supply	Single supply voltage 6V—36Vdc
Current Consumption	Standby ~55mA Working Current 100-140mA
GSM class	Small MS. (GSM07.07 and 07.05)
GPRS	Class 8
Frequency bands	900, 1800
Transmit power	Class 4 (2W) for 900MHz Class 1 (1W) for 1900MHz
Supported SIM card	3V
External antenna	Connected via antenna SMA connector
Max Transmitting Speed	115KB/s
FAX	Group 3: Class 1, Class 2
Serial interface	<ul style="list-style-type: none"> <li>• RS-232 interface, for AT commands and data</li> <li>• Baud rates from 300bps to 115,200bps</li> </ul>
Reset of Terminal	Reset via AT command
Environmental Temperature:	<ul style="list-style-type: none"> <li>• Working operation: -20°C to +55°C</li> <li>• Humidity: max. 80% relative humidity</li> </ul>
Size	76mmx54mmx25mm (Casing Dimension)
Weight	100g (Approx.)

## What's in the box?

- GSM Modem unit
- Antenna
- RS232 Cable
- Power Supply



## Interface Description:

The GSM Terminal provides the following connectors for power supply, interfacing and antenna:

- 2.1mm DC power connector (centre/inner pin is positive)
- 9-(female) D-SUB plug for RS-232 serial interface
- SMA connector for antenna (radio interface)
- SIM card holder



## Power Supply:

The power supply of the GSM terminal should be a single voltage source of  $V_{in}=6-32V$  providing peak current of up to 500mA during transmission.

The terminal can be turned on by connecting power. The terminal power supply circuit automatically generates a low pulse signal not less than 100ms in order to wake up the GSM engine.

Each time the terminal is shut down, data will be written from the volatile memory to the flash memory. The guaranteed maximum number of write cycles is limited to 100,000.

## RS232 Interface

Via RS-232 interface, the host controller controls the TMAS GSM/GPRS terminal and transports data. The table below shows the pin assignment of RS-232 (D-SUB 9-pin female).

Pin no.	Signal name	I/O	Function
1	/DCD	O	Data Carrier Detected
2	/RXD	O	Receive Data
3	/TXD	I	Transmit Data
4	/DTR	I	Data Terminal Ready
5	GND	-	Ground
6	/DSR	O	Data Set Ready
7	/RTS	I	Request To Send
8	/CTS	O	Clear To Send
9	/RI	O	Ring Indication

The GSM/GPRS terminal is designed for use as DCE. Based on the conventions for DCE-DTE connection, it communicates with the user application (DTE) using the following signals:

Pin TxD @ application sends data to TxD of GSM/GPRS terminal


Pin RxD @ application receives data from RxD of GSM/GPRS terminal

## Basic Setup Information


### *Modern functionality Test*

On the first time power-up you can use a terminal communications program to communicate with the modem through the RS-232 serial port. Following example is using the HyperTerminal in Windows XP.


*Select HyperTerminal from the start menu*

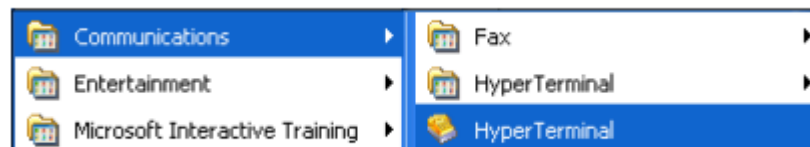


*Start the HyperTerminal program and assign any name for a new session.*

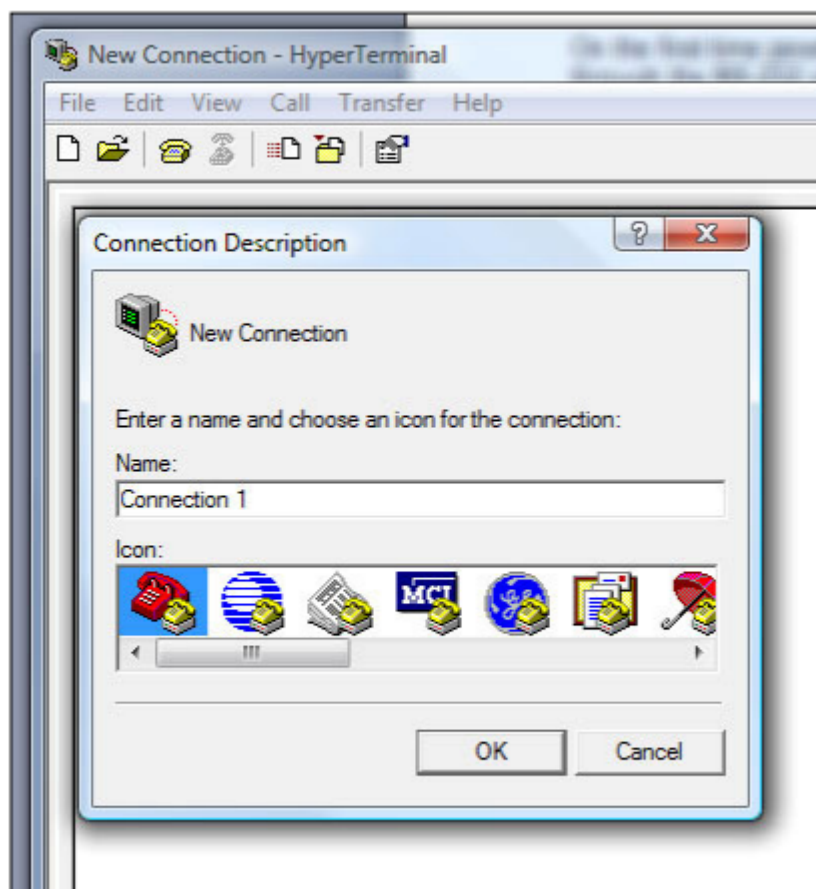

Choose the Com port connected to the modem. The unit features auto bauding so any baud rate from 1.2 to 115.2 Kbps can be used, 8 bit, no parity bit, 1 stop bit)

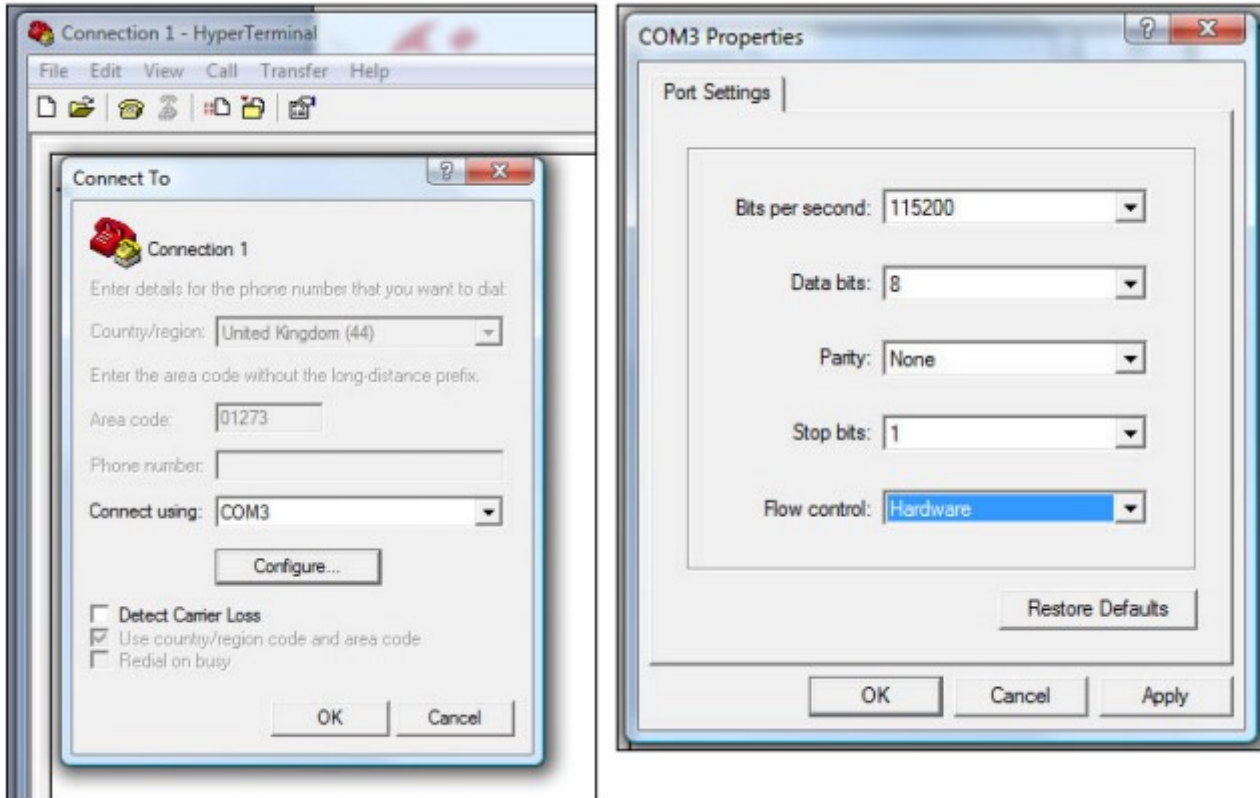

On the terminal screen, type "AT" to check the "OK" response from the modem

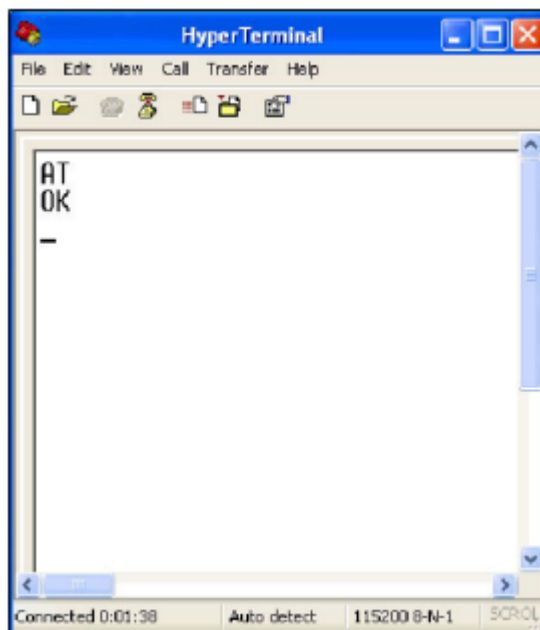

## Status LED

The LED displays the operating status of the terminal. The table below summarises the coding of the red LED status.

Operating status	LED
Power Down	Off
Standby (Registered to the net)	On
Talk mode, GPRS data	Blinking

## Basic AT Command List:

The commands are listed in the document Q2403 AT.pdf.