
## Monitoring Relays True RMS 3-Phase, 3-Phase+N, Multifunction Types DPC01, PPC01

### **CARLO GAVAZZI**

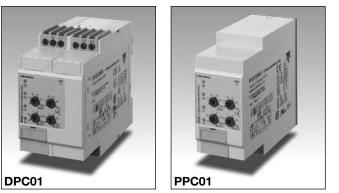

- TRMS 3-phase over and under voltage, phase sequence, phase loss, asymmetry and tolerance monitoring relay
- Detect when all 3 phases are present and have the correct sequence
- Detect if all the 3-phase-phase or phase-neutral voltages are within the set limits
- Detect if asymmetry and tolerance are within the set value
- Separately adjustable setpoints
- Separately adjustable delay functions (0.1 to 30 s)
- Output: 2 x 8 A relay SPDT NE
- For mounting on DIN-rail in accordance with DIN/EN 50 022 (DPC01) or plug-in module (PPC01)
- 45 mm Euronorm housing (DPC01) or 36 mm plug-in module (PPC01)
- LED indication for relays, alarm and power supply ON

### **Product Description**

3-phase or 3-phase+neutral line voltage monitoring relay for phase sequence, phase loss, asymmetry, tolerance, over and under voltage (separately adjustable set points) with built-in time delay function.

Supply ranges from 100 to 690 VAC covered by three multivoltage relays.

Ordering key	DPC 01 D M48
Housing	
Function —	
Туре	
Item number	
Output	
Power Supply —	

### **Type Selection**

Mounting	g Output	Frequency	Supply: 100 to 115 VAC	Supply: 208 to 240 VAC	Supply: 380 to 415 VAC
DIN-rail DIN-rail Plug-in	2 x SPDT 2 x SPDT 2 x SPDT 2 x SPDT	50 - 60 Hz 50 - 400 Hz 50 - 60 Hz	DPC 01 D M11 400HZ	DPC 01 D M23 DPC 01 D M23 400HZ PPC 01 D M23	DPC 01 D M48 400HZ PPC 01 D M48
Mounting	0 Output	Frequency	Supply: 440 to 480 VAC	Supply: 380 to 480 VAC	Supply: 600 to 690 VAC
DIN-rail DIN-rail	2 x SPDT 2 x SPDT	50 - 60 Hz 50 - 400 Hz	DPC 01 D M49 400HZ	DPC 01 D M48	DPC 01 D M69 DPC 01 D M69 400HZ

### **Input Specifications**

<b>Input</b> L1, L2, L3, N	DPC01: PPC01:	Terminals L1, L2, L3, N Terminals 5, 6, 7, 11 Measure their own supply	<b>Ranges</b> Upper level Lower level	+2 to +22% of the nominal voltage -22 to -2%
<b>Note:</b> Connect the neutral only if it is intrinsically at the star centre			Asymmetry	of the nominal voltage 2 to 22% of the nominal voltage 2 to 22%
Measuring rang M11 M23 M48 D M49	DPC01 PC01 400HZ PPC01 DPC01	85 to 132 ΔVAC 177 to 275 ΔVAC 323 to 550 ΔVAC 323 to 475 ΔVAC 323 to 475 ΔVAC 375 to 550 ΔVAC	Note: The input voltage must not exceed the maximum rated voltage or drop below the minimum rated voltage reported above.	of the nominal voltage
M69	DPC01	510 to 793 ΔVAC	Hysteresis Set points from 2 to 5% Set points from 5 to 22%	1% 2%



# **Output Specifications**

Output	2 x SPDT relays N.E.		
Rated insulation voltage	250 VAC		
Contact ratings (AgSnO <sub>2</sub> )	μ		
Resistive loads AC 1	8 A @ 250 VAC		
DC 12	5 A @ 24 VDC		
Small inductive loads AC 15	2.5 A @ 250 VAC		
DC 13	2.5 A @ 24 VDC		
Mechanical life	$\geq$ 30 x 10 <sup>6</sup> operations		
Electrical life	$\geq 10^5$ operations		
	(at 8 A, 250 V, $\cos \varphi = 1$ )		
Operating frequency	≤ 7200 operations/h		
Dielectric strength			
Dielectric voltage	$\geq$ 2 kVAC (rms)		
Rated impulse withstand volt.	4 kV (1.2/50 µs)		

Power supply Rated operational voltage through terminals: L1, L2, L3, N (DPC01)	Overvoltage cat. III (IEC 60664, IEC 60038)
5, 6, 7, 11 (PPC01) M11 - Delta Voltage: M23 - Delta Voltage: DPC01 M48 - Delta Voltage: DPC01 M48 - Star Voltage: PPC01 M48 - Delta Voltage: PPC01 M48 - Star Voltage: M48 400HZ - Delta Voltage: M48 400HZ - Delta Voltage: M49 400HZ - Delta Voltage: M49 400 HZ- Star Voltage: M69 - Delta Voltage: M69 - Star Voltage: M69 400HZ- Delta Voltage:	100 to 115VAC $\pm$ 15%; 45 to 65Hz 208 to 240VAC $\pm$ 15%; 45 to 65Hz 380 to 480VAC $\pm$ 15%; 45 to 65Hz 220 to 277VAC $\pm$ 15%; 45 to 65Hz 380 to 415VAC $\pm$ 15%; 45 to 65Hz 220 to 240VAC $\pm$ 15%; 45 to 65Hz 380 to 415VAC $\pm$ 15%; 45 to 440Hz 220 to 240VAC $\pm$ 15%; 45 to 440Hz 220 to 240VAC $\pm$ 15%; 45 to 440Hz 440 to 480VAC $\pm$ 15%; 45 to 440Hz 254 to 277VAC $\pm$ 15%; 45 to 440Hz 600 to 690VAC $\pm$ 15%; 45 to 65Hz 347 to 400VAC $\pm$ 15%; 45 to 65Hz 600 to 690VAC $\pm$ 15%; 45 to 64Hz 600 to 690VAC $\pm$ 15%; 45 to 64Hz 600 to 690VAC $\pm$ 15%; 45 to 440Hz
M69 400HZ- Star Voltage:	347 to 400VAC ±15%;45 to 440Hz
Rated operational power M11 M23 M48 M69	8 VA @ $\Delta$ 115 VAC, 50 Hz 9 VA @ $\Delta$ 230 VAC, 50 Hz 13 VA @ $\Delta$ 400 VAC, 50 Hz 21 VA @ $\Delta$ 600 VAC, 50 Hz Supplied by L2 and L3 for the DIN-rail versions and by L1 and L2 for the Plug-in versions

## **General Specifications**

Power ON delay	$1~\text{s}\pm0.5~\text{s}$ or $6~\text{s}\pm0.5~\text{s}$	Housing		
Accuracy Temperature drift Delay ON alarm	(15 min warm-up time) ± 1000 ppm/°C ± 10% on set value ± 50 ms		DPC01 PPC01	45 x 80 x 99.5 mm 36 x 80 x 94 mm PA66 or Noryl
Repeatability	± 0.5% on full-scale	Weight		Approx. 220 g
Reaction time Incorrect phase sequence or total phase loss	< 200 ms	Screw terminals Tightening torque		(DPC01) Max. 0.5 Nm acc. to IEC 60947
Voltage level	(input signal variation from	Product standard		EN 60255-6
Asymmetry level Alarm ON delay: Alarm OFF delay:	-20% to +20% or from +20% to -20% of set value) < 200 ms (delay < 0.1 s) < 200 ms (delay < 0.1 s)	Approvals CE Marking		UL, CSA GL (DPC01 only, except 400Hz, M11) L.V. Directive 2006/95/EC
Indication for Power supply ON Alarm ON Output relays ON	LED, green LED, red (flashing 2 Hz during delay time) 2 x LED, yellow	EMC Immunity Emissions		EMC Directive 2004/108/EC According to EN 60255-26 According to EN 61000-6-2 According to EN 60255-26 According to EN 61000-6-3
Environment Degree of protection Pollution degree Operating temperature @ Max. voltage, 50 Hz @ Max. voltage, 60 Hz Storage temperature	(EN 60529) IP 20 3 (DPC01), 2 (PPC01) -20 to +60°C, R.H. < 95% -20 to +50°C, R.H. < 95% -30 to +80°C, R.H. < 95%			

### **Mode of Operation**

### Asymmetry definition.


#### Tolerance definition.


Asymmetry is an indicator of the mains quality and it is defined as the absolute value of the maximum deviation among the mains voltages, divided by the nominal voltage of the 3-phase system. The definition changes according to the voltage reference:

1) in case of measuring phase-phase voltages:

 $\frac{\max |\Delta V_{PH-PH}|}{V_{\Delta NOM}} \times 100$ 

in case of measuring phase-neutral voltages:





Tolerance is another indicator

of the mains quality and it is

definied as the absolute val-

ue of the maximum deviation

of the mains voltages from

the nominal voltage, divided


by the nominal voltage of the

3-phase system. The defini-

tion changes according to

2) in case of measuring phase-neutral voltages:

 $\frac{\max |V_{\lambda \text{NOM}} - V_{\text{PH-N}}|}{V_{\lambda \text{NOM}}} \times 100$ 

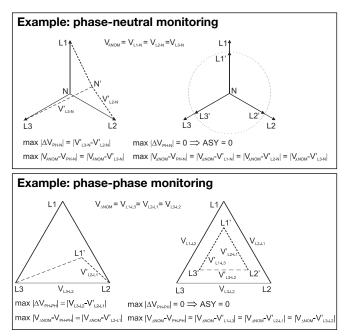

Connected to the 3 phases (and neutral) DPC01 and PPC01 operate when all 3 phases are present at the same time and the phase sequence is correct. It can be decided whether to monitor upper and lower voltage level of each phase or their asymmetry and tolerance.

#### Voltage level monitoring:

if one or more phase-phase or phase-neutral voltage exceed the upper set level or drop below the lower set level, the red LED starts flashing 2 Hz and the respective output relay releases after the set time period.

# Asymmetry and tolerance monitoring:

if one or more phase-phase or phase-neutral voltage exceed the set levels the red LED starts flashing 2 Hz and the respective output relay releases after the set time period.

**Note:** For both functions, if the phase sequence is wrong or one phase is lost, both output relays release immediately. Only 200 ms delay occurs. The failure is indicated by the red LED flashing 5 Hz during the alarm condition.

#### Example 1

(Mains monitoring - over and under phase-phase voltage) The relay monitors over and under voltage, phase loss and correct phase sequence.

**CARLO GAVAZZI** 


#### Example 2

(Motor monitoring - starting and operating load -asymmetry and tolerance of phase-neutral voltage) DPC01 and PPC01 ensure correct starting and operating conditions. They monitor the voltage level, phase sequence (correct direction of the motor rotation) and asymmetry.

Frequent failures are fuse blowing and incorrect voltage level. In case of fuse blowing the motor regenerates a voltage in the interrupted phase. The relay detects the failure and reacts due to excessive imbalance among the phases.

## Function/Range/Level/Time Setting

Adjust the input range setting the DIP-switches 3 and 4. Select the desired function setting the DIP-switches 5 and 6 as shown below. To

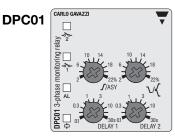

access the DIP-switches open the plastic cover using a screwdriver as shown below.

PPC01


CARLO GAVAZZI

relay ∾& Γ

#### **Centre knobs:** Setting of upper (*r*) and lower ( $\chi$ ) level or setting of asymmetry (ASY) and tolerance ( $\langle \rangle$ ) on relative scale.


#### Lower knobs: Setting of delay

Setting of delay on alarm times (DELAY 1, DELAY 2) on absolute scale: 0.1 to 30 s.

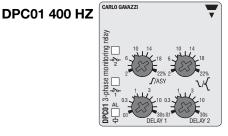


**CARLO GAVAZZI** 

### Function/Range/Level/Time Setting (cont.)

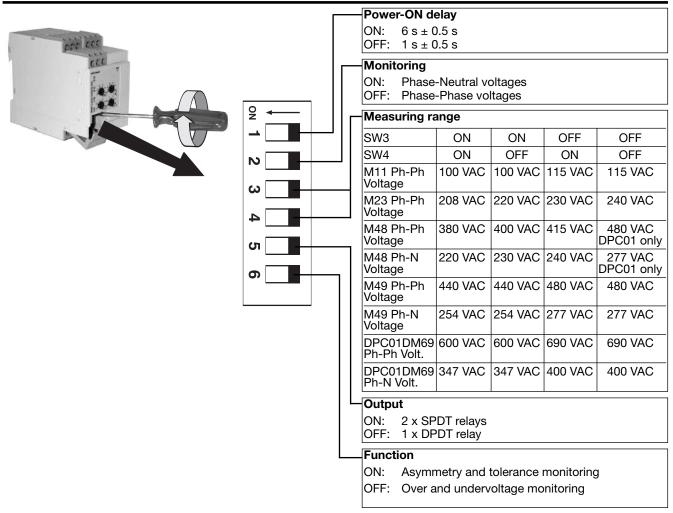


### **Operation Diagrams**

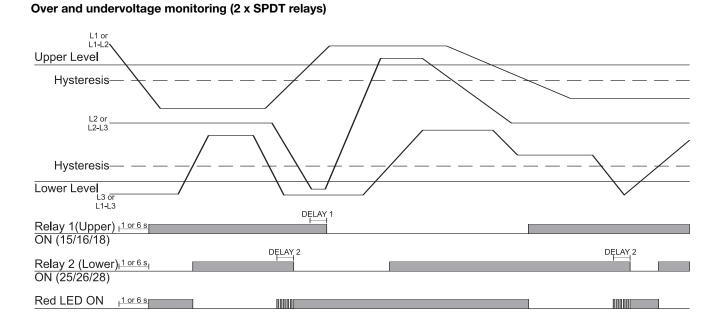



### **Operation Diagrams (cont.)**

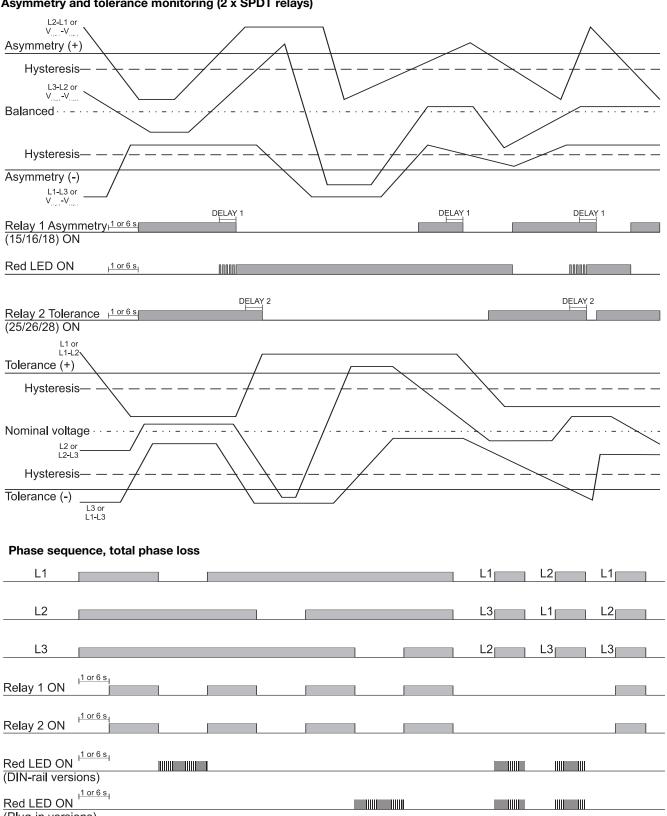

Asymmetry and tolerance monitoring (2 x SPDT relays)

(Plug-in versions)