

# Rock**BLOCK** 9603

## Developer guide

---

Version 1.0 1st June 2017



# Table of Contents

|   |           |
|---|-----------|
| <b>Introduction</b>                             | <b>3</b>  |
| What is RockBLOCK?                              | 3         |
| About Short Burst Data                          | 3         |
| About Iridium                                   | 3         |
| Getting Help                                    | 4         |
| <b>Functional Description</b>                   | <b>4</b>  |
| Power supply                                    | 4         |
| UART  | 4         |
| Antenna   | 4         |
| USB Compatible                                  | 4         |
| <b>Product Photographs</b>                      | <b>5</b>  |
| <b>Physical Specification</b>                   | <b>6</b>  |
| Dimensions                                      | 6         |
| <b>Electrical Specification</b>                 | <b>6</b>  |
| How RockBLOCK manages power                     | 6         |
| Input Current                                   | 7         |
| Input Voltage                                   | 7         |
| <b>Communications Interfaces</b>                | <b>7</b>  |
| PicoBlade 1.25mm Header Interface               | 8         |
| <b>RockBLOCK 'Hello World' Example</b>          | <b>9</b>  |
| <b>RockBLOCK Gateway Commands</b>               | <b>10</b> |
| Flush the MT queue                              | 10        |
| Sending a message directly to another RockBLOCK | 11        |

# Introduction

Thanks for choosing RockBLOCK! This developer guide refers to RockBLOCK 9603.

## What is RockBLOCK?

RockBLOCK makes it easy to use Iridium Short-Burst Data services with your project. The PCB assembly hosts an Iridium 9603N transceiver, simplifies its power requirements, and provides a UART interface to your project. Finally, RF considerations are taken care of by RockBLOCK's built-in patch antenna, or SMA connector for an external antenna.

## About Short Burst Data

SBD is a bandwidth-limited messaging system, capable of transmitting packets of up to 340 bytes, and receiving packets of 270 bytes. With a good view of the sky, it is possible to send/receive approximately once every 40 seconds.

It is suitable for applications which need to regularly send or receive small amounts of information - typically these would include tracking, telemetry, system control and monitoring applications.

It is not suitable if very low latency is required, or if the data to be transmitted is larger than a few thousand bytes. Sending images, or GRIB files, is usually not sensible.

## About Iridium

*"The Iridium constellation of 66 cross-linked Low Earth Orbit (LEO) satellites, plus several in-orbit spares, means truly global coverage and real mobility everywhere.*

*The network is considered a meshed constellation of interconnected, cross-linked satellites so that each satellite "talks" with the other nearby satellites in adjacent orbits.*

*Unique to Iridium, this architecture provides inherent advantages in performance and reliability over other mobile satellite services providers."*

(from [www.iridium.com](http://www.iridium.com))

Importantly, Iridium operates in the microwave L-band, which means that successful data transmission relies on having an unobstructed line-of-sight view of a satellite. Satellites travel quite quickly - from horizon to horizon in under 10 minutes - so with sensible application design, it is possible to transmit data, even with a heavily obstructed view of the sky.

The Iridium website ([www.iridium.com](http://www.iridium.com)) has more information.

Rock Seven has been an Iridium Partner since 2008.

## Getting Help

If you need any help at all, either with your RockBLOCK device, or with any of our associated web services, please just drop us an email.

[support@rock7.com](mailto:support@rock7.com)

## Functional Description

### Power supply

RockBLOCK includes a super capacitor as an internal energy store to satisfy the burst current requirements of a transit cycle. This is charged from a 5V external power supply, or a Lithium Ion cell (3.7V). These inputs are current-limited to 450mA.

### UART

Serial communications is provided by a full UART interface at 3.3v. This can be operated in 3-wire mode (Rx / Tx / GND) with no detriment to functionality or performance. Signals are available on a Molex PicoBlade 1.25mm header.


### Antenna

RockBLOCK is supplied with both a 25mm square ceramic patch antenna, and an SMA jack for attaching a suitable external antenna. There is a UFL-UFL RF cable connecting the 9603N module to *either* the patch antenna *or* the SMA jack.

### USB Compatible

Rock 7 can supply an FTDI TTL-232R-3V3 cable, terminated with the Molex PicoBlade connector for direct connection to RockBLOCK . This provides a virtual com port on a USB host.

# Product Photographs

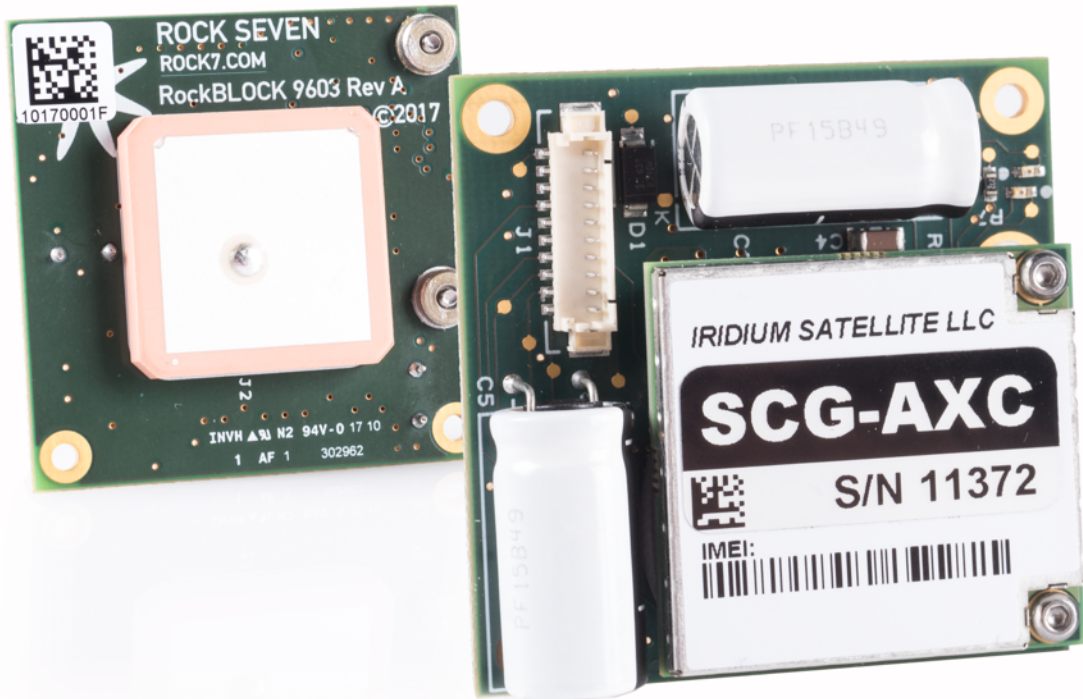



## Input Current

|                 | Sleep       | Idle  | Charging (max) |
|-----------------|-------------|-------|----------------|
| 5V power supply | 200 $\mu$ A | 40 mA | 450 mA         |

## Input Voltage

|  | Minimum | Absolute Maximum |
|--|---------|------------------|
| Using super capacitor (current limited to 450mA) | 4.5 V   | 5.4 V            |
| Power from Li-Ion cell                           | 2.6* V  | 5.4 V            |

\*Note that when powering from a Li-Ion cell, the source must be able to supply a burst of 7.5W for 10ms.

## Communications Interfaces

Your application will be communicating directly with the Iridium 9603N module within RockBLOCK.

Comprehensive documentation of this module is available in the [Iridium 9603N SBD Transceiver Product Developers Guide](#) which can be downloaded from the Rock Seven website

The data serial interface is an RS-232 9-wire interface at 3.3V digital signal levels (LVTTTL) over which the 9603N and FA transfer commands, responses, and SBD message data. With respect to this interface, the 9603N behaves as a DCE (Data Communication Equipment), and the FA behaves as a DTE (Data Terminal Equipment).

If RS-232 voltage levels are needed, the FA must include an LVTTTL/RS-232 level-shifter.


The baud rate can be set via the AT+IPR command. The default rate is 19200 bps.

While the 9603N's data serial interface supports the control signalling of a 9-wire interface by default for those host applications which require it, the interface can be configured for 3-wire operation – where only transmit, receive and ground signals are used – with no detriment to functionality or performance.

*A very important note about signal directions!*

- ★ **TXD** and **RTS** are **INPUTS** TO the RockBLOCK
- ★ **RXD** and **CTS** are **OUTPUTS** FROM the RockBLOCK

## PicoBlade 1.25mm Header Interface

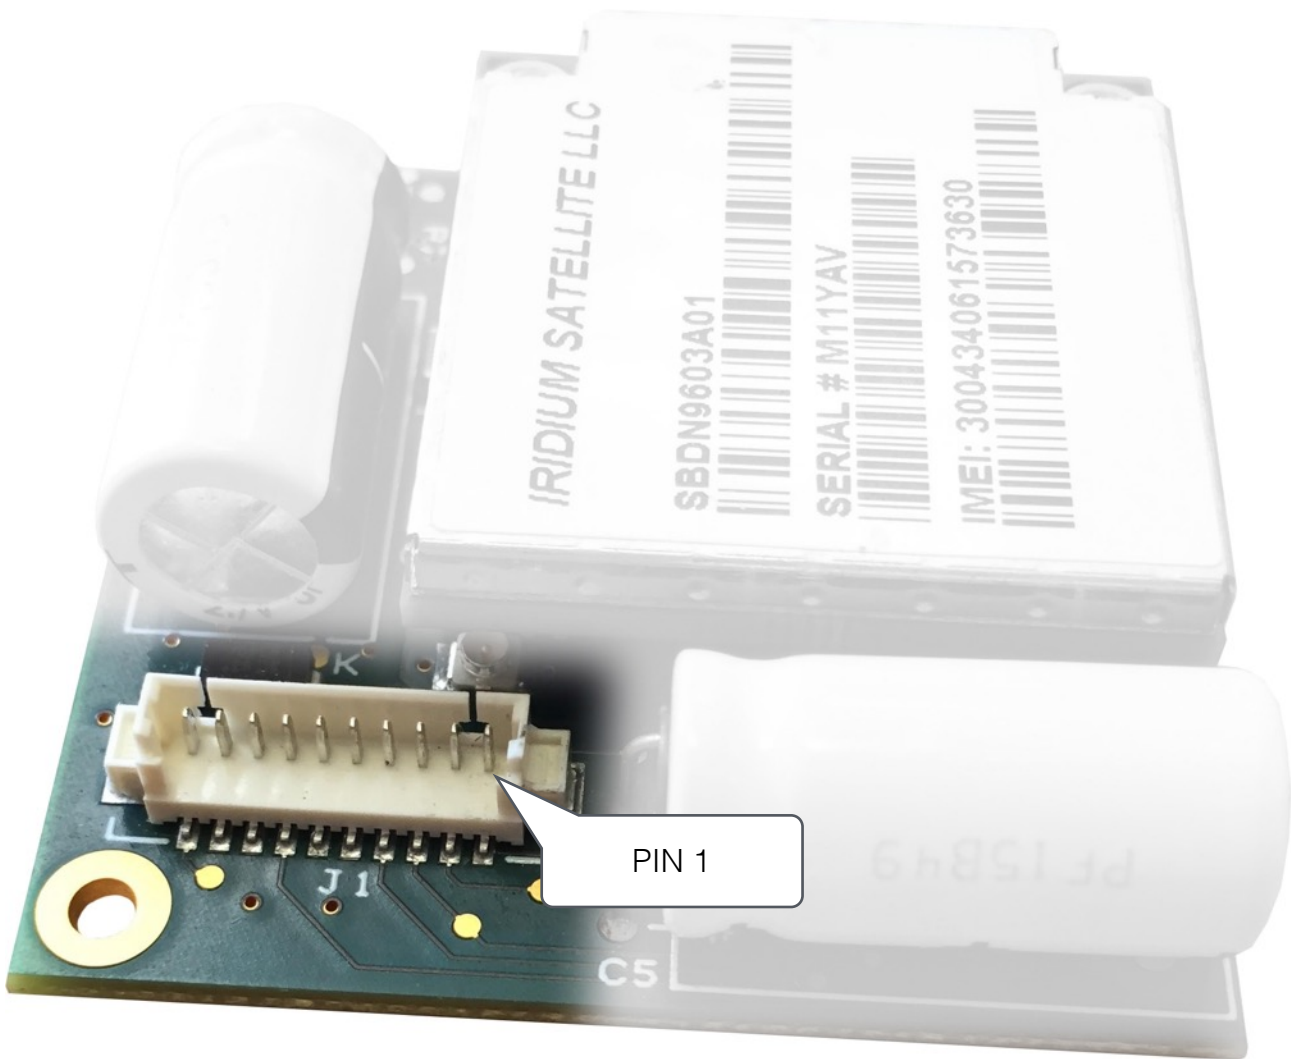

| Pin | Label          | Description  |
|-----|----------------|--|
| 1   | RXD            | Iridium 9603N RX ( <i>output from RockBLOCK</i> )  |
| 2   | CTS            | Iridium 9603N CTS ( <i>output from RockBLOCK</i> ) |
| 3   | RTS            | Iridium 9603N RTS ( <i>input to RockBLOCK</i> )    |
| 4   | NetAv          | Network available signal                           |
| 5   | RI             | Ring Indicator signal                              |
| 6   | TXD            | Iridium 9603N TX ( <i>input to RockBLOCK</i> )     |
| 7   | OnOff          | Sleep control (pull to ground to switch off)       |
| 8   | 5v In          | 5V Power supply (450mA limit)                      |
| 9   | Li-Ion 3.7v In | 3.7V power supply (450mA limit)                    |
| 10  | GND            | Ground   |



## RockBLOCK 'Hello World' Example

With your RockBLOCK connected to a suitable power supply, check that your serial communications are established (default 19200, 8N1), by issuing the command:

```
AT\r
```

Which will produce the response:

```
OK\r
```

Now, these commands will transmit your first message:

```
AT&K0\r
```

```
OK\r
```

```
AT+SBDWT=Hello World\r
```

```
OK\r
```

```
AT+SBDIX\r
```

```
+SBDIX: 0, 0, 0, 0, 0, 0\r
```

The SBDIX response tell you that it was transmitted successfully, and that there were no MT messages downloaded during this SBD session.

Please refer to the [Iridium AT Command Reference](#) for further detail.

Note that RockBLOCK expects commands to be terminated with a **carriage return (\r)** character. This is hex **0x0D**.

Using a **line-feed (\n) 0x0A** character will not work!

## RockBLOCK Gateway Commands

In general, the RockBLOCK gateway will simply transfer your MO payload directly to your chosen destination addresses (see Web Services User Guide for configuration details).

There are some specially-formatted payload that will be intercepted by the gateway to request specific functions.

### Flush the MT queue

This command causes an MT message to be queued in reply, with a flag set to instruct the Iridium gateway to clear any MT messages queued, but not yet downloaded. This is very useful if you suspect that there may be hundreds of queued messages for your device, but you don't wish to download them all. Note that you are still charged for the queued MT messages, regardless of whether or not you download them.

This behaviour will be triggered if your MO payload is equal to "FLUSH\_MT" (Hex: 46 4c 55 53 48 5f 4d 54).

The resultant MT reply will contain the same payload, indicating that the queue has been flushed. In this example, there were 10 MT messages queued. They were Hello1, Hello2, Hello3... etc.

```
AT&K0           (turns off flow control, as running in 3-wire mode)
OK
AT+SBDIX
+SBDIX: 0, 4, 1, 2, 6, 9
OK
AT+SBDRT
+SBDRT:
Hello1
OK
AT+SBDWT=FLUSH_MT
OK
AT+SBDIX
+SBDIX: 0, 5, 1, 3, 6, 8
OK
AT+SBDRT
+SBDRT:
Hello2
OK
AT+SBDD0
0
OK
AT+SBDIX
+SBDIX: 0, 6, 1, 8, 8, 0
OK
AT+SBDRT
+SBDRT:
FLUSH_MT
OK
```