

The Future of Analog IC Technology

## DESCRIPTION

The EV2626-R-00A is the evaluation board designed to demonstrate the capabilities of MPS' MP2626, a highly-integrated, flexible switch-mode battery charge management and system power path management device for a single-cell Li-ion and Li-Polymer battery used in a wide range of portable applications.

EV2626 uses two operating modes—charge mode and boost mode—to allow management of system and battery power based on the state of the input.

When input power is present, the board charges a single-cell battery with a programmable charge current of up to 2A.

In the absence of an input source, the board switches to boost mode through the MODE pin to power the VIN pins from the battery with a current of up to 1.5A.

The evaluation board provides full-operatingstatus indicators to distinguish charge mode from boost mode.

To guarantee safe operation, the EV2626 has input-over-voltage protection, battery overvoltage protection, thermal shutdown, batterytemperature monitoring, and a programmable timer to prevent prolonged charging of a dead battery.

Parameter	Symbol	Value	Units
Charge Mode			
Input Voltage Range	V <sub>IN</sub>	4.5-6	V
Charge-Full Voltage	$V_{\text{BATT Full}}$	4.2 / 4.35	V
Charge Current	I <sub>CHG</sub>	2	А
Input Current Limit	I <sub>IN LIM</sub>	2.7	Α
Boost Mode			
Battery Voltage	V <sub>BATT</sub>	2.5 – 4.5	V

VIN

5

1.5

V A

### **ELECTRICAL SPECIFICATION**

### FEATURES

- 4.5V-to-6V Operating Input Voltage Range
- Power Management Function Integrated Input-Current-Limit and Input Voltage Regulation
- Up to 2A Programmable Charge Current
- Selectable 4.2V / 4.35V Charge Voltage with 0.5% Accuracy
- Battery Temperature Monitoring
- Full Operation Indicators
- Programmable Timer-Back-Up Protection
- Battery-Reverse-Leakage Blocking
- Reverse-Boost-Operation for Powering
   System
- Up to 91% 5V Boost Mode Efficiency @ 1A
- Up to 1.5A Programmable Output Current Limit in Boost Mode

### **APPLICATIONS**

- Sub-battery Applications
- Power-bank Applications for Smart-Phone, Tablet and Other Portable Devices

Voltage Regulation

Output Current Limit

All MPS parts are lead-free and adhere to the RoHS directive. For MPS green status, please visit MPS website under Products, Quality Assurance page. "MPS" and "The Future of Analog IC Technology", are Registered Trademarks of Monolithic Power Systems, Inc.




### **EV2626-R-00A EVALUATION BOARD**



(L × W × H) 6.1cm × 5.1cm × 1.3cm

Board Number	MPS IC Number	
EV2626-R-00A	MP2626	

## **EVALUATION BOARD SCHEMATIC**

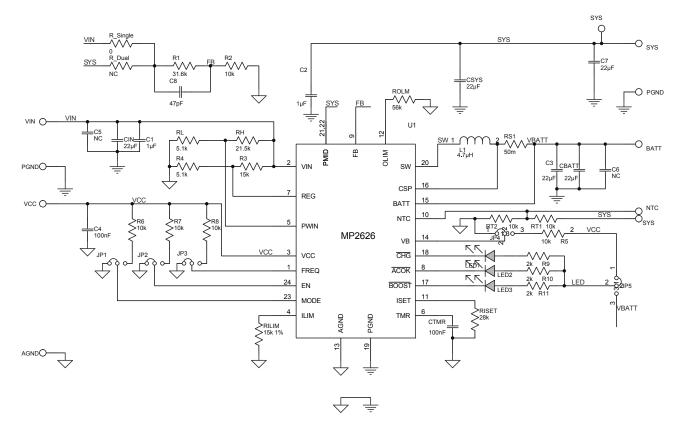



## EV2626-R-00A BILL OF MATERIALS

Qty	Ref	Value	Description	Package	Manufacture	Manufacture_PN
1	C1	1µF	Ceramic Capacitor; 25V;X7R	0603	TDK	C1608X7R1E105K
1	C2	1µF	Ceramic Capacitor; 16V;X7R;0603;	0603	muRata	GRM188R71C105KA12D
4	C3, C7, CBATT, CSYS	22µF	Ceramic Capacitor; 10V;X7R;1206	1206	muRata	GRM31CR71A226KE15L
2	C4, CTMR	100nF	Ceramic Capacitor; 16V;X7R;0603	0603	Yageo	CC0603KRX7R7BB104
1	C5	NC	Ceramic Capacitor; 25V;X5R;	1206	Murata	GRM31CR61E226KE15
1	C6	NC	Ceramic Capacitor; 10V;X7R;1206	1206	muRata	GRM31CR71A226KE15L
1	C8	47pF	Ceramic Capacitor; 50V;C0G;0603;	0603	TDK	C1608C0G1H470J
1	CIN	22µF	Ceramic Capacitor; 25V;X5R;	1206	Murata	GRM31CR61E226KE15
5	JP1, JP2, JP3, JP4, JP5		JUMPER/3P /DIP/2.54MM	DIP		
1	L1	4.7µH	Inductor;4.7uH; 19.5m;6A	SMD	Wurth	744311470
1	LED1	HL- PSC- 2012H 203BC	LED;Blue	0805	BRIGHT LED	HL-PSC-2012H203BC
2	LED2, LED3	BL- HUF35A- TRB	LED;Red	0805	BRIGHT LED	BL-HUF35A-TRB
1	R1	31.6kΩ	Film Resistor;1%;	0603	Yageo	RC0603FR-0731K6L
3	R2, RT1, RT2	10kΩ	Film Resistor;1%;	0603	Yageo	RC0603FR-0710KL
2	R3, RILIM	15kΩ	Film Resistor;1%;	0603	Yageo	RC0603FR-0715KL
2	R4, RL	5.1kΩ	Film Resistor;1%;	0603	Yageo	RC0603FR-075K1L
4	R5, R6, R7, R8	10kΩ	Film Resistor;5%;	0603	Yageo	RC0603JR-0710K
3	R9, R10, R11	2kΩ	Film Resistor; 5%;1/10W	0603	LIZ	CR0603JA0202G
1	RH	21.5kΩ	Film Resistor;1%	0603	Yageo	RC0603FR-0721K5L
1	RISET	28kΩ	Film Resistor;1%	0603	Yageo	RC0603FR-0728KL
1	ROLM	56kΩ	Film Resistor;1%	0603	Yageo	RC0603FR-0756KL
1	RS1	50mΩ	Sense Resistor;1%;1/2W;	1206	CYNTEC	RL1632H-R050-FN
1	R_Single	0	Resistor;5%;	0603	Royalohm	0603J0000T5E
1	R_Dual	NC				



# EV2626-R-00A BILL OF MATERIALS (continued)

Qty	Ref	Value	Description	Package	Manufacture	Manufacture_PN
5	JP1, JP2, JP3, JP4, JP5		Connector/ 2.54MM			
1	U1			QFN24 /4X4MM		MP2626GR



### PRINTED CIRCUIT BOARD LAYOUT

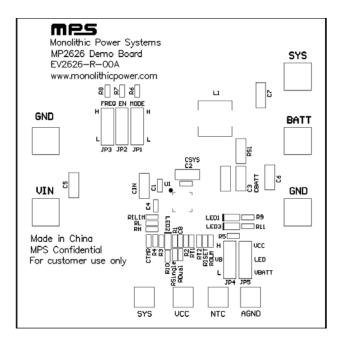
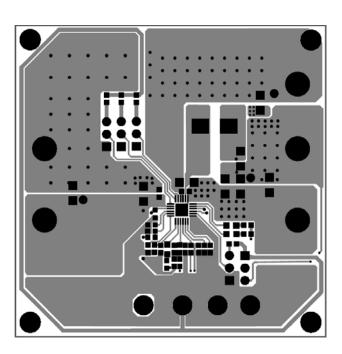



Figure 1: Top Silkscreen Layer





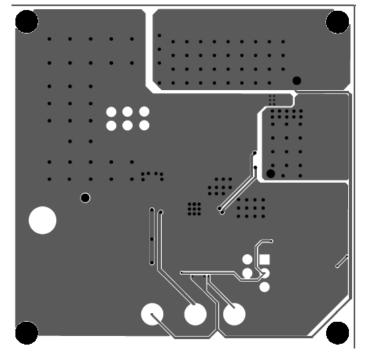


Figure 3: Bottom Layer



### **QUICK START GUIDE**

This board is designed for the MP2626, a stand-alone switch-mode battery charge management and system power path management device with integrated reverse directional boost from BATT to VIN. The board layout accommodates most commonly-used capacitors. The default function of this board is preset at charge mode, and the charge full voltage is preset to 4.2V for a 1-cell Li-Ion battery.

#### **Charge Mode Setting**

#### 1. Input-Over-Voltage-Limit

The MP2626 has a PWIN pin to monitor the input voltage. Once the voltage input voltage at PWIN pin exceeds 1.15V, the input to system path is cut off to protect the device from being damaged. The maximum input is 6V, and the external resistor divider must meet the following equation:

$$\frac{V_{PWIN}}{V_{IN}} = \frac{1.15}{6} = \frac{RL}{RH + RL}$$
(1)

Assume that RL=5.1 k $\Omega$ , then RH is 21.5 k $\Omega$ .

#### 2. REG Voltage

When the input power source is not sufficient to support both the charge current and system load current, the charge current is reduced to allow priority of system power and maintain the input voltage avoid dropping further. The REG pin is the input-voltage regulation feedback. The input voltage can be regulated by a resistor divider from VIN pin to REG pin to AGND

$$V_{\text{REG}} = 1.2V \times \frac{\text{R3} + \text{R4}}{\text{R4}}(V)$$
(2)

If  $V_{\text{REG}}$ =4.75V, given R4=5.1k $\Omega$ , then R3=15k $\Omega$ .

#### 3. Input Current Limit

An input current limit can be set slightly below the input source's maximum current rating. When the input current hits this limit, the charge current will decrease to keep the input current constant at the limit value to initially power the system.  $R_{ILIM}$ —the resistor connected to the ILIM pin—programs this limit. To set the input current limit at 2.7A, use an  $R_{ILIM}$  of 15k $\Omega$ .

$$I_{ILIM}(A) = \frac{40.5(kV)}{R_{ILIM}(k\Omega)}$$
(3)

#### 4. Charge-Full Voltage

To set the charge-full voltage, either leave the VB pin floating, or connect it to high logic for 4.2V and to connect to GND for 4.35V.

#### 5. Charge Current

The charge current can be programmed via both RS1 and  $R_{ISET}$ . With given RS1=50m $\Omega$ , determine the charge current using the following formula:

$$I_{CHG}(A) = \frac{2800}{R_{ISET}(k\Omega) \times RS1(m\Omega)}$$
(4)

For example, for a charge current of 2A, use a  $28k\Omega$  R<sub>ISET</sub>.



#### 6. Charge Timer

The MP2626 has a charge timer as an extra precaution against charging damaged batteries. The total charge time can be set as:

$$\tau_{\text{TOTAL}_{\text{TMR}}} = \frac{3.4 \times 10^6 \times 1.6(\text{V}) \times \text{C}_{\text{TMR}}(\mu\text{F})}{0.52 \times \text{I}_{\text{CHG}}(\text{A}) \times \text{RS1(m}\Omega) + 2(\mu\text{A})}(\text{s})$$
(5)

So if the charge current is 2A, a  $C_{TMR}$  of 0.1µF provides a  $t_{TOTAL TMR}$  of 2.8 hours.

#### **Boost Mode**

#### 1. System Output Voltage

The MODE pin can enable or disable the EV2626 when in boost mode. The resistor divider–R1 and R2–can adjust the output voltage as per the following equation:

$$V_{SYS_{REG}}(V) = 1.2V \times \frac{R1 + R2}{R2}$$
 (6)

Select R1 and R2 as 31.6k $\Omega$  and 10k $\Omega$ , respectively, for a system voltage of 5V.

#### 2. System-Output-Current Limit

Set the system-output-current limit in boost mode for the EV2626 to operate like a standard adapter. Set the output current limit as per the following equation:

$$I_{OLIM}(A) = \frac{2800 \times 1.6}{R_{OLIM}(k\Omega) \times RS1(m\Omega)}$$
(7)

#### Others

#### 1. Operating Frequency

The operating frequency can be programmed to optimize the design for both charge and boost modes. Set the frequency to 1.2MHz by connecting the FREQ pin to "H" or leaving the FREQ pin floating, while set to 600kHz by connecting the FREQ pin to "L".

For the other detailed description on the operation of the MP2626, please refer to the datasheet.



### EQUIPMENT REQUIREMENT

Evaluation requires the following equipments:

- 1. DC power source. The output voltage should exceed 6V, and output current greater than 2A.
- 2. Battery simulator or a single-cell battery pack. The battery simulator's output rating should exceed 4.5V/2.5A. When using a real battery pack, please observe all precautions on the battery manufacturer's data sheet first and ensure the charger's setting doesn't exceed the battery's absolute maximum specifications.
- 3. An oscilloscope. A single voltage probe and a single current probe.
- 4. Multi-meter.

#### **Charge Function**

- 1 Connect the jumper "EN" to "H" and the "MODE" to "L" to shunts, respectively!
- 2 Attach the positive and negative ends of the battery to the "BATT" and "GND" terminals, respectively. If it's a battery simulator, please preset the voltage to 3.8V (typical value) first.
- 3 Preset the DC power source to 5V. Then attach the DC output port and ground to the "VIN" and "GND" terminals, respectively.
- 4 Turn on the DC power source. The charger will start. Use the oscilloscope to verify that the 2A charge current is being delivered to the battery.
- 5 Remove the shunt between the "EN" and "H" to disable charging.
- 6 Re-insert the shunt between the "EN" and "H" to enable charging.

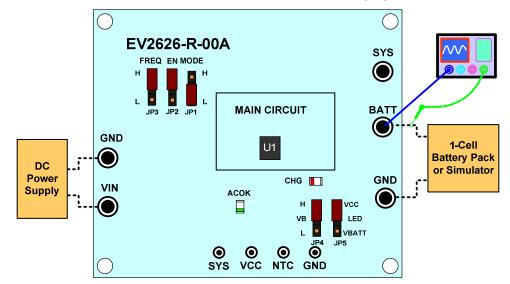


Figure 4: Setup for Charge Mode