









Tools and Models

and Woders

### Click <u>here</u> to ask an associate for production status of specific part numbers.

## Automotive High-Current Step-Down Converter with MAX20037/MAX20038 USB Protection/Host Charger Adapter Emulation

#### **General Description**

The MAX20037/MAX20038 ICs combine a 3.5A (or 1.5A for MAX20038A) automotive-grade step-down converter, USB host charger adapter emulator, and USB protection switches for automotive USB host applications. The device family also includes a USB load current-sense amplifier and configurable feedback-adjustment circuit, designed to provide automatic USB voltage compensation for voltage drops in captive cables often found in automotive applications. The ICs limit the USB load current using both a fixed internal peak-current threshold of the DC-DC converter and a user-configurable external USB load current-sense amplifier threshold. The ICs can be configured to be a 2.4A Apple® R30+ compliant solution.

The ICs allow flexible configuration options for both stand-alone and supervised applications, and can be programmed for desired operation using both external programming resistors and/or internal I<sup>2</sup>C registers through the I<sup>2</sup>C bus.


The ICs are optimized for high-frequency operation and include programmable frequency selection from 310kHz to 2.2MHz, allowing optimization of efficiency, noise, and board space based on application requirements. The fully synchronous DC-DC converters feature integrated high-side and low-side MOSFETs, an external SYNC input/output, and can be configured for spread-spectrum operation.

The MAX20037/MAX20038 are available in a small (5mm x 5mm) 28-pin TQFN package (side-wettable available) designed to minimize required components and layout area.

### **Applications**

- Automotive Radio and Navigation
- USB Port for Host and Hub Applications
- Automotive Connectivity/Telematics
- Dedicated USB Charging Port (DCP)

## **Simplified Typical Operating Circuit**

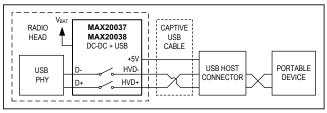

#### **Benefits and Features**

- One-Chip Solution Directly from Car Battery to Portable Device
  - 4.5V to 28V (40V Load Dump) Input Voltage
  - 5V, 3.5A Output Current Capability
  - 5V, 1.5A Output Current Capability (MAX20038A)
  - · Device-Attach Detection Output
  - · Low-Q Current Skip and Shutdown Modes
- Low-Noise Features Prevent Interference with AM Band and Portable Devices
  - Fixed-Frequency 275kHz to 2.2MHz Operation
  - · Fixed-PWM Option at No Load
  - · Spread Spectrum for EMI Reduction
  - · SYNC Input/Output for Frequency Parking
- Optimal USB Power and Communication for Portable Devices
  - User-Programmable Voltage Gain Adjusts Output for Up to  $600m\Omega$  Cable Resistance
  - User-Programmable USB Current Limit
  - USB 480Mbps/12Mbps/1.5Mbps Data Switches
  - Integrated iPod<sup>®</sup>/iPhone<sup>®</sup>/iPad<sup>®</sup> and Samsung<sup>®</sup> Charge-Detection Termination Resistors
  - · Supports USB BC1.2 CDP and DCP Modes
  - Supports China YD/T 1591-2009
  - Compatible with USB On-the-Go Specification
- Robust Design Keeps Vehicle System and Portable Devices Safe in Automotive Environment
  - Short-to-Battery Protection on DC-DC Converter Pins
  - · Short-to-VBUS Protection on USB Pins (MAX20037)
  - Short-to-Battery Protection on USB Pins (MAX20038)
  - ±15kV Air/±8kV Contact ISO 10605\*
  - ±15kV Air/±8kV Contact IEC 61000-4-2\*
  - Reduced Inrush Current with Soft-Start
  - Overtemperature Protection
  - -40°C to +125°C Operating Temperature Range

<u>Ordering Information</u> and <u>Typical Operating Circuit</u> appear at the end of data sheet.

\*Tested in Typical Operating Circuit, as used on the MAX20037/MAX20038 Evaluation Kit.

Apple, iPod, iPhone, and iPad are registered trademarks of Apple Inc.

Samsung is a registered trademark of Samsung Electronics Co., Ltd.

19-100104; Rev 10; 8/21

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

### **Absolute Maximum Ratings**

SUPSW to PGND0.3V to +40V	LX Continuous RMS Current (MAX20037/MAX20038)3.5A
LX, HVEN to PGND (Note 1)0.3V to (V <sub>SUPSW</sub> + 0.3V)	LX Continuous RMS Current (MAX20038A)1.7A
BIAS to SUPSW V <sub>SUPSW</sub> + 0.3V	Output Short-Circuit DurationContinuous
DRV to PGND0.3V to (V <sub>BIAS</sub> + 0.3V)	Continuous Power Dissipation (T <sub>A</sub> = +70°C)
FBCAP, SYNC to AGND0.3V to (V <sub>BIAS</sub> + 0.3V)	28-pin TQFN (derate 34.5mW/°C > 70°C) 2759mW
SENSN, SENSP, INT to AGND0.3V to (V <sub>SUPSW</sub> + 0.3V)	Operating Temperature40°C to +125°C
AGND to PGND0.3V to +0.3V	Junction Temperature+150°C
BST to PGND0.3V to +46V	Storage Temperature Range65°C to +150°C
BST to LX0.3V to +6V	Lead Temperature (soldering, 10s)+300°C
IN, CONFIG1, ENBUCK, SDA, SCL, to AGND0.3V to +6V	Soldering Temperature (reflow)+260°C
BIAS, CDP/DCP, FAULT, SHIELD to AGND0.3V to +6V	
HVD+, HVD- to AGND (MAX20037)0.3V to +6V	
HVD+, HVD- to AGND (MAX20038)0.3V to +18V	

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Note 1: Self-protected from transient voltages exceeding these limits in circuit under normal operation.

#### **Package Information**

PACKAGE TYPE: 28 TQFN				
Package Code	T2855+6C			
Outline Number	21-0140			
Land Pattern Number	90-0026			
PACKAGE TYPE: 28 SWTQFN				
Package Code	T2855Y+6C			
Outline Number	<u>21-100041</u>			
Land Pattern Number	90-0026			
THERMAL RESISTANCE, FOUR-LAYER BOARD				
Junction to Ambient (θ <sub>JA</sub> )	29°C/W			
Junction to Case $(\theta_{JC})$	2°C/W			

For the latest package outline information and land patterns (footprints), go to <a href="www.maximintegrated.com/packages">www.maximintegrated.com/packages</a>. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to <a href="https://www.maximintegrated.com/thermal-tutorial">www.maximintegrated.com/thermal-tutorial</a>.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### **Electrical Characteristics**

 $V_{SUPSW} = V_{HVEN} = 14V$ ,  $V_{IN} = V_{ENBUCK} = 3.3V$ ,  $T_A = T_J = -40^{\circ}C$  to +125°C, unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$  under normal conditions, unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
POWER SUPPLY AND ENABLE	·					
Supply Voltage Range	V <sub>SUP</sub>	(Note 2)	4.5		28	V
Load-Dump Event Supply Voltage Range	V <sub>SUPSW_LD</sub>	t < 1s, inferred by leakage test			40	V
		Powered enabled no load skip mode; (Note 3)		2.3		mA
Supply Current	ISUPSW	Powered, enabled, no load FPWM mode (Note 3)		32		IIIA
		V <sub>SUPSW</sub> = 18V, V <sub>HVEN</sub> = 0V, V <sub>IN</sub> = 0V; off state		4	20	μA
Standby Supply Current		V <sub>HVEN</sub> = 3.3V,V <sub>ENBUCK</sub> = 0, high-speed or CDP mode		1.18		mA
Standby Supply Current	ISUPSW	V <sub>HVEN</sub> = 3.3V, V <sub>ENBUCK</sub> = 0, DCP mode		1.3		IIIA
PIAC Voltage	\/	5.75V ≤ V <sub>SUPSW</sub> ≤ 28V	4.75	5	5.25	V
BIAS Voltage	V <sub>BIAS</sub>	In switchover mode		4.7		V
BIAS Current Limit			50		160	mA
BIAS Undervoltage Lockout	V <sub>UV_BIAS</sub>	V <sub>BIAS</sub> rising	3.7		3.9	V
BIAS Undervoltage-Lockout Hysteresis				0.09		V
SUPSW Undervoltage Lockout	V <sub>UV_SUPSW</sub>	V <sub>UV_SUPSW</sub> rising	3.850		4.43	V
SUPSW Undervoltage-Lockout Hysteresis			0.15		0.25	V
IN Voltage Range	V <sub>IN</sub>		3		3.6	V
IN Overvoltage Lockout	V <sub>IN_OVLO</sub>	V <sub>IN</sub> rising	3.8		4.3	V
IN Input Current	I <sub>IN</sub>				10	μA
HVEN Rising Threshold	V <sub>HVEN_R</sub>		0.6	1.5	2.4	V
HVEN Falling Threshold	V <sub>HVEN_F</sub>				0.4	V
HVEN Hysteresis	V <sub>HVEN</sub>			0.08		V
HVEN Debounce (Rising)	t <sub>HVEN_R</sub>			6		μs
HVEN Debounce (Falling)	thven_f			12		μs
HVEN Input Leakage Current					10	μA

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

### **Electrical Characteristics (continued)**

 $V_{SUPSW} = V_{HVEN} = 14V$ ,  $V_{IN} = V_{ENBUCK} = 3.3V$ ,  $T_A = T_J = -40^{\circ}C$  to +125°C, unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$  under normal conditions, unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
D+, D- ANALOG USB SWITCHES						l .
Analog Signal Range		Guaranteed by R <sub>ON</sub> measurement	0		3.6	V
Protection Trip Threshold	V <sub>OV_D</sub>		3.65	3.9	4.1	V
Protection Response Time	t <sub>FP_D</sub>	$V_{IN}$ = 4.0V, $V_{HVD\pm}$ = 3.3V to 4.3V step, $R_L$ = 15kΩ on D±, delay to $V_{D\pm}$ < 3V		3		μs
Overvoltage Blanking Timeout Period	t <sub>B,OV_D</sub>	From overvoltage condition to FAULT asserted.		15.6		ms
D+, D- ANALOG USB SWITCHES (	MAX20038 ONL	Y)				
On-Resistance Switch A	R <sub>ON_SA</sub>	$I_L = 10 \text{mA}, V_D = 0 \text{ to } V_{IN},$ $V_{IN} = 3.0 \text{V to } 3.6 \text{V}$		4	8	Ω
On-Resistance Match Between Channels, Switch A	ΔR <sub>ON_SA</sub>	I <sub>L</sub> = 10mA, V <sub>D</sub> = 1.5V or 3.0V		0.03	.2	Ω
On-Resistance Flatness, Switch A	R <sub>FLAT(ON)A</sub>	I <sub>L</sub> = 10mA, V <sub>D</sub> = 0V or 0.4V		.02		Ω
On-Resistance of HVD+/HVD- Short	R <sub>SHORT</sub>	V <sub>D+</sub> = 1V, I <sub>D-</sub> = 500μA		90	180	Ω
HVD+/HVD- On-Leakage Current	I <sub>HVD_ON</sub>	V <sub>HVD±</sub> = 3.6V or 0V	-7		+7	μA
HVD+/HVD- Off-Leakage Current	I <sub>HVD_OFF</sub>	V <sub>HVD±</sub> =18V, V <sub>D±</sub> = 0V			50	μA
D+/D- Off-Leakage Current	I <sub>D_OFF</sub>	V <sub>HVD±</sub> =18V, V <sub>D±</sub> = 0V	-1		+1	μA
On-Channel -3dB Bandwidth	BW	$R_L$ = 50Ω, source impedance 50Ω		480		MHz
Crosstalk	V <sub>CT</sub>	$R_L$ = 50Ω, frequency = 480MHz		-14		dB
On-Capacitance, Switch A	C <sub>ON</sub>	Frequency = 240MHz, V <sub>BIAS</sub> = 250mV, Voltage = 500mV <sub>P-P</sub>		12.5		pF
Rise-Time Propagation Delay	t <sub>PLH</sub>	$R_S = R_L = 50\Omega$		200		ps
Fall-Time Propagation Delay	t <sub>PHL</sub>	$R_S = R_L = 50\Omega$		200		ps
Output Skew Between Switches	t <sub>SK(O)</sub>	Skew between D+ and D- switch, $R_L = 50\Omega$		50		ps
Output Skew Same Switch	t <sub>SK(P)</sub>	Skew between opposite transitions in same switch, $R_L = 50\Omega$		50		ps
D+, D- ANALOG USB SWITCHES (	MAX20037 ONL	Y)				
On-Resistance, Switch A	R <sub>ON_SA</sub>	I <sub>L</sub> = 10mA, I <sub>L</sub> = 10mA, V <sub>D_</sub> = 0V to V <sub>IN</sub> , V <sub>IN</sub> = 3.0V to 3.6V		2.5	4	Ω
On-Resistance Match Between Channels, Switch A	ΔR <sub>ON_SA</sub>	I <sub>L</sub> = 10mA, V <sub>D</sub> = 1.5V or 3.0V		0.03	0.2	Ω
On-Resistance Flatness, Switch A	R <sub>FLAT(ON)A</sub>	I <sub>L</sub> = 10mA,V <sub>D</sub> =0V or 0.4V		0.02		Ω
On-Resistance of HVD+/HVD- Short	R <sub>SHORT</sub>	V <sub>D+</sub> = 1V, I <sub>D-</sub> = 500μA		90	180	Ω

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Electrical Characteristics (continued)  $V_{SUPSW} = V_{HVEN} = 14V$ ,  $V_{IN} = V_{ENBUCK} = 3.3V$ ,  $T_A = T_J = -40^{\circ}C$  to +125°C, unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$  under normal conditions, unless otherwise noted.)

PARAMETER	SYMBOL	CONE	DITIONS	MIN	TYP	MAX	UNITS
HVD+/HVD- On-Leakage Current	I <sub>HVD_ON</sub>	V <sub>HVD±</sub> = 3.6V or	0V	-7		+7	μA
HVD+/HVD- Off-Leakage Current	I <sub>HVD_OFF</sub>	V <sub>HVD±</sub> = 6V, V <sub>D±</sub>	= 0V			10	μΑ
D+/D- Off-Leakage Current	I <sub>D_OFF</sub>	V <sub>HVD±</sub> = 6V, V <sub>D±</sub>	= 0V	-1		+1	μΑ
On-Channel -3dB Bandwidth	BW	$R_L = 50\Omega$ , source	impedance 50Ω		640		MHz
Crosstalk	V <sub>CT</sub>	$R_L = 50\Omega, f = 480$	)MHz		-14		dB
On-Capacitance, Switch A	C <sub>ON</sub>	Frequency = 240 V <sub>BIAS</sub> = 250mV, V	MHz, Voltage = 500mV <sub>P-P</sub>		10		pF
Rise-Time Propagation Delay	t <sub>PLH</sub>	$R_S = R_L = 50\Omega$			200		ps
Fall-Time Propagation Delay	t <sub>PHL</sub>	$R_S = R_L = 50\Omega$			200		ps
Output Skew, Between Switches	t <sub>SK(O)</sub>	Skew between D R <sub>L</sub> = 50Ω	+ and D- switch,		50		ps
Output Skew, Same Switch	t <sub>SK(P)</sub>	Skew between on in same switch, F	oposite transitions $R_L = 50Ω$		50		ps
CURRENT-SENSE AMPLIFIER (SE	NSP, SENSN)						
Feedback-Adjustment Gain		V <sub>ADJUST</sub> /V <sub>SENSE</sub> V <sub>SENSP</sub> - V <sub>SENS</sub>	e, GAIN[4:0] = 11110 N = 80mV		19.4		V/V
Output-Voltage Accuracy		V <sub>SENSP</sub> - V <sub>SENSN</sub> = 79.2mV, GAIN[4:0] = 11110, T <sub>A</sub> = -40°C to +105°C (Note 3)		6.33		6.68	V
			ILIM[2:0] = 111, R <sub>SENSE</sub> - 33Ω	3.06	3.18	3.30	
		MAX20037/ MAX20038	ILIM[2:0] = 110 R <sub>SENSE</sub> - 33Ω	2.57	2.69	2.80	
			ILIM[2:0] = 101 R <sub>SENSE</sub> - 33Ω	2.06	2.14	2.23	
			ILIM[2:0] = 100 R <sub>SENSE</sub> - 33Ω	1.56	1.63	1.69	
Overcurrent Threshold			ILIM[2:0] = 011 R <sub>SENSE</sub> - 33Ω	1.04	1.09	1.14	A
			ILIM[2:0] = 010 R <sub>SENSE</sub> - 33Ω	0.79	0.83	0.87	
		MAX20038A	ILIM[2:0] = 001 R <sub>SENSE</sub> - 33Ω	0.54	0.57	0.60	
			ILIM[2:0] = 000 R <sub>SENSE</sub> - 33Ω	0.28	0.31	0.34	

Analog Devices | 5 www.analog.com

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

### **Electrical Characteristics (continued)**

 $V_{SUPSW} = V_{HVEN} = 14V$ ,  $V_{IN} = V_{ENBUCK} = 3.3V$ ,  $T_A = T_J = -40^{\circ}C$  to +125°C, unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$  under normal conditions, unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Attach Comparator Input-Voltage Threshold			230	560	850	μV
CSA Attach Deglitch				1		ms
SENSN Discharge Threshold (Falling)	V <sub>SENSN_DIS</sub>	V <sub>SENSN</sub> falling	0.48	0.51	0.55	V
SENSN Discharge Current	ISENSN_DIS		11		32	mA
SENSN Discharge Timeout	tSENSN_DIS_ TIMEOUT			1		S
SENSN Discharge Time Upon CD1 Bit Toggle	tsensn_dis_	CD1 bit toggle or CDP/DCP pin toggle; going in to or out of dedicated charging mode		2		s
SENSN Undervoltage Threshold (Falling)	V <sub>UV</sub> SENSN		4	4.375	4.75	V
SENSN Overvoltage Threshold (Rising)	V <sub>OV</sub> SENSN		7	7.46	7.9	V
SENSN Undervoltage-Fault Blanking Time			8	16		ms
SENSN Overvoltage-Fault Blanking Time	t <sub>B,OV_SENSN</sub>	From overvoltage condition to fault notification	1	3	5	μs
REMOTE FEEDBACK ADJUSTME	NT		•			
SHIELD Input Voltage Range			0.1		0.75	V
Gain		V <sub>ADJUST</sub> /V <sub>SHIELD</sub> , CSA attach = true	1.935	2	2.065	V/V
Input-Referred Offset Voltage				±2		mV
SHIELD Input-Leakage Current		0V < V <sub>SHIELD</sub> < 5.5V	-10		+10	μΑ
SHIELD Input-Threshold (Rising)			1.23		1.45	V
SHIELD Input Threshold (Falling)			1.07		1.3	V
DIGITAL INPUTS (SDA, SCL, ENB	UCK, CDP/DCP)					
Input Leakage Current		V <sub>PIN</sub> = 5.5V, 0V	-5		+5	μΑ
Logic-High	V <sub>IH</sub>		1.6			V
Logic-Low	V <sub>IL</sub>				0.5	V
USB 2.0 HOST-CHARGER DETEC	TION (D+/D-)					
Input Logic-High	V <sub>IH,HVD</sub>		2			V
Input Logic-Low	V <sub>IL,HVD</sub>				0.8	V
Data-Sink Current	I <sub>DAT_SINK</sub>	V <sub>DAT_SINK</sub> = 0.25V to 0.4 V	50	100	150	μΑ
Data-Detect Voltage High	V <sub>DAT_REFH</sub>		0.4			V

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

### **Electrical Characteristics (continued)**

 $V_{SUPSW} = V_{HVEN} = 14V$ ,  $V_{IN} = V_{ENBUCK} = 3.3V$ ,  $T_A = T_J = -40^{\circ}C$  to +125°C, unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$  under normal conditions, unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Data-Detect Voltage Low	V <sub>DAT_REFL</sub>				0.25	V
Data-Detect Voltage Hysteresis	V <sub>DAT_HYST</sub>			60		mV
Data-Source Voltage	V <sub>DAT_SRC</sub>	I <sub>SOURCE</sub> = 200μA	0.5		0.7	V
SYNCHRONOUS STEP-DOWN DC	-DC CONVERTE	R				
PWM Output Voltage	V <sub>SENSP</sub>	8V < V <sub>SUPSW</sub> ≤ 18V, no load		5.1		V
Skip Mode Output Voltage	VSENSP_SKIP	8V < V <sub>SUPSW</sub> ≤ 18V, no load, (Note 3)		5.13		V
Load Regulation		8V ≤ V <sub>SUPSW</sub> ≤18V		50		mΩ
Spread-Spectrum Range		Spread spectrum enabled		6		%
SYNC Switching-Threshold High	V <sub>SYNC_HI</sub>	Rising	1.4			V
SYNC Switching-Threshold Low	V <sub>SYNC_LO</sub>	Falling			0.4	V
SYNC Internal Pulldown				200		kΩ
SYNC Input Clock-Acquisition Time	<sup>t</sup> sync	(Note 3)		1		Cycles
High-Side Switch On-Resistance	R <sub>ONH</sub>	I <sub>LX</sub> = 1A		54	95	mΩ
Low-Side Switch On-Resistance	R <sub>ONL</sub>	I <sub>LX</sub> = 1A		72	135	mΩ
BST Input Current	I <sub>BST</sub>	V <sub>BST</sub> - V <sub>LX</sub> = 5V, high side on		2.2		mA
17.0		MAX20037/MAX20038		5		
LX Current-Limit Threshold		MAX20038A		3.2		A
Skip Mode Peak-Current Threshold	I <sub>SKIP_TH</sub>			1		Α
Negative Current Limit				0.9		Α
Soft-Start Ramp Time	t <sub>SS</sub>			8		ms
LX Rise Time		(Note 3)		3		ns
LX Fall Time		(Note 3)		4		ns
OSCILLATOR						
Internal Oscillator Frequency			3.4	4	4.6	MHz
Buck Oscillator Frequency	farr	FSW[2:0] = 000	1.94	2.2	2.46	MHz
Duck Oscillator i requericy	f <sub>SW</sub>	FSW[2:0] = 101	340	410	480	kHz
Hold Timer			51	60	69	min
ADC						
Resolution				8		bits
Offset Error				±0.4		%FS
Gain Error				±0.3		%FS

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

### **Electrical Characteristics (continued)**

 $V_{SUPSW} = V_{HVEN} = 14V$ ,  $V_{IN} = V_{ENBUCK} = 3.3V$ ,  $T_A = T_J = -40^{\circ}C$  to +125°C, unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$  under normal conditions, unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
FAULT, INT(ATTACH), SYNC OUTF	PUTS					
Output High-Leakage Current		V <sub>FAULT</sub> , V <sub>INT(ATTACH)</sub> = 5.5V	-10		+10	μA
Output Low Level		Sinking 1mA			0.4	V
SYNC Output High Level		Sourcing 1mA, SYNC configured as output	V <sub>BIAS</sub> - 0.4			V
CONFIG1, CONFIG2, CONFIG3	J					
CONFIG1-3 Current Leakage		V <sub>CONFIG</sub> = 0 to 4V			±5	μA
Minimum Window Amplitude			-3.4		+3.4	%
THERMAL OVERLOAD						
Thermal-Warning Temperature				145		°C
Thermal-Warning Hysteresis				9		°C
Thermal-Shutdown Temperature				165		°C
Thermal-Shutdown Hysteresis				9		°C
I <sup>2</sup> C INTERFACE						
Serial-Clock Frequency	f <sub>SCL</sub>				400	kHz
Bus Free Time	t <sub>BUF</sub>	Between STOP and START condition	1.3			μs
START Condition Setup Time	t <sub>SU:STA</sub>		0.6			μs
START Condition Hold Time	t <sub>HD:STA</sub>		0.6			μs
STOP Condition Setup Time	t <sub>SU:STO</sub>		0.6			μs
Clock Low Period	t <sub>LOW</sub>		1.3			μs
Clock High Period	t <sub>HIGH</sub>		0.6			μs
Data Setup Time	tsu:dat		100			ns
Data Hold Time	t <sub>HD:DAT</sub>	From 50% SCL falling to SDA change	0		0.6	μs
Pulse Width of Spike Suppressed	t <sub>SP</sub>			50		ns
ESD PROTECTION (ALL PINS)						
ESD Protection Level	V <sub>ESD</sub>	Human Body Model		±2		kV

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### **Electrical Characteristics (continued)**

 $V_{SUPSW} = V_{HVEN} = 14V$ ,  $V_{IN} = V_{ENBUCK} = 3.3V$ ,  $T_A = T_J = -40^{\circ}$ C to +125°C, unless otherwise noted. Typical values are at  $T_A = +25^{\circ}$ C under normal conditions, unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS			
HVD+, HVD- ESD PROTECTION (N	HVD+, HVD- ESD PROTECTION (MAX20037 ONLY—REQUIRES EXTERNAL TVS)								
		ISO 10605 Air Gap (330pF, 2kΩ)		±15					
		ISO 10605 Contact (330pF, 2kΩ)		±8					
		IEC 61000-4-2 Air Gap (150pF, 330Ω)		±15					
ESD Protection Level (Note 4)	V <sub>ESD</sub>	IEC 61000-4-2 Contact (150pF, 330Ω)		±8		kV			
		IEC 61000-4-2 Air Gap (330pF, 330Ω)		±15					
		IEC 61000-4-2 Contact (330pF, 330Ω)		±8					
HVD+, HVD- ESD PROTECTION (M	MAX20038 ONLY	<b>(</b> )							
		ISO 10605 Air Gap (330pF, 2kΩ)		±15					
		ISO 10605 Contact (330pF, 2kΩ)		±8					
	V <sub>ESD</sub>	IEC 61000-4-2 Air Gap (150pF, 330Ω)		±15					
ESD Protection Level		IEC 61000-4-2 Contact (150pF, 330Ω)		±8		kV			
		IEC 61000-4-2 Air Gap (330pF, 330Ω)		±15					
		IEC 61000-4-2 Contact (330pF, 330Ω)		±8					

- **Note 2:** Device is designed for use in applications with continuous operation of 14V. Device meets electrical table up to maximum supply voltage.
- Note 3: Guaranteed by design and bench characterization; not production tested.
- Note 4: Tested in Typical Application Circuit, as shown on the MAX20037 EV kit that utilizes an external ESD array.
- **Note 5:** Specifications with minimum and maximum limits are 100% production tested at  $T_A = +25$ °C and are guaranteed over the operating temperature range by design and characterization. Actual typical values may vary and are not guaranteed.

## **Timing Diagrams**

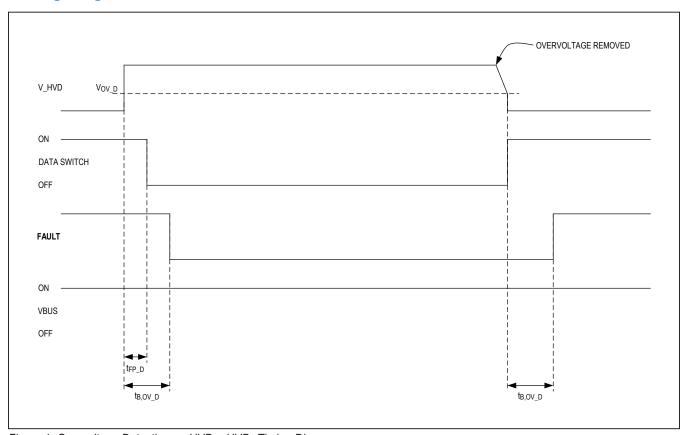


Figure 1. Overvoltage Detection on HVD+, HVD- Timing Diagram

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **Timing Diagrams (continued)**

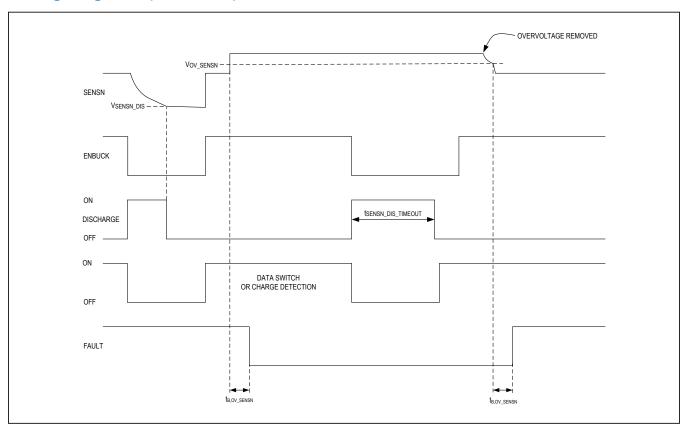


Figure 2. SENSN Discharge and Overvoltage Timing Diagram

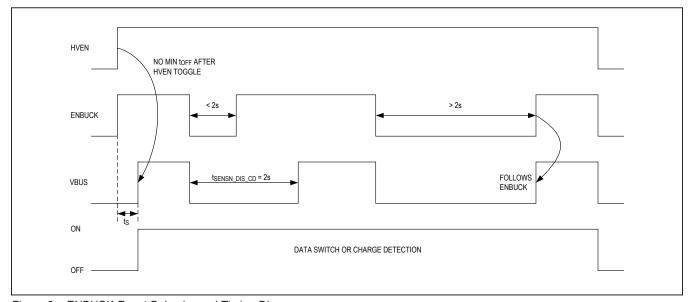


Figure 3a. ENBUCK Reset Behavior and Timing Diagram

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **Timing Diagrams (continued)**

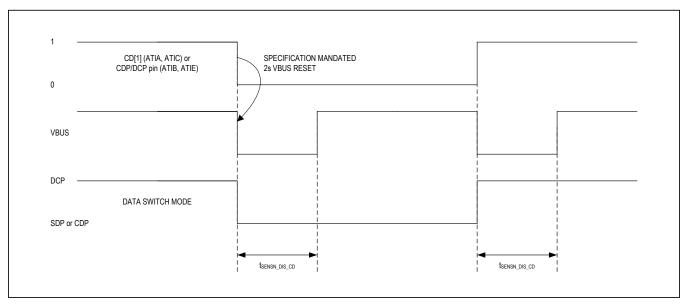


Figure 3b. DCP Reset Behavior and Timing Diagram

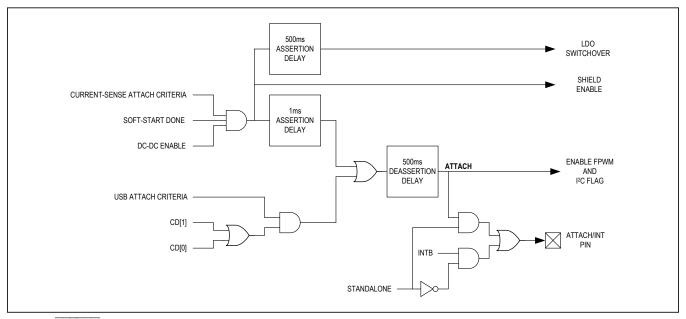


Figure 4. ATTACH Logic Diagram

## **Timing Diagrams (continued)**

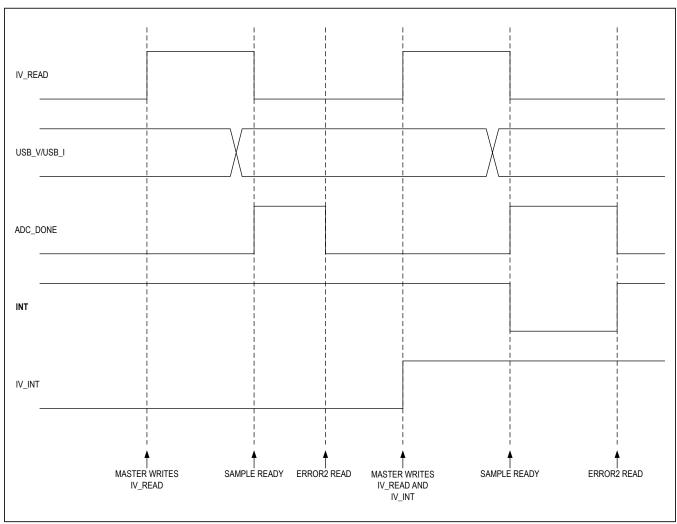


Figure 5. ADC Timing Diagram

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

### **Timing Diagrams (continued)**

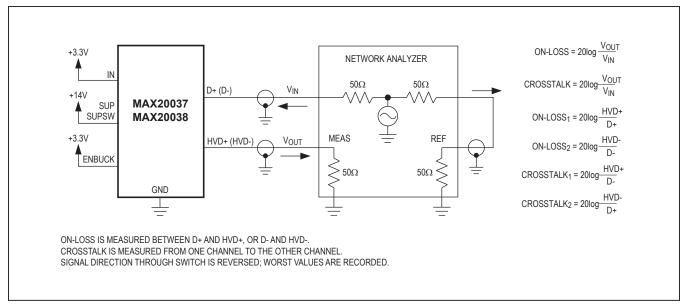


Figure 6. On-Channel -3dB Bandwidth and Crosstalk


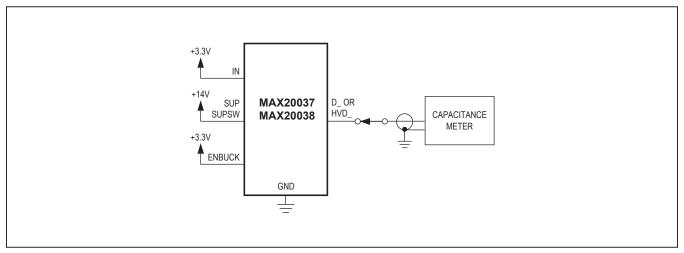


Figure 7. On-Capacitance


## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation


### **Typical Operating Characteristics**


(TA = +25°C, unless otherwise noted. Load currents above 2.4A are for information only.)

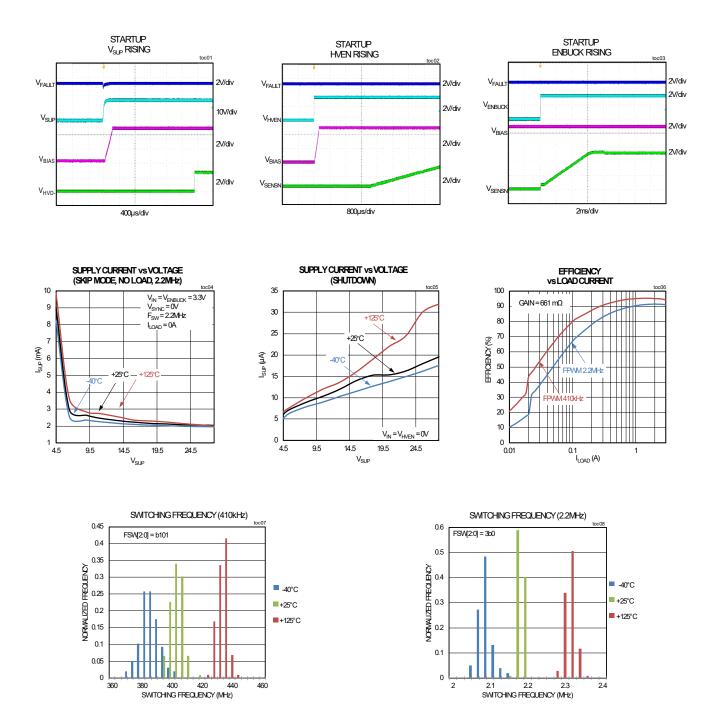



(TA = +25°C, unless otherwise noted. Load currents above 2.4A are for information only.)

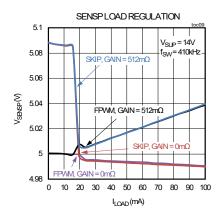


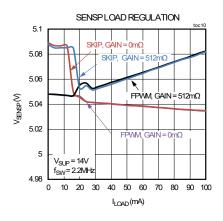


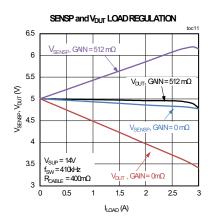


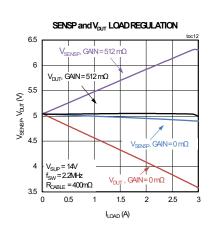

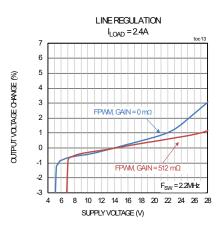


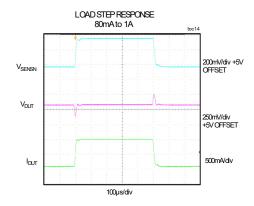


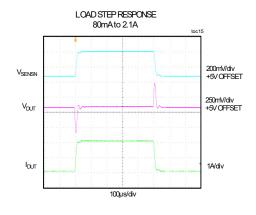


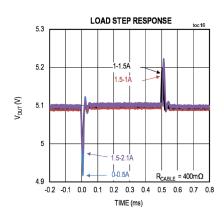



(TA = +25°C, unless otherwise noted. Load currents above 2.4A are for information only.)

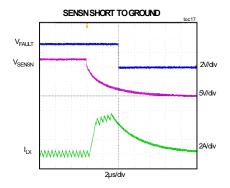


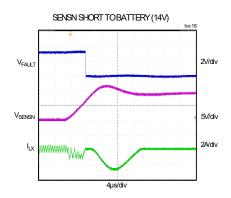

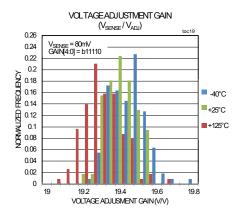


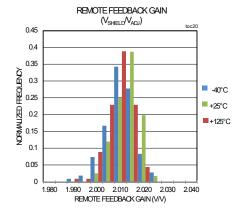


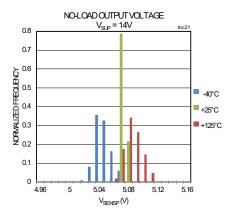


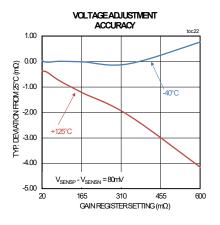



(TA = +25°C, unless otherwise noted. Load currents above 2.4A are for information only.)

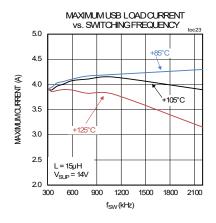


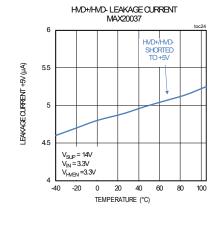

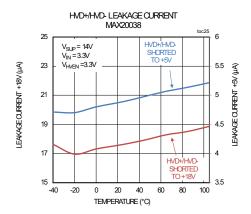


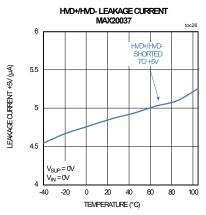


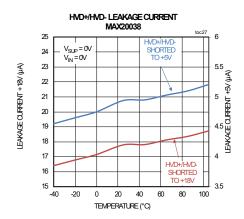


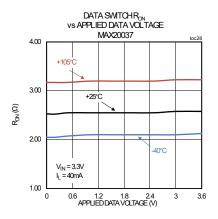



(TA = +25°C, unless otherwise noted. Load currents above 2.4A are for information only.)

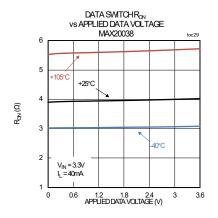


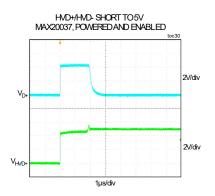

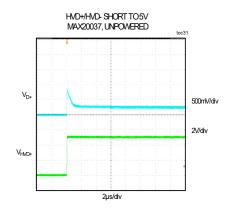

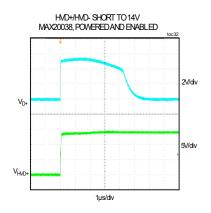


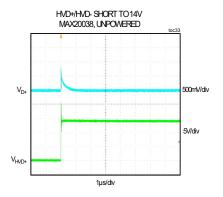

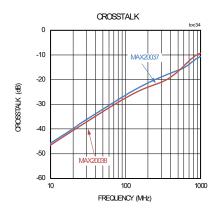

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **Pin Configuration**

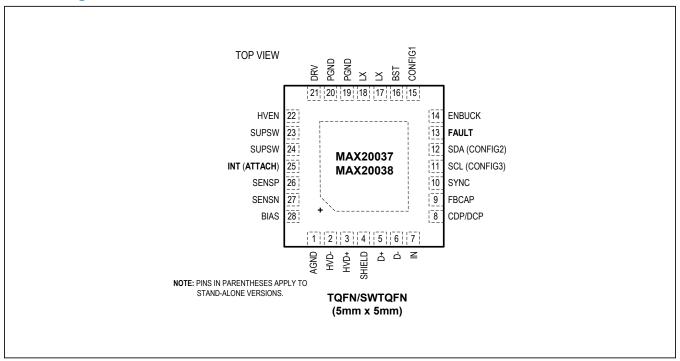

#### **Pin Description**

PIN	NAME	FUNCTION
1	AGND	Analog Ground
2	HVD-	Protected USB Differential Data D- Output. Connect HVD- to the downstream-facing USB connector D- pin.
3	HVD+	Protected USB Differential Data D+ Output. Connect HVD+ to the downstream-facing USB connector D+ pin.
4	SHIELD	USB Captive-Cable Shield Input. See the <u>Applications Information</u> section.
5	D+	USB Differential Data D+ Input. Connect D+ to the upstream-facing, low-voltage USB transceiver D+ pin.
6	D-	USB Differential Data D+ Input. Connect D+ to the upstream-facing, low-voltage USB transceiver D- pin.
7	IN	Logic Enable Input. Connect to I/O voltage of USB transceiver. IN is also used for clamping during overvoltage events on HVD+ or HVD Connect a 2.2µF ceramic capacitor from IN to GND.


# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **Pin Description (continued)**

PIN	NAME	FUNCTION
8	CDP/DCP	Charger-Detection Configuration Pin. Set low for I <sup>2</sup> C-mode default to CDP and for stand-alone CDP operation. Set high for stand-alone DCP operation.
9	FBCAP	External Capacitor Connection. Connect a capacitor to GND to set DC current-sense bandwidth.
10	SYNC	Sync Input/Output for Synchronization with Other Supplies. See the <u>Applications Information</u> section.
11	SCL (CONFIG3)	I <sup>2</sup> C Clock (for I <sup>2</sup> C Variants). For stand-alone variants, connect a resistor to GND and see the <u>Applications Information</u> section for CONFIG3.
12	SDA (CONFIG2)	I <sup>2</sup> C Data (for I <sup>2</sup> C Variants). For stand-alone variants, connect a resistor to GND and see the Applications Information section for CONFIG2.
13	FAULT	Active-Low, Open-Drain Fault-Indicator Output. Connect a 100kΩ pullup resistor to IN.
14	ENBUCK	DC-DC Enable Input. Drive ENBUCK low/high to disable/enable the switching regulator.
15	CONFIG1	Configuration Pin. See the Applications Information section for CONFIG1.
16	BST	High-Side Driver Supply. Connect a 0.1µF capacitor from BST to LX.
17, 18	LX	Inductor Connection. Connect an inductor from LX to the DC-DC converter output (SENSP).
19, 20	PGND	Power Ground
21	DRV	External Capacitor Connection. Connect a 1µF capacitor between DRV and PGND.
22	HVEN	Active-High Enable Input for IC. HVEN is high-voltage compatible. Drive HVEN high for normal operation.
23, 24	SUPSW	Supply Pin for the Internal Linear Regulator and Internal High-Side Switch-Supply Input. SUPSW provides power to the internal switch. Connect a 10µF ceramic capacitor in parallel with a 0.1µF capacitor from SUPSW to PGND. See the <u>DC-DC Input Capacitor Selection</u> section.
25	ĪNT (ĀTTĀCH)	Interrupt Pin (for I <sup>2</sup> C Variants). Open-drain, active-low attach output (for stand-alone variants).
26	SENSP	DC-DC Converter Feedback Input and Current-Sense Amplifier Positive Input. Connect to positive terminal of current-sense resistor (R <sub>SENSE</sub> ) and the main output of the converter. Used for internal voltage-regulation loop.
27	SENSN	Current-Sense Amplifier Negative Input. Connect to negative terminal of current-sense resistor (Rsense).
28	BIAS	5V Linear Regulator Output. Connect a 1μF ceramic capacitor from BIAS to ground. BIAS powers the internal circuitry.
_	EP	Exposed Pad. Connect EP to multiple ground planes with a 3 x 3 via grid.

# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **Typical Operating Circuit**

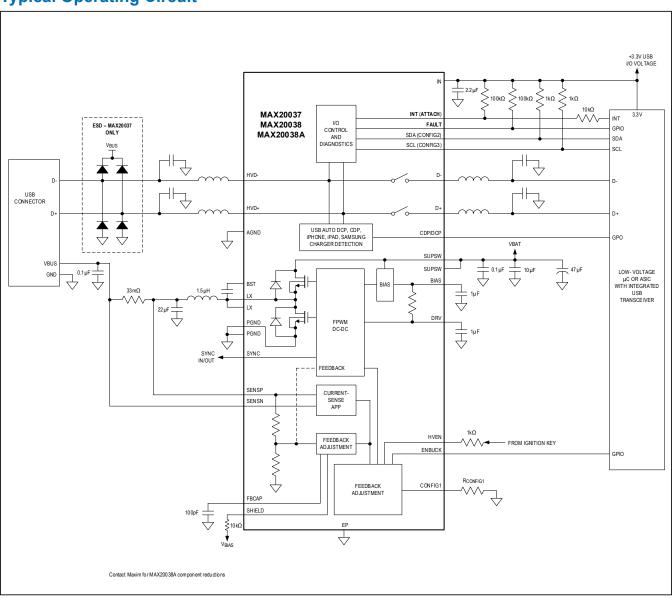

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### **Detailed Description**

The MAX20037/MAX20038 ICs combine a 5V/3.5A (5V/1.5A for MAX20038A) automotive-grade step-down converter, a USB host-charger adapter emulator, and USB protection switches. The device variants offer options for both stand-alone/GPIO and I<sup>2</sup>C configuration and control. This device family is designed for high-power USB ports in automotive radio, navigation, connectivity, USB hub, and dedicated charging applications.

The ICs feature low-voltage, high-bandwidth data switches (MAX20037), and high-voltage, high-ESD data switches (MAX20038). The MAX20037 offers data switch protection for up to 6V, and high-ESD protection with an external ESD array. The MAX20038 offers data switch protection for up to 18V, and high-ESD protection with internal ESD protection circuitry.

The data switches of all device variants protect the sensitive 3.3V pins of the USB transceiver and support USB Low-Speed (1.5Mbps), Full-Speed (12Mbps), and Hi-Speed (480Mbps) communication modes. The internal host-charger port-detection circuitry offer automatic sensing and conformance to multiple standards, including USB-IF BC1.2 CDP/DCP, Apple® 1A/2.4A DCP, Samsung DCP, and China YD/T1591-2009. All variants enable USB-IF OTG, Apple Carplay, and Anroid Auto conformance, while retaining industry-leading protection features and automotive-grade robustness.

The high-efficiency step-down DC-DC converters operate from a voltage up to 28V and are protected from load-dump transients up to 40V. The DC-DC converters can be programmed for, or synced to, switching frequencies from 275kHz to 2.2MHz. The MAX20037/MAX20038 has guaranteed load regulation and accuracy up to 2.4A and under certain conditions can also deliver 3A of continuous current at 105°C.

The ICs feature a high-side current-sense amplifier and programmable feedback-adjustment circuit designed to provide automatic USB voltage adjustment to compensate for voltage drops in captive cables associated with automotive applications. The precision current sense allows for an accurate DC output current limit that minimizes solution component size and cost.

#### Power-Up and Enabling

#### System Enable (HVEN)

HVEN is used as the main enable to the device and initiates system startup and configuration. If HVEN is at a logic-low level, and the system is not configured for hold operation, SUPSW power consumption is reduced and

the device enters a standby low-quiescent current level. HVEN is compatible with inputs from automotive battery level down to 3.3V.

#### DC-DC Enable (ENBUCK)

The buck regulator on the ICs is controlled by the ENBUCK pin for stand-alone variants, and by both the ENBUCK pin and I<sup>2</sup>C interface for I<sup>2</sup>C variants. The DC-DC converter is activated by driving ENBUCK high, when HVEN is high, and disabled by driving ENBUCK or HVEN low. For I<sup>2</sup>C variants, setting ENBUCK low overrides an I<sup>2</sup>C ENBUCK enable command, which allows compatibility with USB hub controllers. For USB hub applications, connect ENBUCK to the enable output of the USB hub controller in a typical application. This allows the USB hub controller to enable and disable the USB power port through software commands. ENBUCK can be directly connected to the BIAS or IN pin for applications that do not require GPIO control of the DC-DC converter enable.

#### 3.3V Input (IN)

IN is used to clamp the D+ and D- pins during an ESD and short-to-BUS/battery event on the HVD+ and HVD- pins. This clamping protects the downstream USB transceiver. Because of this, IN must always be set to 3.3V for USB communication to occur. The IN pin features an overvoltage lockout that disables the data switches if IN is above  $V_{IN\_OVLO}$ . Bypass IN with a 2.2µF ceramic capacitor, placed close to the IN pin, and connect it to the same 3.3V supply that is shared with the multimedia processor or hub transceiver. For dedicated charging applications, IN can be supplied from a resistive divider off the BIAS pin.

#### **Linear Regulator Output (BIAS)**

BIAS is the output of a 5V linear regulator that powers the internal logic and control circuitry for the device. BIAS is internally powered from SUPSW and automatically powers up when HVEN is high and SUPSW voltage exceeds approximately 4.5V. The BIAS output contains an undervoltage lockout that keeps the internal circuitry disabled when BIAS is below V<sub>UV</sub> BIAS. The linear regulator automatically powers down when HVEN is low and the device is not configured for hold mode, and a low 4µA (typ) shutdown current mode is entered. Bypass BIAS to GND with a 1µF ceramic capacitor. To improve efficiency at loaded conditions, the internal linear regulator draws its power from SENSP. This switchover is triggered when the softstart is complete, the DC-DC converter is enabled, and the current-sense attach is triggered. The current-sense attach triggers when 26mA or more current is drawn from  $V_{BUS}$  for  $R_{SENSE}$  = 33m $\Omega$ . Figure 4 describes the conditions for switchover.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### **Linear Regulator Output (DRV)**

DRV is the output of a 5V linear regulator that powers the high-side and low-side MOSFET drivers for the DC-DC converter. DRV is internally powered from SUPSW and powers up automatically when HVEN is high and SUPSW voltage exceeds ~4.5V. The BIAS output contains an undervoltage lockout that keeps the internal circuitry disabled when BIAS is below  $V_{\rm UV\_BIAS}.$  The linear regulator automatically powers down when HVEN is low and the device is not configured for hold mode, and a low  $4\mu A$  (typ) shutdown current mode is entered. Bypass DRV to ground with a  $1\mu F$  ceramic capacitor.

#### **Power-On Sequencing**

Power-on sequence for MAX20037/MAX20038 mandates IN to be set at 3.3V prior to or at the same time as HVEN to allow proper USB communication since D+ and D- pins are clamped to IN. Powering IN after HVEN with a USB device connected will cause USB communication failure. Additionally, while operating in OTG mode to program the SoC for the first time, it is important to have IN powered to 3.3V so that the external device can communicate with the SoC. In OTG mode, the USB device supplies 5V to VBUS. Refer to Figure 8 for valid power-up and power-down sequence.

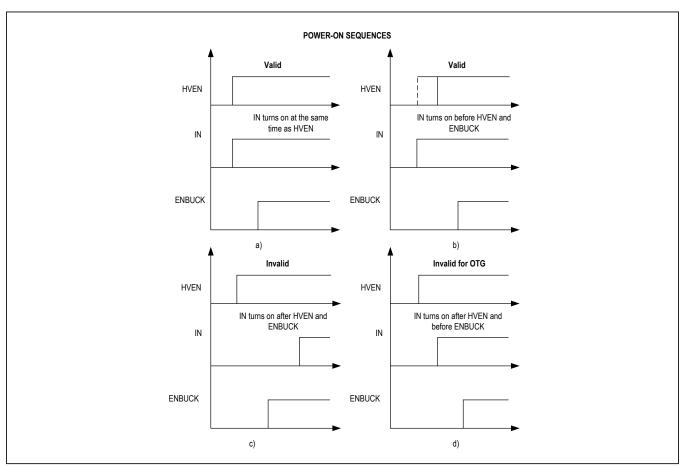


Figure 8. Power-up and power-down sequence

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### Step-Down DC-DC Regulator

#### **Step-Down Regulator**

The ICs feature a current-mode step-down converter with integrated high-side and low-side MOSFETs. The low-side MOSFET enables fixed-frequency, forced-PWM (FPWM) operation under light loads. The ICs operate with 4.5V to 28V input voltages, while using only 4µA (typ) at no load. In no-load applications, the device can be operated in either skip mode for reduced current consumption, or fixed-frequency, FPWM mode to eliminate frequency variation and help minimize EMI. The DC-DC converter features a cycle-by-cycle current limit, and intelligent transition from skip mode to FPWM mode, which makes the ICs ideal for automotive applications.

#### Wide Input Voltage Range

The ICs are specified for a wide 4.5V to 28V input voltage range. SUPSW provides power to the internal BIAS linear regulator and internal power switch. Certain conditions such as cold crank can cause the voltage at the output to drop below the programmed output voltage. Under such conditions, the ICs operate in a high duty-cycle mode to facilitate minimum dropout from input to output.

#### **Maximum Duty-Cycle Operation**

The ICs have a maximum duty cycle of 98% (typ). The device monitors the off-time (time for which the low-side FET is on) in both PWM and skip modes for every switching cycle. Once the off-time of 150ns (typ) is detected continuously for 12µs, the low-side FET is forced on for 150ns (typ) every 12µs. The input voltage at which the ICs enter dropout changes depending on the input voltage, output voltage, switching frequency, load current, and the efficiency of the design. The input voltage at which the ICs enter dropout can be approximated, as shown in Equation 1.

#### **Equation 1:**

$$V_{SUP} = \frac{V_{OUT} + (I_{OUT} \times R_{ONH})}{0.98}$$

**Note:** Equation 1 does not take into account the efficiency and switching frequency, but provides a good first-order approximation. Use the R<sub>ONH</sub> number from the max column in the *Electrical Characteristics* table.

#### **Output Voltage (SENSP)**

The ICs feature a precision internal-feedback network connected to SENSP that is used to set the output voltage of the DC-DC converter. The network nominally sets the average DC-DC converter output voltage to the voltage that corresponds to the VOUT[2:0] bits of the SETUP\_1 register, with a default of 5.1V.

#### Soft-Start

When the DC-DC converter is enabled, the regulator softstarts by gradually ramping up the output voltage from 0 to 5.15V in ~4ms. This soft-start feature reduces inrush current during startup. Soft-start is guaranteed into compliant USB loads (see the *USB Loads* section).

#### **Reset Behavior**

The ICs implement a discharge function on SENSN any time the DC-DC converter is disabled for any reason, except when a SENSN overvoltage condition is detected. When the discharge function is activated, a reset timer (tsensn\_discounting) is also started. The DC-DC converter is internally disallowed from starting up again until after the reset timer has expired. This allows for easy compatibility with USB specifications, and removes the need for long discharge algorithms implemented in system software.

#### **Reset Criteria**

The ICs' DC-DC converter automatically resets for all undervoltage, overvoltage, overcurrent, and overtemperature fault conditions, as well as for any change in the CDP/DCP pin, or the CD1 bit of the SETUP\_3 register. See Table 1 for more information.

#### **Switching-Frequency Configuration**

The DC-DC switching frequency can be configured by the internal oscillator or by an external clock on the SYNC pin, and the SYNC pin can be configured as either an input or an output. The internal oscillator frequency is set by the FSW[2:0] bits of the SETUP\_2 register, which has a POR value corresponding to 2.2MHz. For stand-alone variants, the fSW configuration value is loaded from the CONFIG1 pin at startup. The internal oscillator can be programmed for eight discrete values, from 275kHz to 2.2MHz.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

**Table 1. FAULT Conditions** 

EVENT	ERROR_1 REGISTER BITS (I2C ONLY)	ACTION TAKEN
Thermal Fault	T_SHDN	Immediately assert FAULT pin/associated bit in ERROR_1 register, and shut down DC-DC converter. After fault no longer exists for 16ms, release FAULT pin and enable DC-DC converter.
Thermal Warning	T_WARN	Immediately assert FAULT pin/associated bit in ERROR_1 register. After fault no longer exists for 16ms, release FAULT pin.
HVD± Overvoltage	DATA_OV	Immediately open data switches. Assert FAULT pin and associated bit in ERROR_1 register after fault persists for 16ms. After fault no longer exists for 16ms, release FAULT pin and close data switches.
USB DC Overcurrent	BUS_ILIM	Assert FAULT pin/associated bit in ERROR_1 register bit after overcurrent condition persists for 16ms. After overcurrent no longer exists, immediately release FAULT pin.
SENSN < 4.75V	BUS_UV	Assert FAULT pin/associated bit in ERROR_1 register after undervoltage condition persists for 16ms. After UV no longer exists, immediately release FAULT pin.
USB DC Overcurrent and SENSN < 4.75V	BUS_ILIM and BUS_UV	Assert FAULT pin/associated bit in ERROR_1 register and shut down DC-DC converter after overcurrent and undervoltage conditions persist for 16ms. Release FAULT pin and restart DC-DC converter 16ms after shutdown.
USB DC Overcurrent and SENSN < 2.0V	BUS_STG	Immediately assert FAULT pin/associated bit in ERROR_1 register and shut down DC-DC converter. Release FAULT pin and restart DC-DC converter 16ms after shutdown.
LX Overcurrent for 4 Consecutive Cycles and SENSN < 2.0V	BUS_STG	Immediately assert FAULT pin/associated bit in ERROR_1 register and shut down DC-DC converter. Release FAULT pin and restart DC-DC converter 16ms after shutdown.
SENSN Overvoltage	BUS_OV	Assert FAULT pin/associated bit in ERROR_1 register and disable DC-DC converter 3µs after overvoltage condition detected. Release FAULT pin and restart DC-DC converter immediately after overvoltage condition is removed.
IN Overvoltage	IN_OV	Immediately assert FAULT pin/associated bit in ERROR_1 register and disable data switches. Release FAULT pin and close data switches immediately after overvoltage condition is removed.

#### **Switching-Frequency Synchronization (SYNC)**

When SYNC is configured to operate as an output, skip-mode operation is disallowed, and the internal oscillator frequency is driven out of the SYNC pin, allowing other devices to synchronize with the MAX20037/MAX20038 ICs.

When SYNC is configured as an input, the SYNC pin becomes a logic-level input that can be used for both operating-mode selection and frequency control. Connecting SYNC to a logic-high signal or an external clock enables fixed-frequency, FPWM mode. Connecting SYNC to AGND allows intelligent skip-mode operation. The ICs can be externally synchronized to frequencies within ±20% of the programmed internal oscillator frequency.

#### Forced-PWM (FPWM) Operation

In FPWM mode, the ICs maintain fixed-frequency PWM operation over all load conditions, including no-load conditions.

## Intelligent Skip-Mode Operation and Device-Attach Detection

When the SYNC pin is configured as an input, but neither a clocked signal nor a logic-high level exists on the SYNC pin, the ICs operate in skip mode at very light load/no-load conditions. Intelligent device-attach detection is used to determine when a device is attached to the USB port. The device intelligently exits skip mode and enters FPWM mode when a device is attached, and remains in

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Table 2. DC-DC Converter Intelligent Skip Mode Truth Table

SYNC PIN	SYNC_ DIR BIT	DATA SWITCH CHARGE- DETECTION MODE	CDP ATTACH DETECTION		DC CURRENT SENSE	DC-DC CONVERTER OPERATION
х	0	Х	х	х	Х	Forced-PWM Mode: Continuous
1	1	Х	х	х	Х	Forced-PWM Mode: Continuous
Clocked	1	Х	х	х	Х	Forced-PWM Mode: Continuous
0	1	High-Speed Pass-Through (SDP) Mode	x	х	0	Intelligent Skip Mode: No device attached
0	1	High-Speed Pass-Through (SDP) Mode	х	х	1	Forced-PWM Mode: Device attached
0	1	BC1.2 Auto CDP Mode	0	х	0	Intelligent Skip Mode: No device attached
0	1	BC1.2 Auto CDP Mode	1	х	Х	Forced-PWM Mode: Device attached
0	1	BC1.2 Auto CDP Mode	х	х	1	Forced-PWM Mode: Device attached
0	1	1A / 2.4A Auto DCP Modes	х	0	0	Intelligent Skip Mode: No device attached
0	1	1A / 2.4A Auto DCP Modes	Х	1	Х	Forced-PWM Mode: Device attached
0	1	1A / 2.4A Auto DCP Modes	х	Х	1	Forced-PWM Mode: Device Attached

Note: SYNC DIR = 0b is output, 1b is input.

FPWM mode as long as the attach signal persists. This minimizes EMI and the concerns caused by automotive captive USB cables and poorly shielded consumer USB cables. The device-attach event is also signaled by the ATTACH pin (stand-alone variants) or ATTACH bit (I<sup>2</sup>C variants). The criteria for device-attach detection and intelligent skip-mode operation are shown in Table 2.

#### **Spread-Spectrum Option**

Spread-spectrum operation is offered to improve EMI performance of the MAX20037/MAX20038. Spread-spectrum operation is enabled by the SS\_EN bit of the SETUP\_1 register, which is pre-loaded on startup from the CONFIG1 pin for both stand-alone and I<sup>2</sup>C variants. The internal operating frequency modulates up to ±3.25% relative to the internally generated operating frequency, resulting in a total spread-spectrum range of 6.5%. Spread-spectrum mode is only active when operating from the internal oscillator. Spread-spectrum clock dithering is not possible when operating from an external clock.

#### **Current Limit**

The ICs limit the USB load current using both a fixed internal peak current threshold of the DC-DC converter and a user-programmable external DC load currentsense amplifier threshold (see the section). This allows the current limit to be adjusted between 300mA and 3A (between 300mA and 1.63A for MAX20038A) depending on application requirements and protects the DC-DC converter in the event of a fault. Upon exceeding either the DC-DC peak or user-programmable current thresholds, the high-side FET is immediately turned off and current-limit algorithms are initiated. When the external current limit lasts for longer than 16ms (typ,) the FAULT pin asserts and the BUS ILIM bit of the ERROR 1 register is set. The ILIM\_ITRIP bit of the SETUP\_4 register determines the output-voltage droop required to initiate a DC-DC converter reset during current-limit behavior. If both the USB current limit is detected and the output voltage falls below the reset threshold for longer than 16ms (typ), the DC-DC converter resets.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Furthermore, if the internal LX peak-current threshold is exceeded for four consecutive switching cycles and the output voltage is less than 2.0V, the DC-DC converter resets. In some cases, the designer may want to increase the load to 160%, refer to <u>USB Output Current Limit</u> for details.

#### **Output Short-Circuit Protection**

The DC-DC converter output (SENSP, SENSN) of all variants is protected against both short-to-ground and short-to-battery conditions. If a short-to-ground or under-voltage condition is encountered, the DC-DC converter immediately resets, asserts the FAULT pin, flags the fault in the ERROR\_1 register, and reattempts soft-start after the reset delay. This pattern repeats until the short circuit has been removed.

If a short-to-battery ( $V_{SENSN} > V_{OV\_SENSN}$ ) is encountered, the device stops switching, the FAULT pin is asserted, and the fault is flagged in the ERROR\_1 register. This behavior persists as long as the overvoltage condition exists on SENSP.

#### **Thermal-Overload Protection**

The thermal-overload protection limits the total power dissipation in the ICs. A thermal-protection circuit monitors the die temperature. If the die temperature exceeds +175°C, the device shuts down, allowing it to cool. Once the device has cooled by 15°C, it is enabled again. This results in a pulsed output during continuous thermal-overload conditions. The thermal-overload protection protects the device in the event of fault conditions. For continuous operation, do not exceed the absolute maximum junction temperature of +150°C. See the *Package Information* section for more information.

#### **Pre-Thermal Overload Warning**

The I<sup>2</sup>C variants of the ICs feature a thermaloverload warning feature that sets the T\_WARN bit of the ERROR\_1 register when the die temperature crosses +145°C. This allows system software implementation of thermal-foldback/load-shedding behavior to prevent a thermal-overload condition.

#### **Hold Mode**

When hold mode is enabled, the device retains accessory power for the duration of an internal timer. The timer begins when HVEN goes low and hold mode is enabled. When the timer expires, the device transitions into the

low-Q shutdown mode. **Note:** Hold mode is not available on part variants with the ATID suffix.

## USB Current Limit and Output-Voltage Adjustment

#### **Current-Sense Amplifier (SENSP, SENSN)**

The ICs feature an internal USB load current-sense amplifier to monitor the DC load current delivered to the USB port. The (VSENSP - VSENSN) voltage is used internally to provide precision DC current limit and voltage-compensation functionality. A  $33m\Omega$  sense resistor (RSENSE) should be placed between SENSP and SENSN. In some cases, the designer may want to increase the load to 160%, refer to <u>USB Output Current Limit</u> for details.

#### **USB DC Current-Limit Configuration**

The I<sup>2</sup>C variants of the ICs allow configuration of the precision DC current limit by the ILIM[2:0] bits of the SETUP\_4 register. I<sup>2</sup>C configuration enables selection of eight discrete DC current-limit values.

Stand-alone variants of the ICs allow a selection of a subset of the eight available current-limit options by use of the CONFIG3 resistor. See the *Control and Diagnostics* section for more information. In some cases, the designer may want to increase the load to 160%, refer to <u>USB</u> Output Current Limit for details.

#### **Voltage Feedback-Adjustment Configuration**

The ICs allow voltage-droop compensation for up to  $600m\Omega$  of USB cable in typical USB charging applications. I<sup>2</sup>C variants of the ICs allow this configuration by the GAIN[4:0] bits of the SETUP 2 register.

Stand-alone variants of the ICs allow configuration by the CONFIG2 resistor, which sets the GAIN[3:0] LSBs, and the CONFIG3 resistor, which sets the GAIN[4] MSB. See the *Control and Diagnostics* section for more information. In some cases, the designer may want to increase the load to 160%, refer to *USB Output Current Limit* for details.

#### **High-Voltage Modes Configuration**

The I<sup>2</sup>C variants of the ICs allow high output-voltage-mode configurations for flexibility of use in higher power-charging applications and for load-dump-protected battery output to automotive modules. See <u>Table 9</u> for configuration information.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **USB Protection Switches and Host-Charger Adapter Emulation**

#### **HVD+ and HVD- Protection**

The ICs provide automotive-grade ESD and short-circuit protection for the low-voltage internal USB data lines of high-integration multimedia processors. HVD+/HVD-protection consists of ESD and overvoltage protection (OVP) for 1.5Mbps, 12Mbps, and 480Mbps USB transceiver applications. This is accomplished with a very low-capacitance FET in series with the D+ and D- data paths.

External ESD diodes are required when using the MAX20037 low-voltage, high-bandwidth variant. With this external protection, the HVD+ and HVD- pins are protected to  $\pm 15$ kV Air Gap/ $\pm 8$ kV Contact Discharge with the IEC 61000-4-2 model and 330 $\Omega$ , 330pF model.

The MAX20038 high-voltage variant does not require an external ESD array and protects the HVD+ and HVD- pins to  $\pm 15 \text{kV}$  Air Gap/ $\pm 8 \text{kV}$  Contact Discharge with the IEC 61000-4-2 model and 330 $\Omega$ , 330pF model.

The HVD+ and HVD- short-circuit protection features include protection for short to the USB +5V BUS on all variants, and protection for short to +18V car battery for the MAX20038 high-voltage variant. These protection features prevent damage of the low-voltage USB transceiver when shorts occur in the vehicle harness or customer USB connector/cable. Short-to-ground protection is provided by the upstream USB transceiver.

#### **USB Host Adapter Emulator**

The USB protection switches integrate the latest USB-IF Battery Charging Specification Revision 1.2 CDP and DCP circuitry, as well as 1.0A and 2.4A resistor bias options for Apple-compliant devices. Legacy Samsung Galaxy 1.2V divider and China YD/T1591-2009 compatibility are also provided by the DCP modes.

#### **HVD+ and HVD- Modes of Operation**

The ICs feature four discrete modes of operation. I<sup>2</sup>C variants allow selection of all four modes by the CD[1:0] bits of the SETUP\_3 register. The CDP/DCP pin should be set low for I<sup>2</sup>C operation. See <u>Table 3a</u> for configuration information.

Stand-alone variants allow selection of two modes by the CDP/DCP pin. See <u>Table 3b</u> for configuration information. Custom CDP/DCP pin behavior is available; contact Maxim applications support for more information.

Note that for all variants, changing device role between a communication mode (SDP/CDP) and a dedicated charging mode (DCP) initiates a device reset to comply with USB specifications and ensure proper device detection.

#### **USB On-The-Go and Dual-Role Applications**

MAX20037 and MAX20038 are fully compatible with USB On-The-Go (OTG) and dual-role applications.

Care must be taken when selecting the IC variant. Ensure compatibility with your specific dual-role application (see <u>Table 3b</u>, <u>Table 3c</u>, and the <u>Ordering Information</u> section); contact Maxim applications support for more information.

In instances where there is no host negotiation, and the head-unit SOC is functioning as the initial peripheral, the IC must first be placed into Hi-Speed pass-through (SDP) mode. This has implications on what mode the device should default to upon startup, and the basic functionality of the CDP/DCP pin. If the SOC retains the ability to write registers through the I<sup>2</sup>C bus before and/or during peripheral mode, then either I<sup>2</sup>C variant will be successful, with the ATIA variant generally being preferred. If the SOC cannot write to the CD[1:0] register before it enters peripheral mode, the IC must start into SDP mode after an HVEN toggle. This will allow a role swap without microcontroller interaction with the IC. This is necessary if the head unit is booted with an unprogrammed SOC waiting to be programmed through the protected USB port.

In an initial peripheral application that uses a stand-alone version, the IC must have the ability to switch between SDP and BC1.2 Auto-CDP (CDP) modes using the CDP/DCP pin. This is only available on the ATID variant. Similarly, if there is the potential for a peripheral-mode SOC without GPIO control, the CDP/DCP pin should be pulled down to default to Hi-Speed SDP mode.

Table 3a. Data Switch Mode Truth Table (I<sup>2</sup>C Version)

		DEVICE IN	PUTS					
HVEN	IN	CD1 BIT	CD0 BIT	CDP/DCP PIN	SA	SB	DATA SWITCH MODE	
0	Х	Х	X	X	0	0	Off	
Х	0	Х	Х	Х	0	0	Off	
1	1	Х	Х	1	0	1	Invalid mode (CDP/DCP pin = 0 required for I <sup>2</sup> C variant)	
1	1	0	0	0	1	0	Hi-Speed pass-through (SDP) mode	
1	1	0	1	0	On if CDP = 0	On if CDP=1	BC1.2 Auto-CDP mode (CDP)	
1	1	1	0	0	0	1	Auto BC1.2/SSG/Apple 2.4A (DCP)	
1	1	1	1	0	0	1	Auto BC1.2/SSG/Apple 1A (DCP)	

### **Table 3b. Data Switch Mode Truth Table (Stand-Alone)**

	DEVICE INPUTS					
DEVICESUFFIX	HVEN	IN	CDP/DCP PIN	SA	SB	DATA SWITCH MODE
Х	0	Х	Х	0	0	Off
X	1	0	0	0	0	Invalid mode (IN +3.3V required for SDP/CDP)
ATIB	1	1	0	On if CDP = 0	On if CDP=1	BC1.2 auto-CDP mode (CDP)
ATIB	1	Х	1	0	1	Auto BC1.2/SSG/Apple 2.4A (DCP)
ATID	1	1	0	1	0	Hi-Speed pass-through mode (SDP)
ATID	1	1	1	On if CDP = 0	On if CDP=1	BC1.2 auto-CDP Mode (CDP)
ATIE	1	1	0	1	0	Hi-Speed pass-through mode (SDP)
ATIE	1	1	1	0	1	Auto BC1.2/SSG/Apple 2.4A (DCP)

## Table 3c. Default Data Switch Mode on HVEN Toggle (I<sup>2</sup>C Version)

		DEVICE INPUTS	3		
DEVICESUFFIX	HVEN	N IN CDP/DCP PIN		DATA SWITCH MODE	
Х	1	×	1	Invalid mode (CDP/DCP pin = 0 required for I <sup>2</sup> C variant)	
ATIA	1	1	0	BC1.2 auto-CDP (CDP) mode	
ATIC	1	1	0	Hi-Speed pass-through (SDP) mode	

# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

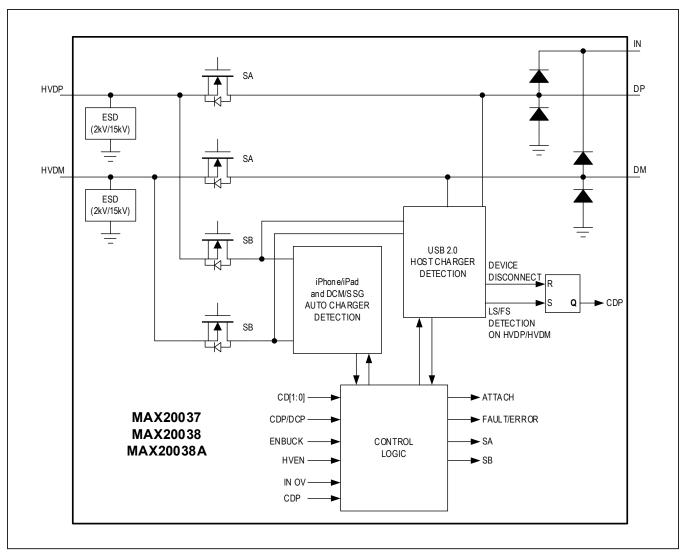


Figure 9. Data Switch and Charge-Detection Block Diagram

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### **Control and Diagnostics**

#### I<sup>2</sup>C Configuration (CONFIG1 and I<sup>2</sup>C)

The I<sup>2</sup>C variants of the ICs allow basic device configuration from a resistor placed close to ground on the CONFIG1 pin. The configuration parameters correlating to the chosen resistor are loaded in to their respective I<sup>2</sup>C registers on startup when HVEN is toggled high, causing a device transition from shutdown to a powered state. After startup, the user is free to change the affected I<sup>2</sup>C registers as desired. See Table 4 for I<sup>2</sup>C slave addresses.

For I<sup>2</sup>C variants, CONFIG1 sets the startup value of the DC-DC spread-spectrum enable bit (SS\_EN) and the SYNC direction control bit (SYNC\_DIR). CONFIG1 also sets the LSB of the I<sup>2</sup>C slave address. The configuration table for the I<sup>2</sup>C variant CONFIG1 pin is shown in <u>Table 5</u>. See <u>Table 7b</u> for resistor value selection. See <u>Ordering Information</u> for I<sup>2</sup>C variant part number information.

## Stand-Alone Configuration (CONFIG1–CONFIG3)

The stand-alone variants of the ICs allow full device configuration from three resistors placed between the three CONFIG\_ pins and ground. For stand-alone variants, SDA and SCL serve as CONFIG2 and CONFIG3, respectively.

For stand-alone variants, CONFIG1 sets the internal oscillator switching frequency, the SYNC pin direction, and enables/disables DC-DC spread-spectrum mode. The configuration table for the stand-alone variant CONFIG1 pin is shown in Table 6.

CONFIG2 sets the four LSBs of the voltage gain configuration GAIN[3:0]. CONFIG3 sets the USB DC current limit, enables/disables Hold mode functionality, and sets the MSB of voltage gain configuration GAIN[4]. **Note:** Hold mode is not available on part variants with the ATID suffix. Enabling hold mode with the CONFIG2 resistor will have no effect on these variants. See <u>Table 7a</u> for stand-alone variants' CONFIG2 and CONFIG3 options. See the <u>Applications Information</u> section for resistor value selection.

Note that device configurations are limited for standalone variants; full device configuration is available on I<sup>2</sup>C variants. See the *Applications Information* section for resistor value selection. See *Ordering Information* for I<sup>2</sup>C vs. stand-alone variant part number information. In some cases, the designer may want to increase the load to 160%, refer to *USB Output Current Limit* for details.

#### Fault Detection and I<sup>2</sup>C Diagnostics

The ICs feature advanced device-protection features with automatic fault handing and recovery. Table 1 summarizes the conditions that generate a fault, and actions taken by the device. For all variants, the FAULT output remains asserted as long as a fault condition persists.

For I<sup>2</sup>C variants, the ERROR\_1/ERROR\_2 registers provide detailed information on the source of the fault condition, and the IRQMASK\_0/IRQMASK\_1 registers allow selection of the criteria for assertion of the I<sup>2</sup>C interrupt pin (INT). The ERROR\_1/ERROR\_2 registers' bits are clear on read; however, the error bits respective to a present fault condition continue to reassert after clear as long as the fault condition persists. If the IRQMASK0/IRQMASK1 registers are configured to assert INT for a present fault, the INT pin deasserts upon read of the respective ERROR\_ register, and subsequently reasserts if the fault condition still persists.

#### Fault Output Pin (FAULT)

The ICs feature an open-drain, active-low FAULT output and are designed to eliminate false FAULT reporting by using an internal deglitch and fault blanking timer. This ensures FAULT is not incorrectly asserted during normal operation, such as starting into heavy capacitive loads. The FAULT pin is designed such that it can be connected directly to the overcurrent fault input of a hub controller or SoC. See Table 1 for more information.

#### Attach Output Pin (ATTACH)

The ICs feature an open-drain, active-low output which serves as the Attach Detection pin (ATTACH) for standalone variants, and the Interrupt pin (INT) for I<sup>2</sup>C variants. For stand-alone variants, the ATTACH pin can be used for GPIO input to a microprocessor, or to drive an LED for attach/charge indication.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Table 4. I<sup>2</sup>C Slave Addresses

CONFIG1 CODE	A6	<b>A</b> 5	A4	А3	A2	<b>A</b> 1	Α0	7-BIT ADDRESS	WRITE	READ
00	0	1	1	0	0	0	0	0x30	0x60	0x61
01	0	1	1	0	0	0	1	0x31	0x62	0x63
10	0	1	1	0	0	1	0	0x32	0x64	0x65
11	0	1	1	0	0	1	1	0x33	0x66	0x67

Table 5. CONFIG1 Pin Table (I<sup>2</sup>C Version)

Table 6: 90111 101 1 III Table (1 9 Version)					
STEP	SPREAD- SPECTRUM ENABLE	I <sup>2</sup> C ADDRESS LSBs	SYNC PIN DIRECTION		
0	Yes	00	Input		
1	Yes	01	Input		
2	Yes	10	Input		
3	Yes	11	Input		
4	Yes	00	Output		
5	Yes	01	Output		
6	Yes	10	Output		
7	Yes	11	Output		
8	No	00	Input		
9	No	01	Input		
10	No	10	Input		
11	No	11	Input		
12	No	00	Output		
13	No	01	Output		
14	No	10	Output		
15	No	11	Output		

Table 6. CONFIG1 Pin Table (Stand-Alone Variants)

STEP	SPREAD- SPECTRUM ENABLE	SWITCHING FREQUENCY (kHz)	SYNC PIN DIRECTION
0	Yes	2200	Input
1	Yes	488	Input
2	Yes	350	Input
3	Yes	310	Input
4	Yes	2200	Output
5	Yes	488	Output
6	Yes	350	Output
7	Yes	310	Output
8	No	2200	Input
9	No	488	Input
10	No	350	Input
11	No	310	Input
12	No	2200	Output
13	No	488	Output
14	No	350	Output
15	No	210	Output

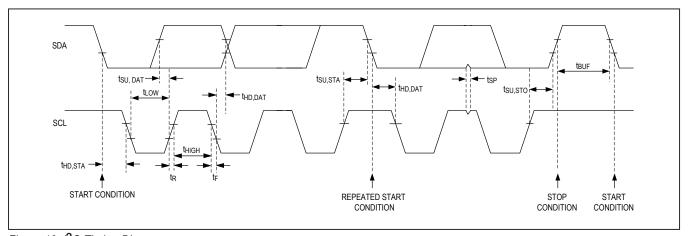


Figure 10. I<sup>2</sup>C Timing Diagram

# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Table 7a. CONFIG2 and CONFIG3 Pin Table (Stand-Alone Variants)

	CONFIG2 PIN	CONFIG3 PIN						
STEP	GAIN[3:0] LSBs PROGRAMMED VALUE	GAIN[4] MSB PROGRAMMED VALUE	ILIM (min) PROGRAMMED VALUE	HOLD-MODE ENABLE (ATIB, ATIE ONLY)				
0	0000	0	0.57A	No				
1	0001	0	1.56A	No				
2	0010	0	2.57A	No				
3	0011	0	3.06A	No				
4	0100	1	0.57A	No				
5	0101	1	1.56A	No				
6	0110	1	2.57A	No				
7	0111	1	3.06A	No				
8	1000	0	0.57A	Yes (60min)				
9	1001	0	1.56A	Yes (60min)				
10	1010	0	2.57A	Yes (60min)				
11	1011	0	3.06A	Yes (60min)				
12	1100	1	0.57A	Yes (60min)				
13	1101	1	1.56A	Yes (60min)				
14	1110	1	2.57A	Yes (60min)				
15	1111	1	3.06A	Yes (60min)				

### Table 7b. CONFIG1 - CONFIG3 Resistor Selection (All Variants)

STEP	EXTERNAL RESISTOR (E96 1%)
0	Short to ground
1	619Ω
2	953Ω
3	1.33kΩ
4	1.82kΩ
5	2.32kΩ
6	3.01kΩ
7	3.83kΩ
8	4.87kΩ

STEP	EXTERNAL RESISTOR (E96 1%)
9	6.19kΩ
10	8.06kΩ
11	10.7kΩ
12	15kΩ
13	23.2kΩ
14	44.2kΩ
15	Connect to BIAS (or R > 71.5kΩ)

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### I<sup>2</sup>C Diagnostics and Event Handling

The I<sup>2</sup>C-based diagnostic functionality of I<sup>2</sup>C variants is independent of the FAULT pin. Setting the IRQMASK bit for a specific fault condition does not mask the FAULT pin for the respective fault. IRQMASK register functionality affects only the behavior of the INT pin vs. respective ERROR\_ register bits. This allows the FAULT pin to be tied to overcurrent fault input of a hub controller or SoC, while the I<sup>2</sup>C interface is simultaneously used by the system software for advanced diagnostic functionality.

#### I<sup>2</sup>C Output Voltage and Current Measurement

The I2C variants of the IC allow measurement of the instantaneous SENSP voltage and DC output current. To initiate a measurement, set the IV READ bit of the SETUP\_4 register. The IV\_READ bit is cleared when the measurement is complete and the ADC DONE bit of the ERROR 2 register is set. Additionally, the IV INT bit of the SETUP 4 register can be set, which forces an interrupt. The completed measurement can be read from the USB V and USB I registers. The measured voltage provides 8 bits of resolution. When VOUT[2:0] is set to zero, the range of the ADC is 0 to 7.92V, and the SENSN voltage can be calculated in volts as (7.92/256) x USB V. When VOUT[2:0] is not set to zero, the range is from 0 to 19.8V and the SENSN voltage can be calculated in volts as (19.8/256) x USB V. The measured DC current also has 8 bits of resolution and can be calculated in amperes as ((0.1/256) x USB I)/R<sub>SENSE</sub>.

#### I<sup>2</sup>C Interface Specification

The ICs feature an I<sup>2</sup>C, 2-wire serial interface consisting of a serial-data line (SDA) and a serial-clock line (SCL). SDA and SCL facilitate communication between the ICs and the master at clock rates up to 400kHz. The master, typically a microcontroller, generates SCL and initiates data transfer on the bus. Figure 11 shows the 2-wire interface timing diagram.

A master device communicates to the ICs by transmitting the proper address followed by the data word. Each transmit sequence is framed by a START (S) or Repeated START (Sr) condition and a STOP (P) condition. Each word transmitted over the bus is 8 bits long and is always followed by an acknowledge clock pulse.

The ICs' SDA line operates as both an input and an open-drain output. A pullup resistor, greater than  $500\Omega$ , is required on the SDA bus. The ICs' SCL line operates as an input only. A pullup resistor >  $500\Omega$  is required on SCL if there are multiple masters on the bus, or if the master in a single-master system has an open-drain SCL output. Series resistors in line with SDA and SCL are optional. The SCL and SDA inputs suppress noise spikes to assure proper device operation even on a noisy bus.

#### **Bit Transfer**

One data bit is transferred during each SCL cycle. The data on SDA must remain stable during the high period of the SCL pulse. Changes in SDA while SCL is high are control signals (see the <u>STOP and START Conditions</u> section). SDA and SCL idle high when the I<sup>2</sup>C bus is not busy.

#### **STOP and START Conditions**

A master device initiates communication by issuing a START condition. A START condition is a high-to-low transition on SDA with SCL high. A STOP condition is a low-to-high transition on SDA while SCL is high (Figure 12). A START (S) condition from the master signals the beginning of a transmission to the ICs. The master terminates transmission, and frees the bus, by issuing a STOP (P) condition. The bus remains active if a Repeated START (Sr) condition is generated instead of a STOP condition.

#### **Early STOP Condition**

The ICs recognize a STOP condition at any point during data transmission except if the STOP condition occurs in the same high pulse as a START condition.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

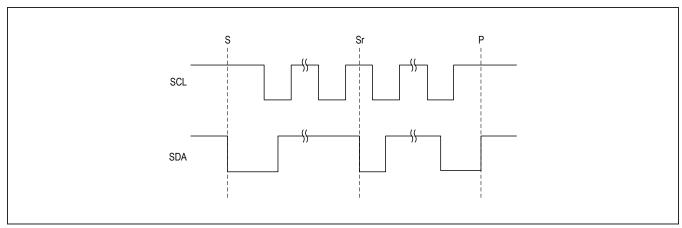


Figure 11. START, STOP, and Repeated START Conditions

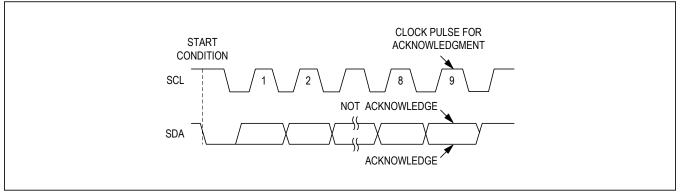


Figure 12. Acknowledge Condition

#### **Clock Stretching**

In general, the clock-signal generation for the I<sup>2</sup>C bus is the responsibility of the master device. The I<sup>2</sup>C specification allows slow slave devices to alter the clock signal by holding down the clock line. The process in which a slave device holds down the clock line is typically called clock stretching. The ICs do not use any form of clock stretching to hold down the clock line.

#### I<sup>2</sup>C General Call Address

The ICs do not implement the I<sup>2</sup>C specifications "general call address." If the ICs see the general call address (0b0000\_0000), it does not issue an acknowledge.

#### **Slave Address**

Once the device is enabled, the  $I^2C$  slave address is set by the CONFIG1 pin.

The address is defined as the 7 most significant bits (MSBs) followed by the R/W bit. Set the R/W bit to 1 to configure the devices to read mode. Set the R/W bit to 0 to configure the device to write mode. The address is the first byte of information sent to the devices after the START condition.

#### Acknowledge

The acknowledge bit (ACK) is a clocked 9th bit that the device uses to handshake receipt each byte of data (Figure 13). The device pulls down SDA during the master-generated 9th clock pulse. The SDA line must remain stable and low during the high period of the acknowledge clock pulse. Monitoring ACK allows for detection of unsuccessful data transfers. An unsuccessful data transfer occurs if a receiving device is busy or if a system fault has occurred. In the event of an unsuccessful data transfer, the bus master can reattempt communication.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

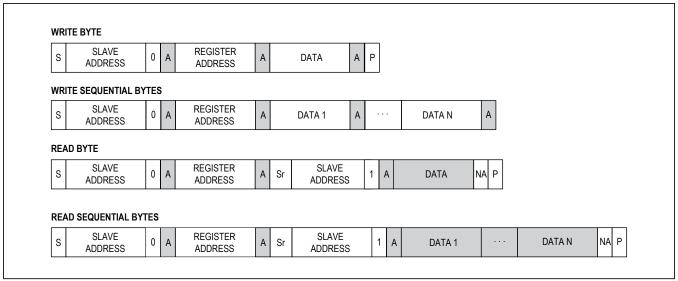


Figure 13. Data Format of I2C Interface

#### Write Data Format

A write to the device includes transmission of a START condition, the slave address with the write bit set to 0, one byte of data to register address, one byte of data to the command register, and a STOP condition. Figure 14 illustrates the proper format for one frame.

#### **Read Data Format**

A read from the device includes transmission of a START condition, the slave address with the write bit set to 0, one byte of data to register address, restart condition, the slave address with read bit set to 1, one byte of data to the command register, and a STOP condition. Figure 14 illustrates the proper format for one frame.

#### I<sup>2</sup>C Configuration and Control

#### Interrupt Handling

The ICs'  $\overline{\text{ATTACH}}$  pin functions as an interrupt ( $\overline{\text{INT}}$ ) for I<sup>2</sup>C variants. The  $\overline{\text{INT}}$  pin asserts on interrupts based on the configuration of the IRQMASK\_0 and IRQMASK\_1 registers. Interrupt configuration allows the  $\overline{\text{INT}}$  pin to assert any of the featured fault detections, as well as on device attach/detach, and for USB voltage/current ADC conversion completion.

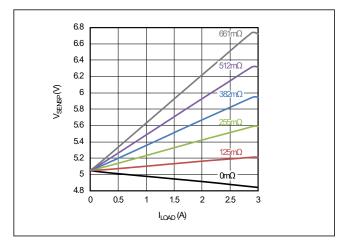


Figure 14. Increase in SENSP vs. USB Current

#### **Register Map**

The I<sup>2</sup>C variants of the ICs allow full control of device features through the use of 11 8-bit registers. Stand-alone variants preload the SETUP\_ registers from the resistors populated on the CONFIG1—CONFIG3 pins as detailed in the *Applications Information* section.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Table 8. I<sup>2</sup>C Register Map

REGISTER	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0	CMD	R/W	POR
SETUP_1	- RSVD EN_DCDC			VOUT[2:0]			SSEN	0x00	R/W	*	
SETUP_2		FSW[2:0]			GAIN[4:0]						0x00
SETUP_3	CD[	1:0]	HOLD_EN	RSVD	HOL	D[1:0]	RSVD		0x02	R/W	**
SETUP_4	AUTOCLR	IV_READ	IV_INT	VOUT_PR	ILIM_ITRIP		ILIM[2:0]		0x03	R/W	0x17
IRQMASK_0	ATTACH	BUS_UV	DATA_OV	BUS_ILIM	BUS_OV	BUS_STG	T_WARN	T_SHDN	0x04	R/W	0x00
IRQMASK_1	_	_	_	_	_	_	_	IN_OV	0x05	R/W	0x00
STATUS	ATTACH	CFG_OK	_	_	_	_	_	_	0x06	R	0x00
ERROR_1	ATTACH	BUS_UV	DATA_OV	BUS_ILIM	BUS_OV	BUS_STG	T_WARN	T_SHDN	0x07	R	0x00
ERROR_2		_	_	_	_	CFG_REQ	ADC_ DONE	IN_OV	80x0	R	0x00
USB_V	USB_V[7:0]							0x09	R	0x00	
USB_I				USB_	<u>[</u> [[7:0]				0x0A	R	0x00

<sup>\*</sup>POR dependent on CONFIG1 (see Table 5).

### Table 9. Setup Register, SETUP\_1

	SETUP_1								
BIT NO.	7	6	5	4	3	2	1	0	
NAME	_	RSVD	EN_DCDC		VOUT[2:0]		SYNC_DIR	SSEN	
POR	_	0	1	0	0	0	*	*	

BIT	BIT DESCRIPTION
RESERVED	Do Not Modify
EN_DCDC	Buck regulator enable/disable: 0 = Disable buck regulator 1 = Enable buck regulator
VOUT[2:0]	Output-voltage configuration:  000 = 5V W/Voltage compensation  001 = 18V  010 = 9V  011 = 12V  100 = Future use  101 = Future use  110 = Future use  111 = Future use
SYNC_DIR	SYNC pin direction control: 0 = SYNC pin configured as output 1 = SYNC pin configured as input
SS_EN	Spread-spectrum enable/disable: 0 = Spread spectrum disabled 1 = Spread spectrum enabled

<sup>\*</sup>POR dependent on CONFIG1 (see <u>Table 5</u>).

<sup>\*\*</sup>POR dependent on part number suffix (see Table 3c).

# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Table 10. Setup Register, SETUP\_2

	SETUP_2									
BIT NO.	7	6	5	4	3	2	1	0		
NAME		FSW[2:0]		GAIN[4:0]						
POR	0	0	0	0	0	0	0	0		

BIT	BIT DESCRIPTION
FSW[2:0]	Buck Regulator Switching-Frequency Configuration:  000 = 2200 kHz  001 = 1200 kHz  010 = 790 kHz  011 = 600 kHz  100 = 488 kHz  101 = 410 kHz  110 = 350 kHz  111 = 310 kHz
GAIN[4:0]	Output Voltage V/I Gain Configuration (in mΩ), RSENSE = 33mΩ:  00000 = 0  00001 = 19  00010 = 40  00011 = 61  00100 = 83  00101 = 104  00110 = 125  00111 = 146  01000 = 169  01001 = 190  01010 = 211  01011 = 232  01100 = 255  01101 = 276  01111 = 318  10000 = 340  10001 = 382  10011 = 404  10100 = 426  10101 = 426  10101 = 488  10111 = 490  11000 = 554  11011 = 576  11100 = 554  11011 = 576  11100 = 598  11101 = 640  11111 = 661

# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

Table 11. Setup Register, SETUP\_3

	SETUP_3									
BIT NO.	7	6	5	4	3	2	1	0		
NAME	CD[	1:0]	HOLD_EN	RSVD	HOLI	D[1:0]	RS	VD		
POR	**	**	0	0	1	1	0	0		

BIT	BIT DESCRIPTION
CD[1:0]	Charge Detection Configuration: 00 = Hi-Speed Pass-Thru (SDP) mode 01 = BC1.2 CDP Mode 10 = iPad 2.4A/BC1.2 Auto DCP/SSG mode 11 = iPhone 1A/BC1.2 Auto DCP/SSG mode
HOLD_EN	Hold Mode Enable/Disable: 0 = Hold mode disabled 1 = Hold mode enabled
RESERVED	Do Not Modify
HOLD[1:0]	Hold Mode Timer Configuration:  00 = 7.5 minutes  01 = 15 minutes  10 = 30 minutes  11 = 60 minutes
RESERVED	Do Not Modify

<sup>\*\*</sup>POR dependent on part number suffix (see <u>Table 3c</u>).

# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## Table 12. Setup Register, SETUP\_4

	SETUP_4								
BIT NO.	7	6	5	4	3	2	1	0	
NAME	AUTOCLR	IV_READ	IV_INT	VOUT_PR	ILIM_ITRIP	ILIM[2:0]			
POR	0	0	0	1	0	1	1	1	

BIT	BIT DESCRIPTION
AUTOCLR	ERROR Register Read Handling Configuration: 0 = ERROR register flags automatically cleared when fault removed 1 = ERROR register flags latched until read
IV_READ	Initiate Output-Voltage/Current ADC Conversion:  0 = IV_READ cleared to 0 after ADC conversion complete (read)  1 = Initiate ADC conversion (write)
IV_INT	ADC Conversion Interrupt Enable: 0 = Disable interrupt on ADC conversion complete 1 = Enable interrupt on ADC conversion complete
VOUT_PR	Output-Voltage Configuration Protection Bit: 0 = SETUP_1 VOUT[2:0] output-voltage mode change allowed 1 = SETUP_1 VOUT[2:0] output-voltage mode change not allowed
ILIM_ITRIP	Constant-Current Regulation on ILIM Enable/Disable:  0 = Trip and reset T_ILIM_BLANK after ILIM condition when V <sub>SENSN</sub> < 4.75V  1 = Trip and reset T_ILIM_BLANK after ILIM condition when V <sub>SENSN</sub> < 2V
ILIM[2:0]	DC Current-LImit (min) Configuration, R <sub>SENSE</sub> = 33mΩ: 000 = 280mA 001 = 540mA 010 = 790mA 011 = 1040mA 100 = 1560mA 101 = 2060mA (MAX20038A 101 = 1560mA) 110 = 2570mA (MAX20038A 110 = 1560mA) 111 = 3060mA (MAX20038A 111 = 1560mA)

# Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## Table 13. IRQ Mask Register, IRQMASK\_0

	IRQMASK_0								
BIT NO.	7	6	5	4	3	2	1	0	
NAME	ATTACH	BUS_UV	DATA_OV	BUS_ILIM	BUS_OV	BUS_STG	T_WARN	T_SHDN	
POR	0	0	0	0	0	0	0	0	

BIT	BIT DESCRIPTION
ATTACH	ATTACH Interrupt Enable/Disable: 0 = Interrupt disabled. 1 = Interrupt enabled.
BUS_UV	SENSN UV Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled
DATA_OV	HVD+/- OV Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled
BUS_ILIM	DC Current-Limit Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled
BUS_OV	SENSN OV Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled
BUS_STG	SENSN Short to GND Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled
T_WARN	Pre-Thermal-Warning Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled
T_SHDN	Thermal-Shutdown Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled

## Table 14. IRQ Mask Register, IRQMASK\_1

	IRQMASK_1									
BIT NO.	<b>BIT NO.</b> 7 6 5 4 3 2 1 0									
NAME		_	_	_	_	_	_	_	IN_OV	
POR	_	-	_	_	_	_	_	_	0	

BIT	BIT DESCRIPTION			
IN_OV	IN Pin Overvoltage Interrupt Enable/Disable: 0 = Interrupt disabled 1 = Interrupt enabled			

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **Table 15. Status Register, STATUS**

	STATUS							
BIT NO.	7	6	5	4	3	2	1	0
NAME	ATTACH	CFG_OK	_	_	_	_	_	_
POR	0	0	_	_	_	_	_	_

BIT	BIT DESCRIPTION
ATTACH	ATTACH event flag. This bit correlates directly to the state of the internal attach detection signal.  0 = No ATTACH event detected.  1 = ATTACH event detected.
CFG_OK	Device configuration status flag. CFG_OK functionality is special-order only and is pre-loaded as a '1' at startup on standard factory variants.  0 = Device is not yet configured; DC-DC is latched off.  1 = Device has been configured, normal operation allowed.

## Table 16. Status/Error Register, ERROR\_1

ERROR_1								
BIT NO.	7	6	5	4	3	2	1	0
NAME	ATTACH	BUS_UV	DATA_OV	BUS_ILIM	BUS_OV	BUS_STG	T_WARN	T_SHDN
POR	0	0	0	0	0	0	0	0

BIT	BIT DESCRIPTION
ATTACH	ATTACH Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected
BUS_UV	SENSN UV Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected
DATA_OV	HVD+/HVD- OV Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected
BUS_ILIM	USB DC Current-Limit Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected
BUS_OV	SENSN OV Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected
BUS_STG	SENSN Short to GND Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected
T_WARN	Pre-Thermal Shutdown Warning Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected
T_SHDN	Thermal-Shutdown Event Flag (Cleared on Read): 0 = No event detected 1 = Event detected

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## Table 17. Status/Error Register, ERROR\_2

	ERROR_2							
BIT NO.	7	6	5	4	3	2	1	0
NAME	_	_	_	_	_	CFG_REQ	ADC_DONE	IN_OV
POR	_	_	_	_	_	0	0	0

BIT	BIT DESCRIPTION
CFG_REQ	Configuration Request Flag (Cleared on Read); CFG_REQ functionality is special-order only and does not assert on standard factory variants:  0 = No POR event detected  1 = POR event detected (system must configure device I <sup>2</sup> C registers as desired and set CFG_OK bit in STATUS register)
ADC_DONE	Indicates ADC Conversion Complete (Cleared on Read):  0 = Conversion not complete or not in progress  1 = Conversion complete (measurements stored in USB_V and USB_I registers)
IN_OV	IN pin over-voltage event flag (Cleared on read): 0 = No event detected 1 = Event detected

## Table 18. USB Output Voltage Register, USB\_V

	USB_V							
BIT NO.	7	6	5	4	3	2	1	0
NAME	USB_V[7:0]							
POR	<b>R</b> 0							

BIT	BIT DESCRIPTION
USB_V[7:0]	SENSN Output-Voltage Value Sampled by ADC Upon Request.  V <sub>SENSN</sub> = (7.92/256) x USB_V (volts), when VOUT[2:0] = 000

## Table 19. USB Output Current Register, USB\_I

	USB_I							
BIT NO.	7	6	5	4	3	2	1	0
NAME	NAME USB_I[7:0]							
POR	<b>POR</b> 0							

BIT	BIT DESCRIPTION
USB_I[7:0]	DC Output Current value sampled by ADC upon request.
	DC Current = ((0.1/256) x USB_I)/R <sub>SENSE</sub> (amperes)

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### **Applications Information**

## DC-DC Switching-Frequency Configuration and Synchronization

The I<sup>2</sup>C variant allows for digital programming of the switching frequency using the SETUP\_2 register (see <u>Table 10</u>). The stand-alone version offers similar frequency selection using the CONFIG1 resistor. See <u>Table 6</u> for resistor selection.

The device can be synchronized with other devices by connecting an external clock to the SYNC pin. Alternatively, the device can be configured so that the SYNC pin outputs the internal clock, making the ICs the master clock.

The choice of switching frequency dominates the efficiency, component selection, thermal performance, and EMI. A high switching frequency allows for smaller components and solution size, but increases switching losses and decreases overall efficiency. Operation between 500kHz and 1.8MHz is not recommended to avoid AM band interference.

#### **DC-DC Input Capacitor Selection**

The input capacitor reduces the peak currents drawn from the upstream power source and is a determining factor in the input-voltage ripple. The input capacitor RMS current requirement (I<sub>RMS</sub>) is defined by Equation 2.

#### Equation 2:

$$I_{RMS} = I_{LOAD(MAX)} \frac{\sqrt{V_{SENSP} (V_{SUPSW} - V_{SENSP})}}{V_{SUPSW}}$$

 $I_{RMS}$  has a maximum value when the input voltage equals twice the output voltage ( $V_{SUPSW} = 2 \times V_{SENSP}$  so  $I_{RMS(MAX)} = I_{LOAD(MAX)}/2$ 

For long-term reliability, select an input capacitor that exhibits less than 10°C self-heating temperature rise at the RMS current.

The input-voltage ripple is determined by the input capacitance ( $V_C$ ), and the input capacitor ESR ( $V_{ESR}$ ). Use low-ESR ceramic capacitors with high ripple-current capability. Input voltage ripple can be estimated by the equations shown in Equation 3.

#### **Equation 3:**

$$ESR_{IN} = \frac{\Delta V_{ESR}}{I_{LOAD(MAX)} + \frac{\Delta IL}{2}}$$

where:

$$\Delta I_{L} = \frac{\left(V_{SUPSW} - V_{SENSP}\right) \times V_{SENSP}}{V_{SUPSW} \times f_{SW} \times L}$$

and:

$$C_{IN} = \frac{I_{LOAD(MAX)} \times D(1-D)}{\Delta V_Q \times f_{SW}} \text{ where } D = \frac{V_{SENSP}}{V_{SUPSW}}$$

Bypass SUPSW with  $10\mu\text{F}$  of ceramic capacitance close to the SUPSW and PGND pins. Minimize the PCB current loop area to reduce EMI. Bypass SUPSW with  $47\mu\text{F}$  of bulk electrolytic capacitance to dampen line transients.

#### **DC-DC Output Capacitor Selection**

The minimum required output capacitance depends on the maximum operating output voltage, the maximum device current capability, as well as the error-amplifier voltage gain. The output filter capacitor determines the output-voltage ripple, load-transient response, and the converter's stability margin.

To ensure stability and compliance with the USB and Apple specifications, follow the recommended output filters listed in <u>Table 20</u>. For proper functionality, a minimum amount of ceramic capacitance must be used regardless of  $f_{SW}$ . Additional capacitance for lower switching frequencies can be low-ESR electrolytic types (< 0.25 $\Omega$ ).

#### **DC-DC Inductor Selection**

Three key parameters must be considered when selecting an inductor: inductance value (L), saturation current (I<sub>SAT</sub>), and DC resistance (R<sub>DCR</sub>). To select an inductor value, the ratio of inductor peak-to-peak AC current to DC average current (LIR) must be selected first.

**Table 20. Recommended Output Filters** 

f <sub>SW</sub> (kHz)	L (µH)	RECOMMENDED COUT
2200	1.5	22µF ceramic
410	8.2	3 x 22µF ceramic
410	8.2	22μF ceramic + low-ESR 150μF electrolytic < 0.25Ω

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

A small LIR will reduce the RMS current in the output capacitor and results in a small output-voltage ripple, but requires a larger inductor. A good compromise between size and loss is a 35% LIR. Determine the inductor value using Equation 4

#### **Equation 4:**

$$L = \frac{V_{SENSP} \times (V_{SUPSW} - V_{SENSP})}{V_{SUPSW} \times f_{SW} \times I_{LOAD(MAX)} \times LIR}$$

where V<sub>SUPSW</sub>, V<sub>SENSP</sub>, and I<sub>OUT</sub> are typical values (such that efficiency is optimum for nominal operating conditions.) <u>Table 20</u> shows the recommended inductor values for various switching frequencies.

Ensure the inductor I<sub>SAT</sub> is well above the buck converter's cycle-by-cycle peak current limit over all operating conditions.

#### **Layout Considerations**

Proper PCB layout is critical for robust system performance. See the MAX20037/MAX20038 EV kit data sheet for a recommended layout. Minimize the current-loop area and the parasitics of the DC-DC conversion circuitry to reduce EMI. Place the input capacitor, power inductor, and output capacitor as close as possible to the IC. Shorter traces should be prioritized over wider traces.

A low-impedance ground connection between the input and output capacitor is required (route through the ground pour on the exposed pad). Connect the exposed pad to ground. Place multiple vias in the pad to connect to all other ground layers for proper heat dissipation (failure to do so may result in the IC repeatedly reaching thermal shutdown). Do not use separate power and analog grounds; use a single common ground. High-frequency return current flows through the path of least impedance (through the ground pour directly underneath the corresponding traces).

USB traces must be routed as a  $90\Omega$  differential pair with an appropriate keep-out area. Avoid routing USB traces near clocks and high-frequency switching nodes. The length of the routing should be minimized and avoid  $90^\circ$  turns, excessive vias, and RF stubs.

#### **Determining USB System Requirements**

The nominal cable resistance (with tolerance) for both the USB power wire (BUS) and return GND should be determined from the cable manufacturer. In addition, be sure to include the resistance from any inline or PCB connectors. Determine the desired operating temperature range for the application, and consider the change in resistance over temperature.

A typical application presents a  $200m\Omega$  BUS resistance with a matching  $200m\Omega$  resistance in the ground path. In this application, the voltage drop at the far end of the captive cable is 800mV when the load current is 2A. This voltage drop requires the voltage-adjustment circuitry of the ICs to increase the output voltage to comply with the USB and Apple specifications.

#### **USB Loads**

The ICs are compatible with both USB-compliant and non-compliant loads. A compliant USB device is not allowed to sink more then 30mA and must not present more then 10µF of capacitance when initially attached to the port. The device then begins its D+/D- connection and enumeration process. After completion of the "connect" process, the device can pull 100mA/150mA and must not present a capacitance > 10µF. This is considered the hotinserted, USB-compliant load of  $44\Omega \| 10\mu F$ .

For non-compliant USB loads, the ICs can also support both a hot insertion and soft-start into a USB load of  $2\Omega||330\mu F$ .

#### **USB Output Current Limit**

The USB load current is monitored by the internal current-sense amplifier through the voltage created across R<sub>SENSE</sub>. The ICs offer a digitally adjustable USB current-limit threshold. See <u>Table 7a</u> or <u>Table 7b</u> to select an appropriate register or resistor value for the desired current limit. The following R<sub>SENSE</sub> values are recommended for MAX20037/MAX20038 for an Apple 30+-compliant solution (<u>Table 21</u>). Some systems require the need to supply up to 160% of  $I_{LOAD(MAX)}$  for brief periods. This is achieved by increasing the MAX20037/MAX20038 current limit and decreasing the R<sub>SENSE</sub>. Refer to the table for Overcurrent Threshold and R<sub>SENSE</sub> settings.

Table 21. Nominal Output Current for Apple 30+

SPEC (A)	ILIM SETTING	R <sub>SENSE</sub> VALUE (Ω)	ACTUAL CURRENT LIMIT, min (A)	
1	2.06A [0b101]	33	2.06	
1.5	2.57A [0b110]	33	2.57	
2.1	3.06A [0b111]	30	3.36	
2.4	3.06A [0b111]	26	3.88	

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### **USB Voltage Adjustment**

The DC-DC output voltage increases linearly as the voltage across  $R_{SENSE}$  increases. The slope of the output voltage increases as the GAIN[4:0] register value is incremented (see Figure 15). Gain refers to the bit-weight of the GAIN[4:0] register in  $m\Omega_{\rm h}$  as listed in Table 10. Gain should be selected such that it compensates for the total system resistance in addition to the buck converter's load regulation.

The ideal gain bit-weight for an application is given by the equation below. Select a register setting that most closely matches the  $R_{COMP\_SYS}$  calculated from the equation below:

 $R_{COMP\_SYS}$  =  $R_{CABLE}$  +  $R_{SENSE}$  +  $R_{PCB}$  +  $R_{LR}$  where  $R_{CABLE}$  is the round-trip resistance of the USB cable,  $R_{LR}$  is the buck converter's load regulation expressed in  $m\Omega,$  and  $R_{PCB}$  is the resistance of any additional VBUS parasitics (i.e., VBUS PCB trace, USB connector, and any VBUS ferrites).

Use the following equation to select the gain:

$$GAIN[4:0] = ceiling \left( \frac{R_{COMPSYS}}{R_{LSB}} \times \frac{33\Omega}{R_{SENSE}} \right)$$

where  $R_{LSB} = 21m\Omega$ .

The device has a maximum amount of allowable voltage adjustment which occurs when V<sub>SENSE</sub> exceeds the threshold. The load current at which this occurs will depend on the value of R<sub>SENSE</sub>. When R<sub>SENSE</sub> is  $33 \mathrm{m}\Omega$ , max adjustment will be reached as I<sub>LOAD</sub> exceeds 2.9A (as in Figure 15). When the load current increases beyond that threshold, the output voltage begins to drop per the load-regulation specification.

#### Selecting a Current-Sense Resistor

The external current-sense resistor ( $R_{SENSE}$ ) is critical for accurate current-limit, voltage-adjustment, attachdetection, and ADC measurement. Select a resistor with high precision and low temperature variation (ppm). It is highly recommended that designs use a resistor with an exact value of  $33m\Omega$ . Since the current limit and voltage adjustment are selected digitally (there are a discrete number of levels), changing this value also changes the possible current-limit thresholds, the voltage- adjustment compensation, and the attach threshold. The specifications in the register and resistor tables will need to be scaled accordingly.

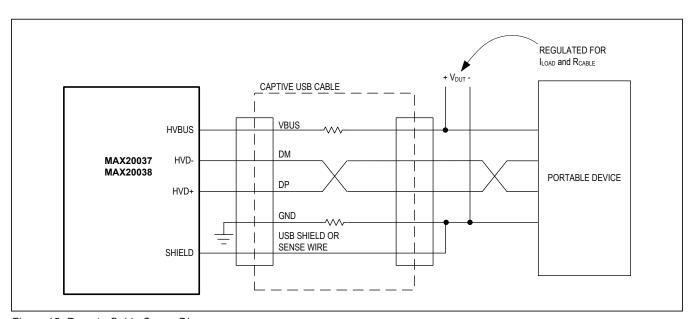


Figure 15. Remote Cable-Sense Diagram

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

#### Remote Cable Sense (Shield Function)

The ICs have the ability to automatically set the required voltage adjustment, regardless of the cable resistance. This allows for the use of multiple cables, without any difference in the circuit design. This functionality requires the ability to sense the voltage at the remote ground pin of the captive cable. This can be accomplished by tying the cable shield to the remote ground, then connecting the cable shield to the SHIELD pin of the IC. Alternatively, an additional SENSE wire can be used to connect to the remote ground. See Figure 16 for a system diagram.

When using the shield function, additional voltage adjustment must be set using the GAIN[4:0] register. The ideal GAIN bit weight should be set such that the buck's load regulation, PCB resistances, and differences between the cable's  $V_{BUS}$  and GND resistances are compensated for. Select a register setting that most closely matches the  $R_{COMP}$  SYS calculated from the equation below:

$$R_{COMP\_SYS} = R_{SENSE} + R_{LR} + R_{PCB} + (R_{VBUS} - R_{GND})$$

Where  $R_{LR}$  is the buck converter's load regulation expressed in  $m\Omega$  and  $R_{PCB}$  is the resistance of the  $V_{BUS}$  PCB trace, the USB connector, and any  $V_{BUS}$  ferrites.  $R_{VBUS}$  and  $R_{GND}$  refer to the resistance of the individual current-carrying paths through the captive cable.

The signal on the SHIELD pin must be bandwidth-limited to support load transients with capacitive loads. If over-

voltage protection above the absolute maximum rating is required, it should be achieved with an external clamp. Contact the Maxim applications team for support.

Connect to BIAS through a  $10k\Omega$  resistor to disable the remote feedback functionality.

#### **Tuning of USB Data Lines**

USB HS mode requires careful PCB layout with  $90\Omega$ controlled differential impedance-matched traces of equal lengths with no stubs or test points. Tuning components may not be necessary for the low-voltage, high-bandwidth MAX20037 variant; however, it is important to include these components for the MAX20038 high-voltage variant. All PCB designs are recommended to include pads that allow LC components to be mounted on the data lines, so tuning can easily be performed later if required. Tuning components should be placed as close as possible to the device's data pins, on the same layer of the PCB as the device. The proper configuration of the tuning components is shown in Figure 17; Figure 18 shows the reference eye diagram used in the test setup. Figure 19 shows the MAX20037 low-voltage eye diagram on the standard EV kit, with no tuning components; Figure 21 shows the MAX20038 high-voltage eye diagram on the standard EV kit, with standard tuning components. Tuning inductors should be high-Q wire-wound inductors. Contact Maxim's application team for assistance with the tuning process for your specific application.

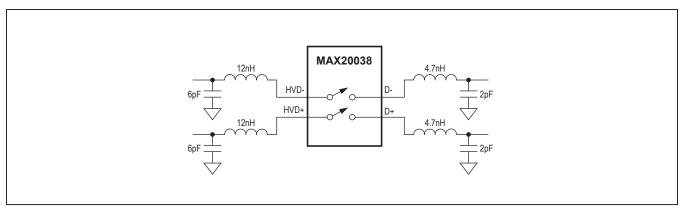


Figure 16. Tuning of Data Lines (MAX20038)

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

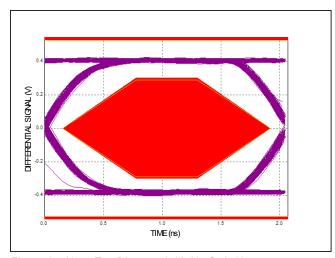


Figure 17. Near-Eye Diagram (with No Switch)

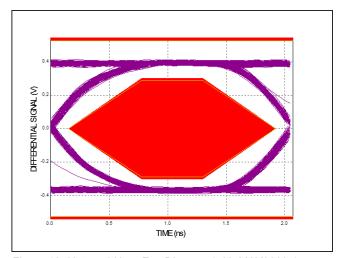


Figure 18. Untuned Near-Eye Diagram (with MAX20037)

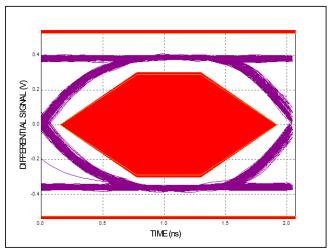


Figure 19. Untuned Near-Eye Diagram (with MAX20038)

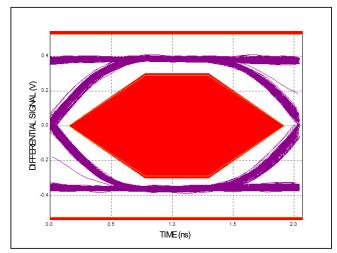


Figure 20. Tuned Near-Eye Diagram (with MAX20038)

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **USB Data Line Common-Mode Choke Placement**

Most automotive applications use a USB-optimized common-mode choke to mitigate EMI signals from both leaving and entering the module. Optimal placement for this EMI choke is at the module's USB connector. This common-mode choke does not replace the need for the tuning inductors previously mentioned.

#### **ESD Protection**

The high-voltage MAX20038 variant requires no external ESD protection, but external ESD-protection diodes are required when using the low-voltage MAX20037 variant. All Maxim devices incorporate ESD- protection structures to protect against electrostatic discharges encountered during handling and assembly. After an ESD event, the ICs continue to work without latchup, while other competing solutions can latch up and require the power to be cycled. When used with the configuration shown in the *Typical Operating Circuit*, the ICs are characterized for protection to the following limits:

- 1) ±15kV ISO 10605 Air Gap (330pF, 2kΩ)
- 2) ±8kV ISO 10605 Contact (330pF, 2kΩ)
- 3) ±15kV IEC 61000-4-2 Air Gap (150pF, 330Ω)
- 4) ±8kV IEC 61000-4-2 Contact (150pF, 330Ω)
- 5) ±15kV ISO 10605 Air Gap (330pF, 330Ω)
- 6) ±8kV ISO 10605 Contact (330pF, 330Ω)

**Note:** All application-level ESD testing is performed on the standard evaluation kit.

#### **ESD Test Conditions**

ESD performance depends on a variety of conditions. Contact Maxim for test setup, test methodology, and test results.

#### **Human Body Model**

Figure 22 shows the Human Body Model and Figure 24 shows the current waveform it generates when discharged into a low impedance. This model consists of a 100pF capacitor charged to the ESD voltage of interest, which is then discharged into the device through a 1.5 kΩ resistor.

#### IEC 61000-4-2

The IEC 61000-4-2 standard covers ESD testing and performance of finished equipment. The MAX20037/MAX20038 help users design equipment that meet Level 4 of IEC 61000-4-2. The main difference between tests done using the Human Body Model and IEC 61000-4-2 is higher peak current in IEC 61000-4-2. Because series resistance is lower in the IEC 61000-4-2 ESD test model (Figure 23), the ESD withstand voltage measured to this standard is generally lower than that measured using the Human Body Model. Figure 25 shows the current waveform for the ±8kV, IEC 61000-4-2 Level 4, ESD Contact Discharge test. The Air Gap Discharge test involves approaching the device with a charged probe. The Contact Discharge method connects the probe to the device before the probe is energized.

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

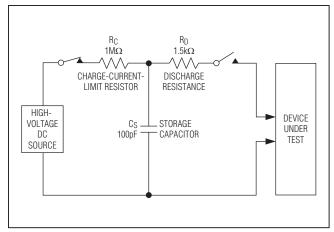


Figure 21. Human Body ESD Test Model

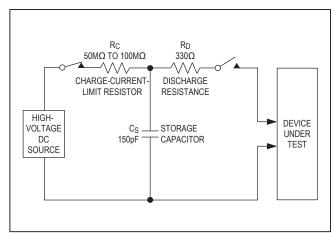


Figure 22. IEC 61000-4-2 ESD Test

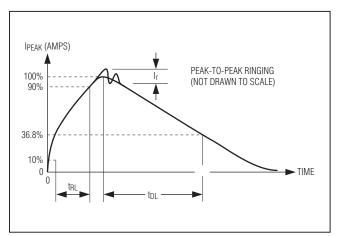


Figure 23. Human Body Current Waveform

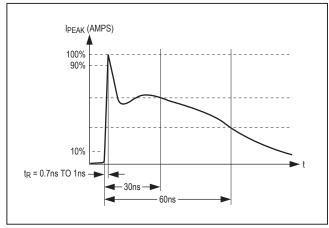


Figure 24. IEC 61000-4-2 ESD Generator Current Waveform

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

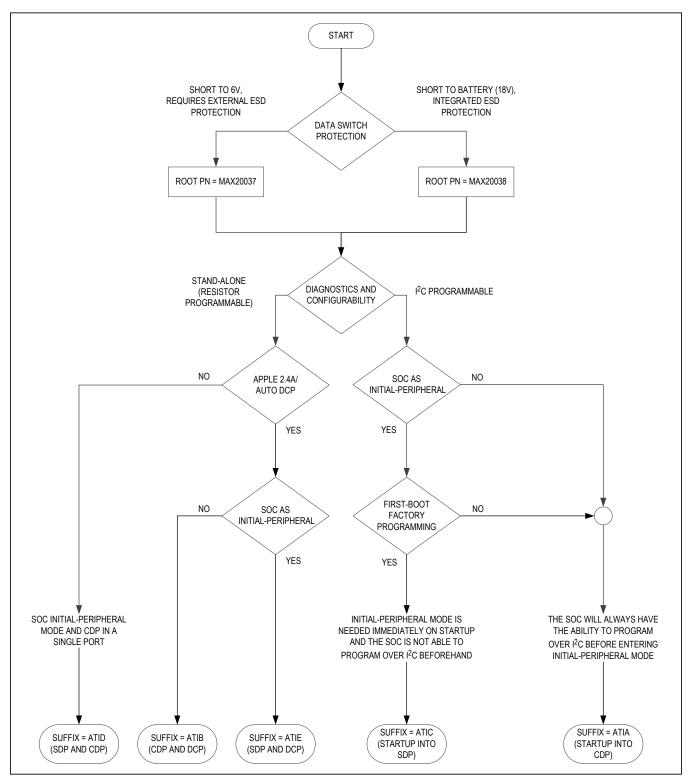


Figure 25. Selection Guide

## Automotive High-Current Step-Down Converter with USB Protection/Host Charger Adapter Emulation

## **Ordering Information**

PART	TEMP RANGE	PIN-PACKAGE	DATA-LINE VOLTAGE GRADE	STARTUP MODE (CDP/DCP pin = 0)	I <sup>2</sup> C
MAX20037ATIA/V+	-40°C to +125°C	28 TQFN-EP*	Low Voltage	Auto-CDP	Yes
MAX20037ATIB/V+	-40°C to +125°C	28 TQFN-EP*	Low Voltage	Auto-CDP	No
MAX20037ATIC/V+	-40°C to +125°C	28 TQFN-EP*	Low Voltage	HS Mode	Yes
MAX20037ATID/V+	-40°C to +125°C	28 TQFN-EP*	Low Voltage	HS Mode	No
MAX20037ATIE/V+	-40°C to +125°C	28 TQFN-EP*	Low Voltage	HS Mode	No
MAX20038ATIA/V+	-40°C to +125°C	28 TQFN-EP*	High Voltage	Auto-CDP	Yes
MAX20038ATIB/V+	-40°C to +125°C	28 TQFN-EP*	High Voltage	Auto-CDP	No
MAX20038ATIC/V+	-40°C to +125°C	28 TQFN-EP*	High Voltage	HS Mode	Yes
MAX20038ATIC/VY+	-40°C to +125°C	28 SWTQFN-EP*	High Voltage	HS Mode	Yes
MAX20038ATID/V+	-40°C to +125°C	28 TQFN-EP*	High Voltage	HS Mode	No
MAX20038ATIE/V+	-40°C to +125°C	28 TQFN-EP*	High Voltage	HS Mode	No
MAX20038AATIA/V+**	-40°C to +125°C	28 TQFN-EP*	High Voltage	Auto-CDP	Yes

Note: For variants with different options, contact factory.

N+ denotes an automotive qualified part.

+Denotes a lead(Pb)-free/RoHS-compliant package.

### **Chip Information**

PROCESS: BICMOS

<sup>\*</sup>EP = Exposed pad.

Y = Side-wettable (SW) package.

<sup>\*\*</sup>Future product—contact factory for availability.