

ON Semiconductor

Is Now

onsemi™

To learn more about onsemi™, please visit our website at
www.onsemi.com

onsemi and **onsemi** and other names, marks, and brands are registered and/or common law trademarks of Semiconductor Components Industries, LLC dba "**onsemi**" or its affiliates and/or subsidiaries in the United States and/or other countries. **onsemi** owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of **onsemi** product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. **onsemi** reserves the right to make changes at any time to any products or information herein, without notice. The information herein is provided "as-is" and **onsemi** makes no warranty, representation or guarantee regarding the accuracy of the information, product features, availability, functionality, or suitability of its products for any particular purpose, nor does **onsemi** assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using **onsemi** products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by **onsemi**. "Typical" parameters which may be provided in **onsemi** data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. **onsemi** does not convey any license under any of its intellectual property rights nor the rights of others. **onsemi** products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use **onsemi** products for any such unintended or unauthorized application, Buyer shall indemnify and hold **onsemi** and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that **onsemi** was negligent regarding the design or manufacture of the part. **onsemi** is an Equal Opportunity/Affirmative Action Employer. This literature is subject to all applicable copyright laws and is not for resale in any manner. Other names and brands may be claimed as the property of others.



ON Semiconductor®

STR-LV8548MC-GEVB

User Guide



Table of Contents

INSTALLATION	3
INCLUDED WITH EVALUATION KIT	3
STARTUP PROCEDURE.....	3
DC BRUSHED MOTORS	4
STEPPER MOTOR	5

Installation

Go to www.onsemi.com/strata to download the most recent version of Strata and follow the installation prompts.

Included with Evaluation Kit

1. PCB with mounted DC and stepper motors
2. AC wall adapter – 12V/1A
3. USB Mini-B cable
4. Small flathead screwdriver (for changing motors)

Startup Procedure


1. Connect included barrel jack
2. Connect your computer to the board using a USB Mini-B cable
3. Login with your credentials
4. Your board will be detected, UI will appear, and relevant collateral will be downloaded to your computer

Auxiliary Stepper Motor Connection

1. Disconnect included stepper motor
2. Connect new stepper to four pin screw terminal as seen below
3. Winding resistance should be high enough to ensure total holding current of less than 1A




A => OUT1
B => OUT2
C => OUT3
D => OUT4

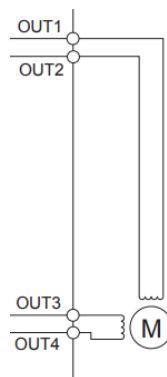

OCP Indicators

Below are the three states that the OCP indicator can be in. Please know that once OCP is tripped, the reset button appears and must be clicked to resume operation of that motor.

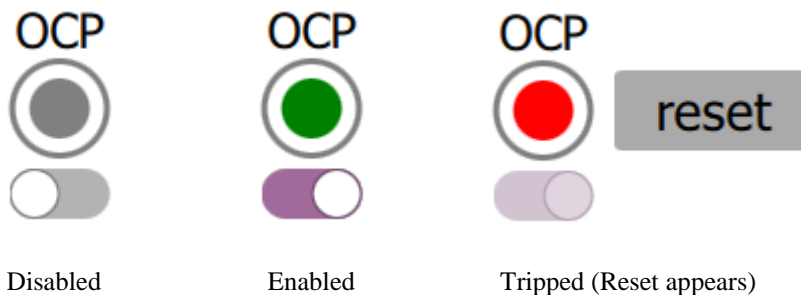

DC Brushed Motors

Note: Only one DC motor is included in EVK

1. Overview

- a. **PWM Frequency** – Frequency for PWM signal at motor input
 - i. This parameter may not be changed while either motor is running
- b. **Input Voltage** – Input voltage to LV8548 that controls brushed motors
- c. **Input Current** – Input current to LV8548 that controls brushed motors
- d. **OCP** – Over current protection turns red when fault detected and reset button appears to right of indicator must be pressed to continue operation. OCP set at 1A.
 - i. Toggle switch below indicator disables OCP feature
- e. **Direction** – Clockwise or counter clockwise rotation
 - i. Changing the direction of running motor will cause a 10 ms brake between states
- f. **PWM mode** – Changes PWM control for driving DC motor
- g. **Duty Ratio** – Duty ratio for PWM signal at motor input
- h. **Start** – Starts the motor
- i. **Stop** – Brakes the motor (pulls both pins to GND)
- j. **Standby** – Stops the motor and leaves output pins floating

The screenshot displays the ON Semiconductor Strata Developer Studio interface for motor control. The interface is divided into two main sections for Motor 1 and Motor 2. At the top, there are tabs for 'Brush' and 'Stepper', with 'Brush' selected. A 'PWM frequency' slider is set to 1000 Hz. Below this, 'INPUT VOLTAGE' is 12.1 V and 'INPUT CURRENT' is 0 mA. An 'OCP' indicator is shown as a green circle with a toggle switch below it. Each motor panel has a 'Direction' selector (clockwise/counter-clockwise), a 'PWM mode' selector (on ↔ off, on ↔ brake), and a 'Duty ratio' slider set to 75%. At the bottom of each panel are 'start', 'stop', and 'standby' buttons.

Stepper Motor

The advanced view is broken up into 3 main sections:

1. Overview
 - a. **Input Voltage** – Input voltage to LV8548 that controls stepper motor
 - b. **Holding Current** – Holding current to LV8548 that controls stepper motor
 - c. **OCP** – Over current protection turns red when tripped and the reset button to right of indicator must be pressed to continue operation. OCP set at 1A
 - i. Toggle switch below indicator disables OCP feature for entire board
 - d. **Excitation** – Full or half step excitation method
 - e. **Direction** – Clockwise or counter clockwise rotation
 - f. **Step Angle** – Step angle of attached motor. Included motor (default) is 7.5°
 - g. **Motor Speed** – Motor speed in either steps per second or rotations per minute (rpm)
 - h. **Transfer Time** – Motor run duration in either seconds, steps, or degrees. 0 corresponds to ∞
 - i. **Start** – Starts the motor for the selected transfer time and motor speed
 - i. Note: All input telemetry stops while stepper motor is running
 - j. **Hold** – Stops the motor. Defaults to hold when transfer time is up. Provides holding torque to the stepper motor
 - i. **Warning:** Since current continues to flow when the motor stops, it is important to pay attention to heat generation. Press *Free* to stop holding current in motor
 - k. **Free** – Leaves stepper output pins floating. No holding torque is present

