



**austriamicrosystems AG**

**is now**

**ams AG**

The technical content of this austriamicrosystems application note is still valid.

**Contact information:**

**Headquarters:**

ams AG  
Tobelbaderstrasse 30  
8141 Unterpremstaetten, Austria  
Tel: +43 (0) 3136 500 0  
e-Mail: [ams\\_sales@ams.com](mailto:ams_sales@ams.com)


Please visit our website at [www.ams.com](http://www.ams.com)

## Demo Board Manual

# AS1119

## 144 LED, I<sup>2</sup>C Interfaced, Cross-Plexing Driver with a 320mA Charge-Pump

[www.austriamicrosystems.com/AS1119](http://www.austriamicrosystems.com/AS1119)

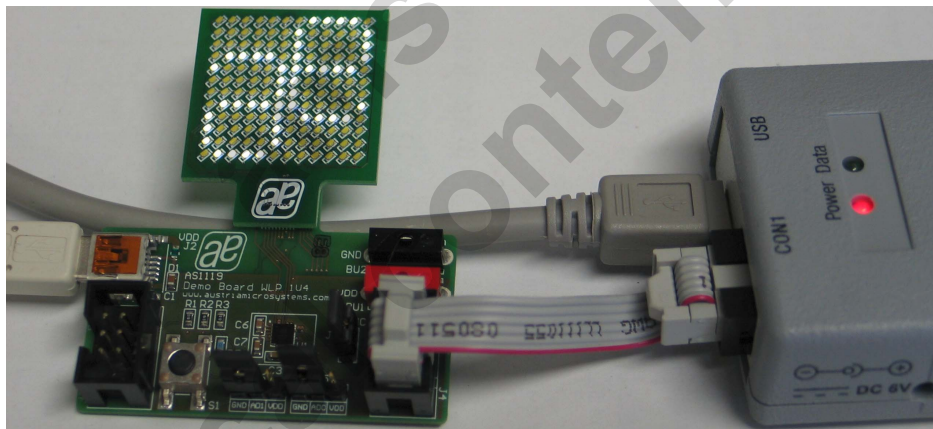

## General Description

### Board Description

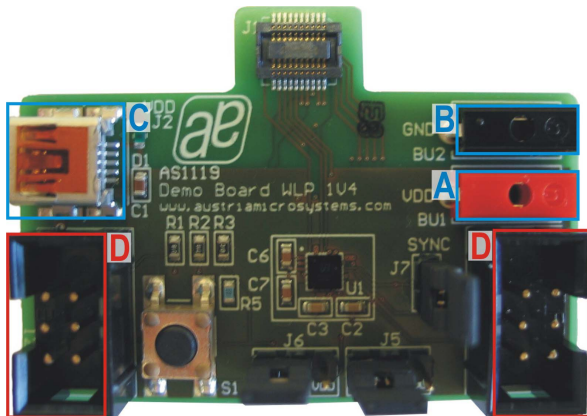


Figure 1: Board Description - Connectors

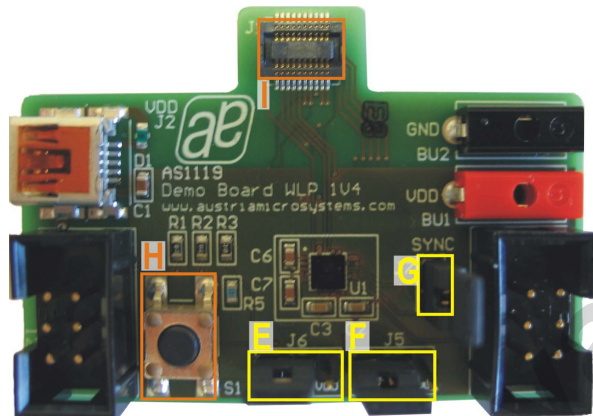



Figure 2: Board Description – Jumpers

### Connector Description

| Label | Name         | Description                          | Info                                                                                                         |
|-------|--------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------|
| A     | <b>VDD</b>   | Supply Voltage                       | Supply voltage ranging from 2.7V to 5.5V                                                                     |
| B     | <b>GND</b>   | Ground                               |                                                                                                              |
| C     | <b>USB</b>   | Mini USB 5-pin Connector             | Supplies the AS1119 with 5V. Connect to a standard USB port. This Connector is not used for data transfer.   |
| D     | <b>I / O</b> | I <sup>2</sup> C Interface Connector | Connect <i>austriamicrosystems USB Interface Box</i> . For a detailed Connector Description see table below. |

**Note:** Use only the Connectors VDD “A” and GND “B” or USB Connector “C”. Never use both supply possibilities at the same time!

### I/O - Interface Connector “D” Description
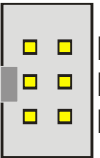
|                                                                                     | Label | Name                      | AS1119 |
|-------------------------------------------------------------------------------------|-------|---------------------------|--------|
|  | A1    | <b>SYNC_IN / SYNC_OUT</b> | Pin B6 |
|                                                                                     | A2    | <b>NC</b>                 |        |
|                                                                                     | A3    | <b>GND</b>                |        |
|                                                                                     | B1    | <b>IRQ</b>                | Pin E6 |
|                                                                                     | B2    | <b>SCL</b>                | Pin D6 |
|                                                                                     | B3    | <b>SDA</b>                | Pin C6 |


### Jumper Description

| Label | Name        | Description                                                                                                                                 |
|-------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| E     | <b>J6</b>   | AD1                                                                                                                                         |
| F     | <b>J5</b>   | AD0                                                                                                                                         |
| G     | <b>SYNC</b> | Sync Function. If two or more boards are connected together remove this jumper on the board which is connected to the USB box.              |
| H     | <b>S1</b>   | Reset Button                                                                                                                                |
| I     | <b>J1</b>   | Connector to LED boards.<br>For a detailed layout description of the LED boards see Application note: <i>APN_AS1119_Cross-Plexing_v1_00</i> |

## Quickstart Software

Before starting the software make sure that the USB Power supply and the USB box are connected to the demoboard. After start-up the software is configured (per default) to work with the 12x12 Matrix.

On the first tab 'Demonstration 12x12 Matrix' there are one-click-demos. Just click the demonstration you want to display and it will be shown on the 12x12 Matrix right away. To stop the demonstration, click the Stop Playback button.

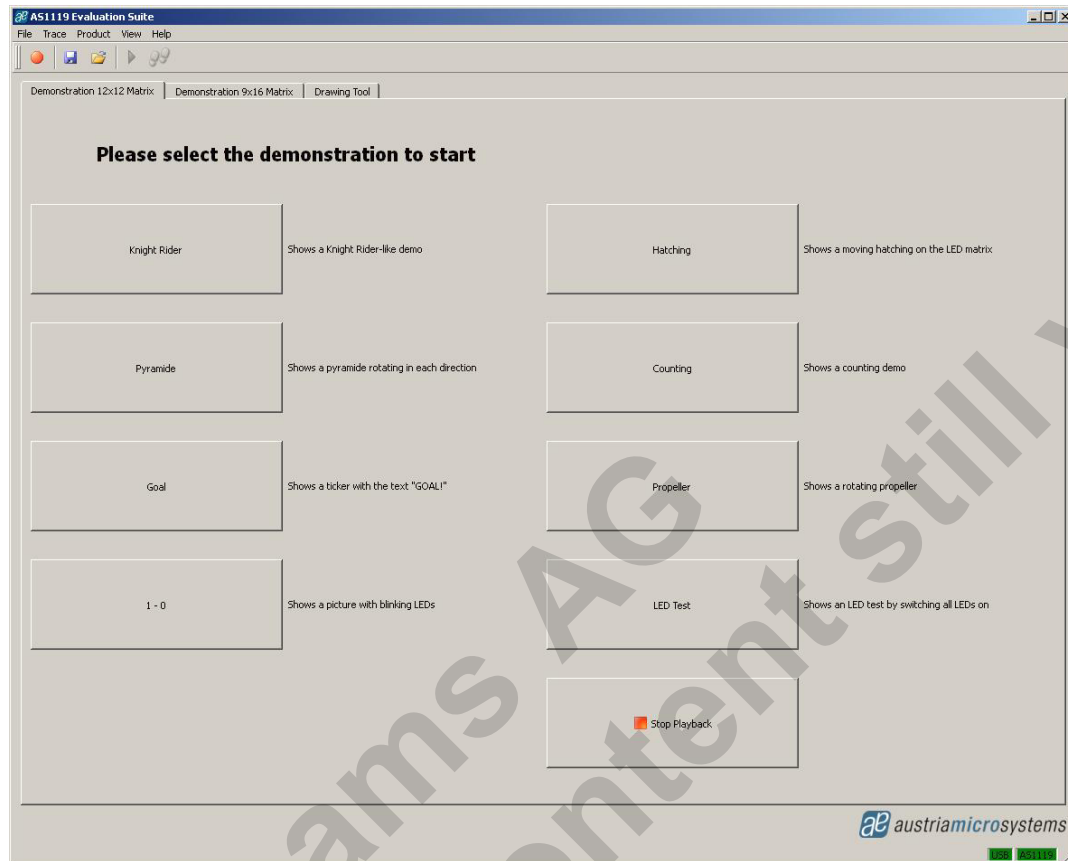

For one-click-demos on the 9x16 Matrix, go to the second tab. There some demonstrations for the 9x16 matrix can be found.

To draw your one movie or frame to display go to the third tab 'Drawing Tool'.

## Operational sequence

This demo board comes with the AS1119.

1. Drive the IC on the demo board only with the recommended settings and values as described in the [datasheet](#). If not present get the datasheet for the AS1119 from [www.austriamicrosystem.com](http://www.austriamicrosystem.com).
2. First connect the power supply via connector "C" to a powered USB port and than power up the I/O - Interface "D". To power down the system disconnect first the I/O Interface and than the power supply of the demoboard.
3. Connect the I/O - Interface "D" to a  $\mu$ C or via the *austriamicrosystems USB Interface Box* to a PC. For interfacing please see the corresponding datasheet of the AS1119.

If there are questions do not hesitate to contact us. See contact information at the end of this manual.

# Layout of Demo Board

## Board schematics and layout

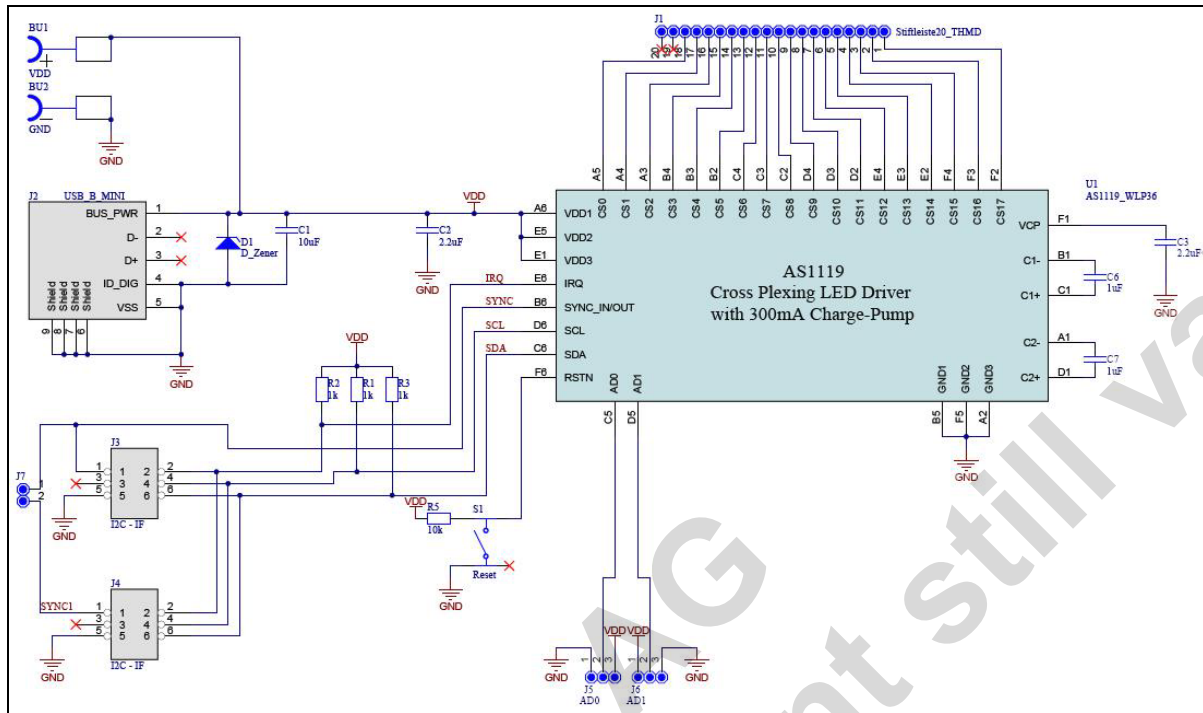


Figure 3: Schematic

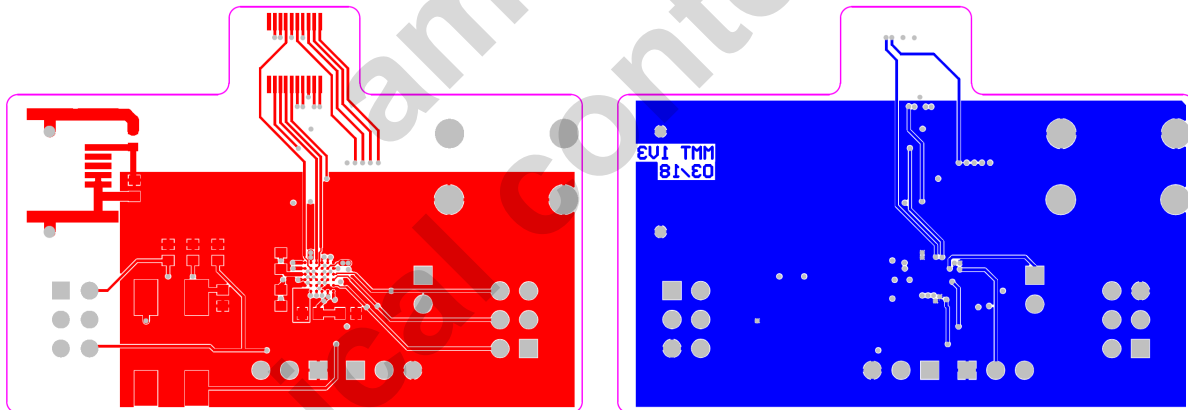


Figure 4: Top and Bottom Layer