

## Interface for the integration of Hitachi's Air-to-Water units into KNX TP-1 (EIB) control systems

Compatible with Air-to-Water Yutaki S, Yutaki S Combi, Yutaki S80 and Yutaki M  
series

Application's Program Version: 1.1

### USER MANUAL

Issue date: 05/2022 r2.3 ENGLISH



## Important User Information

### Disclaimer

The information in this document is for informational purposes only. Please inform HMS Industrial Networks of any inaccuracies or omissions found in this document. HMS Industrial Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Industrial Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Industrial Networks and is subject to change without notice. HMS Industrial Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Industrial Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Industrial Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Interface for the integration of Hitachi's Air-to-Water units into KNX TP-1 (EIB) control systems.

Compatible with Air-to-Water Yutaki S, Yutaki S Combi, Yutaki S80 and Yutaki M series.

*Application's Program Version: 1.1*

<b>ORDER CODE</b>	<b>LEGACY ORDER CODE</b>
INKNXHIT001A000	HI-AW-KNX-1

**INDEX**

1. Presentation .....	5
2. Connection .....	6
3. Installation and setup .....	6
4. ETS parameters and communication objects .....	7
4.1 Default settings .....	7
4.1.1 Run or Stop the unit .....	7
4.1.2 Change de Unit mode .....	7
4.1.3 Run or Stop the C1 Circuit .....	8
4.1.4 Anti-legionella System .....	8
4.1.5 KNX menu blocking .....	8
4.1.6 Errors and Alarms .....	9
4.2 General dialog .....	9
4.2.1 Model .....	9
4.2.2 System is Yutaki S80 .....	9
4.2.3 System working mode .....	9
<b>OTC Mode</b> .....	10
<b>Water mode temperatures</b> .....	10
<b>Air mode temperatures</b> .....	11
4.2.4 2nd circuit (C2) is available .....	11
4.2.5 DHW is available (Domestic Hot Water) .....	13
<b>Domestic Hot Water</b> .....	13
4.2.6 Swimming pool is available .....	13
<b>Swimming pool</b> .....	13
4.2.7 Show extra information objects (for Status) .....	14
<b>Yutaki S Extra Information</b> .....	14
<b>Yutaki S80 Extra Information</b> .....	15
5. Technical Specifications .....	16
6. Compatible Air-to-Water (A.W.) units .....	17
7. Error Codes object #97: Status_Error_Code. ....	<b>Error! Bookmark not defined.</b>
8. Error Codes object #144: Status_Error_Code_R134A .....	19
9. Appendix A – Communication objects description table .....	20

## 1. Presentation



The INKNXHIT001A000 gateway allows fully bidirectional monitoring and control of the Hitachi Air-to-Water systems from KNX installations.

The interface is compatible with all the models of the Yutaki S line commercialized by Hitachi.

### General features:

- Reduced dimensions, easy and fast installation.
- Multiple control and status objects (bit, byte, characters...) with standard KNX datapoints.
- One status object available for each control object.
- Control on the A.W. unit based on the ambient temperature read from the unit itself or from the temperature read by any KNX thermostat.
- The Hitachi A.W. can be controlled simultaneously through the remote controller of the A.W. system or through the KNX bus.
- Total supervision and control of the Hitachi A.W. unit from KNX, including unit internal variables supervision, special modes control (such as Anti-legionella) and error alarm and codes too.


## 2. Connection

Connection of the interface to the AW indoor unit is by means of the cable supplied with the indoor unit to connect the remote controller. It must be connected to the interface in one side (connector H-Link) and to the internal electronic board of the Air-to-Water indoor unit in the other side.

Connection of the interface to the KNX bus is by means of the standard KNX bus connector also supplied with the interface.

In order to plug the interface to the external power supply, two different methods are available. First one is using the external power supply provided with the interface using the DC JACK connector

Connections diagram:

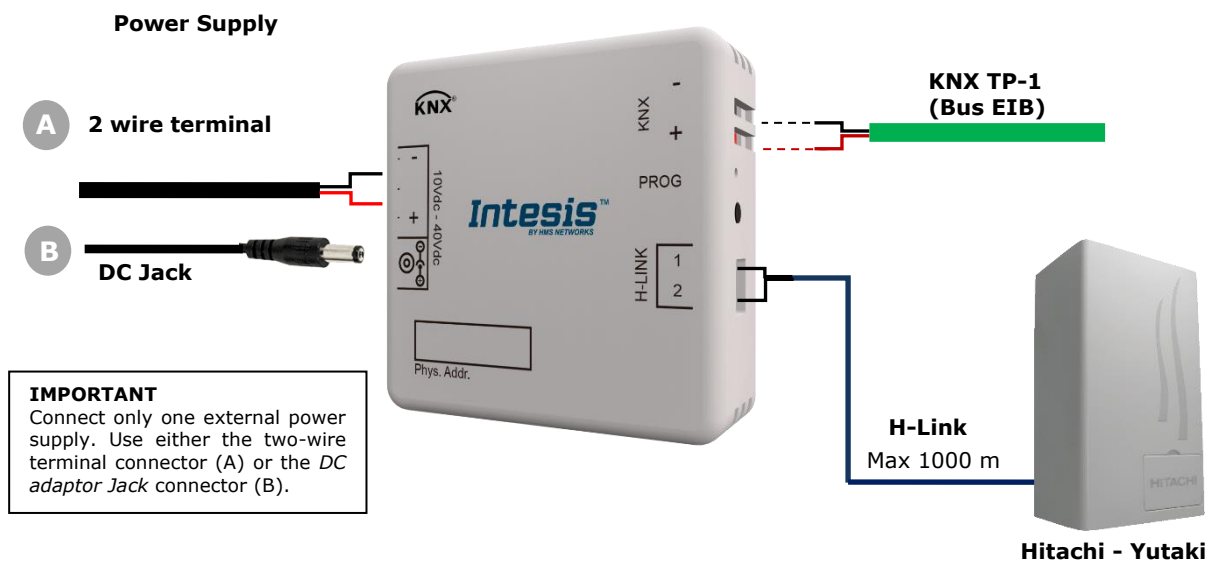

## 3. Installation and setup

This is a fully compatible KNX device that must be configured using the ETS software. The ETS database can be downloaded from:

<https://www.intesis.com/products/ac-interfaces/hitachi-gateways/hitachi-knx-air-to-water-hi-aw-knx-1>

Please, check the README.txt file located inside the zip file to find instructions for proper installation of the database.

**⚠ IMPORTANT:** Do not forget to select the corresponding features of the Air-to-Water system connected to the INKNXHIT001A000 interface. This should be selected in the "Parameters" section on the ETS software.

## 4. ETS parameters and communication objects

### 4.1 Default settings

When importing the ETS database for the first time, the following menu appears, with these parameter values selected as default:

Parameter	Default Value
Download latest database entry for this product and its User Manual from:	<a href="http://www.intesis.com">http://www.intesis.com</a>
Model	Yutaki series 2015 or older
System is Yutaki S80	No
System working mode	Water
2nd circuit (C2) is available	No
DHW is available (Domestic Hot Water)	No
Swimming pool is available	No
Show extra information objects (for status)	No

**Figure 4.1** Parameter values by default

With this configuration is possible to control the system (Control\_ objects) and monitoring it (Status\_ objects) through the following communication objects:

#### 4.1.1 Run or Stop the unit

➡|0: Control\_ Unit Run/Stop [DPT\_1.010] - 0-Stop;1-Run

**Figure 4.2** Run/Stop communication objects

This object allows to run or to stop the Hitachi unit features (C1, C2, DHW and/or SwimPool) at once. Sending a "0" value will turn them off, while sending a "1" value will turn them on.

#### 4.1.2 Change de Unit mode

- ➡|1: Control\_ Unit Mode [DPT\_20.105] - 0-Auto;1-Heat;3-Cool
- ➡|2: Control\_ Unit Mode Cool/Heat [DPT\_1.100] - 0-Cool;1-Heat
- ➡|4: Control\_ Unit Mode Heat [DPT\_1.002] - 1-Set HEAT Mode
- ➡|5: Control\_ Unit Mode Cool [DPT\_1.002] - 1-Set COOL Mode
- ➡|46: Status\_ Unit Mode [DPT\_20.105] - 1-Heat;3-Cool
- ➡|47: Status\_ Unit Mode Cool/Heat [DPT\_1.100] - 0-Cool;1-Heat
- ➡|49: Status\_ Unit Mode Heat [DPT\_1.002] - 1-HEAT Mode is active
- ➡|50: Status\_ Unit Mode Cool [DPT\_1.002] - 1-COOL Mode is active

**Figure 4.3** Unit mode selection communication objects

This object allows changing the working mode of the Hitachi unit. Sending a "0" value the unit will turn into "Cool" mode, while sending a "1" value will make the unit turn into "Heat" mode.

### 4.1.3 Run or Stop the C1 Circuit

- ↕ 6: Control\_ C1 Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↕ 51: Status\_ C1 Run/Stop [DPT\_1.010] - 0-Stop;1-Run

**Figure 4.4** C1 circuit Run/Stop communication objects

This object allows to run or to stop the Hitachi C1 Circuit (or C1 climate zone). Sending a "0" value will close the C1 circuit, while sending a "1" value will open the C1 Circuit.

More functions related with the C1 circuit and their communication objects can be seen in section 4.2.3.

### 4.1.4 Anti-legionella System

**NOTE:** The anti-legionella function is hidden to users by default. Installer can make it available if desired.

- ↕ 42: Control\_ AntiLeg Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↕ 43: Control\_ AntiLeg Setpoint [DPT\_9.001] - °C
- ↕ 93: Status\_ AntiLeg Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↕ 94: Status\_ AntiLeg Setpoint [DPT\_9.001] - °C

**Figure 4.5** Anti-legionella sysmte communication objects

The Hitachi Yutaki S units include an Anti-legionella system. From the gateway, this function can be activated by sending a "1" value to the Control\_ AntiLeg Run/Stop object and can be stopped by sending a "0" value to the same object.

It is also possible to send a value to set the temperature of the Anti-legionella system to this value. To do it so you have to use the Control\_ AntiLeg Setpoint object.

**⚠ IMPORTANT:** Anti-legionella will set the water temperature to the setting value during the specified time. This temperature will be dangerous to the user and could burn him or her. Installer is responsible for configuring it properly, advising the user, and enabling the function.

### 4.1.5 KNX menu blocking

- ↕ 44: Control\_ KNX Blocks/Enables Menu [DPT\_1.003] - 0-Block;1-Enable
- ↕ 95: Status\_ KNX Blocks/Enables Menu [DPT\_1.003] - 0-Block;1-Enable

**Figure 4.6** KNX menu communication objects

This object allows blocking or enabling the KNX menu from Hitachi's LCD panel. Sending a "0" value will block the Menu, while sending a "1" value will enable the Menu.



### 4.1.6 Errors and Alarms

- ↕ 96: Status\_Error/Alarm [DPT\_1.005] - 0-No alarm;1-Alarm
- ↕ 97: Status\_Error Code [2byte] - 0-No error/Any other see man.

**Figure 4.7** Errors and alarms communication objects

These objects allow reading the system status indicating if any alarm or error is active (Status\_Error/Alarm) and, in case it exist, it indicates which error is (Status\_Error Code). See section **Error! Reference source not found.** to get more information about the error codes.

## 4.2 General dialog

In the General Dialog (settings) tab, it is possible to enable, disable or modify the parameters shown in Figure 4.1. For instance, the first field is showing where you can download the database and the user manual from.

Download latest database entry for this product and its User Manual from:

**Figure 4.8** Database and User Manual location

### 4.2.1 Model

This parameter enables or disables communication objects depending on the Yutaki model.

Model

**Figure 4.9** System working mode parameter details

- When selecting "**Yutaki series 2015 or older**", objects available will be related to Yutaki S and Yutaki S80 models from 2015 or before (default objects).
- When selecting "**Yutaki series 2016 or newer**", objects available will be related to Yutaki S, Yutaki S Combi, Yutaki S80 and Yutaki M models from 2016 or later.

### 4.2.2 System is Yutaki S80

This parameter enables specific objects for Yutaki S80 and filters objects that do not apply to the Yutaki S80.

System is Yutaki S80

**Figure 4.10** System working mode parameter details

### 4.2.3 System working mode

This parameter enables or disables communication objects depending on the working mode selected: Water mode, Air, mode or Full (which includes both: Water and Air).

System working mode:

**Figure 4.11** System working mode parameter details

- When selecting “**Water**” the interface will work for a water climate environment only. Water climate control and status objects will be available. Air climate control and status objects will be disabled.

### OTC Mode

The OTC mode (*Output Temperature Compensation*) allows keeping the desired indoor temperature despite external temperature variations.

From the gateway, you can:

- Turn this function off by sending a “1” value to the Control\_ C1 OTC Mode Heat/Cool Off communication object.

- ↔7: Control\_ C1 Heat OTC Mode Off [DPT\_1.002] - 1-Set OTC Mode OFF
- ↔11: Control\_ C1 Cool OTC Mode Off [DPT\_1.002] - 1-Set OTC Mode OFF
- ↔52: Status\_ C1 Heat OTC Mode Off [DPT\_1.002] - 1-OTC Mode OFF is set
- ↔56: Status\_ C1 Cool OTC Mode Off [DPT\_1.002] - 1-OTC Mode OFF is set

**Figure 4.12** OTC Mode Off communication objects

- Activate the different modes available for the calculus of the water temperature for the cooling or heating the facility where the unit is placed:
  - Points: User fixes 4 points that will create a line function that will depend on the current ambient temperature.
  - Gradients: In this case, the function used is not a line but a gradient. Only available for the Heat mode.
  - Fix: The temperature adjustment is only performed by a fixed value. This makes the unit to keep this fixed value all the time.

- ↔8: Control\_ C1 Heat OTC Mode Points [DPT\_1.002] - 1-Set OTC Mode POINTS
- ↔9: Control\_ C1 Heat OTC Mode Grad [DPT\_1.002] - 1-Set OTC Mode GRAD
- ↔10: Control\_ C1 Heat OTC Mode Fix [DPT\_1.002] - 1-Set OTC Mode FIX
- ↔11: Control\_ C1 Cool OTC Mode Off [DPT\_1.002] - 1-Set OTC Mode OFF
- ↔12: Control\_ C1 Cool OTC Mode Points [DPT\_1.002] - 1-Set OTC Mode POINTS
- ↔13: Control\_ C1 Cool OTC Mode Fix [DPT\_1.002] - 1-Set OTC Mode FIX
- ↔53: Status\_ C1 Heat OTC Mode Points [DPT\_1.002] - 1-OTC Mode POINTS is set
- ↔54: Status\_ C1 Heat OTC Mode Grad [DPT\_1.002] - 1-OTC Mode GRAD is set
- ↔55: Status\_ C1 Heat OTC Mode Fix [DPT\_1.002] - 1-OTC Mode FIX is set
- ↔56: Status\_ C1 Cool OTC Mode Off [DPT\_1.002] - 1-OTC Mode OFF is set
- ↔57: Status\_ C1 Cool OTC Mode Points [DPT\_1.002] - 1-OTC Mode POINTS is set
- ↔58: Status\_ C1 Cool OTC Mode Fix [DPT\_1.002] - 1-OTC Mode FIX is set

**Figure 4.13** OTC Mode type selection communication objects

### Water mode temperatures

Using the following communication objects it is possible to control/monitorize water setpoint temperatures for the Heat and Cool modes (C1 Water Heat Setpoint and C1 Water Cool Setpoint).

- ↕ 14: Control\_ C1 Water Heat Setpoint [DPT\_9.001] - °C
- ↕ 15: Control\_ C1 Water Cool Setpoint [DPT\_9.001] - °C
- ↕ 59: Status\_ C1 Water Heat Setpoint [DPT\_9.001] - °C
- ↕ 60: Status\_ C1 Water Cool Setpoint [DPT\_9.001] - °C

**Figure 4.14** Water Mode temperatures communication objects

- When selecting “**Air**”, the interface will work for an air climate environment only. Air climate control and status objects will be available. Water climate control and status objects will be disabled.

#### Air mode temperatures

With the communication objects corresponding to this mode enabled, control/monitoring of the setpoint temperature of the thermo (C1 Thermo Setpoint) and the ambient temperature provided by a thermostat not included in the Hitachi system (C1 Ambient Temp).

- ↕ 19: Control\_ C1 Thermo Setpoint Temp [DPT\_9.001] - °C
- ↕ 20: Control\_ C1 Ambient Temp [DPT\_9.001] - °C
- ↕ 64: Status\_ C1 Thermo Setpoint Temp [DPT\_9.001] - °C
- ↕ 65: Status\_ C1 Ambient Temp [DPT\_9.001] - °C

**Figure 4.15** Air mode temperature communication objects

- When selecting “**Full**”, the interface will work for an air and water climate environment. Air and Water climate control and status objects will be available.

**NOTE:** If Yutaki S80 is selected, some of this communication objects may not be present.

#### 4.2.4 2nd circuit (C2) is available

This parameter enables or disables the Control\_ and Status\_ communication objects of a second circuit (or climate zone). In case the project is divided into 2 separated circuits this parameter needs to be selected to get control on each circuit independently.

**Figure 4.16** 2nd circuit parameter detail

- When selecting “**No**”, the gateway will hide the 2nd circuit (C2) communication objects.
- When selecting “**Yes**”, the gateway will show the the 2nd circuit (C2) communication objects. Depending on the other selected parameters, some objects will remain hidden and some others will be shown.
  - Run and Stop status:

- ↕ 21: Control\_ C2 Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↕ 68: Status\_ C2 Run/Stop [DPT\_1.010] - 0-Stop;1-Run

**Figure 4.17** 2nd circuit Run/Stop communication objects

To activate or deactivate the 2nd circuit (C2) a "1" value or a "0" value needs to be sent respectively to the Run/stop communication object.

- If **"Water"** mode is selected:
  - ↕ 21: Control\_ C2 Run/Stop [DPT\_1.010] - 0-Stop;1-Run
  - ↕ 22: Control\_ C2 Heat OTC Mode Off [DPT\_1.002] - 1-Set OTC Mode OFF
  - ↕ 23: Control\_ C2 Heat OTC Mode Points [DPT\_1.002] - 1-Set OTC Mode POINTS
  - ↕ 24: Control\_ C2 Heat OTC Mode Grad [DPT\_1.002] - 1-Set OTC Mode GRAD
  - ↕ 25: Control\_ C2 Heat OTC Mode Fix [DPT\_1.002] - 1-Set OTC Mode FIX
  - ↕ 26: Control\_ C2 Cool OTC Mode Off [DPT\_1.002] - 1-Set OTC Mode OFF
  - ↕ 27: Control\_ C2 Cool OTC Mode Points [DPT\_1.002] - 1-Set OTC Mode POINTS
  - ↕ 28: Control\_ C2 Cool OTC Mode Fix [DPT\_1.002] - 1-Set OTC Mode FIX
  - ↕ 29: Control\_ C2 Water Heat Setpoint [DPT\_9.001] - °C
  - ↕ 30: Control\_ C2 Water Cool Setpoint [DPT\_9.001] - °C
  - ↕ 34: Control\_ C2 Thermo Setpoint [DPT\_9.001] - °C
  - ↕ 35: Control\_ C2 Ambient Temp [DPT\_9.001] - °C
  - ↕ 68: Status\_ C2 Run/Stop [DPT\_1.010] - 0-Stop;1-Run
  - ↕ 69: Status\_ C2 Heat OTC Mode Off [DPT\_1.002] - 1-OTC Mode OFF is set
  - ↕ 70: Status\_ C2 Heat OTC Mode Points [DPT\_1.002] - 1-OTC Mode POINTS is set
  - ↕ 71: Status\_ C2 Heat OTC Mode Grad [DPT\_1.002] - 1-OTC Mode GRAD is set
  - ↕ 72: Status\_ C2 Heat OTC Mode Fix [DPT\_1.002] - 1-OTC Mode FIX is set
  - ↕ 73: Status\_ C2 Cool OTC Mode Off [DPT\_1.002] - 1-OTC Mode OFF is set
  - ↕ 74: Status\_ C2 Cool OTC Mode Points [DPT\_1.002] - 1-OTC Mode POINTS is set
  - ↕ 75: Status\_ C2 Cool OTC Mode Fix [DPT\_1.002] - 1-OTC Mode FIX is set
  - ↕ 76: Status\_ C2 Water Heat Setpoint [DPT\_9.001] - °C
  - ↕ 77: Status\_ C2 Water Cool Setpoint [DPT\_9.001] - °C
  - ↕ 81: Status\_ C2 Thermo Setpoint [DPT\_9.001] - °C
  - ↕ 82: Status\_ C2 Ambient Temp [DPT\_9.001] - °C

**Figure 4.18** 2nd circuit Water Mode communication objects


- If **"Air"** mode is selected:
  - ↕ 34: Control\_ C2 Thermo Setpoint [DPT\_9.001] - °C
  - ↕ 35: Control\_ C2 Ambient Temp [DPT\_9.001] - °C
  - ↕ 81: Status\_ C2 Thermo Setpoint [DPT\_9.001] - °C
  - ↕ 82: Status\_ C2 Ambient Temp [DPT\_9.001] - °C

**Figure 4.19** 2nd circuit Air Mode communication objects

- If **"Full"** mode is selected, all communication objects present when selecting **"Water"** or **"Air"** will be enabled for this mode too.

### 4.2.5 DHW is available (Domestic Hot Water)

This parameter enables or disables the Control\_ and Status\_ objects corresponding to the control and monitoring of a water tank or DHW system.



**Figure 4.20** DHW Parameter detail

- When selecting **“No”**, the gateway will hide communication objects related with the water tank or the Domestic Hot Water system.
- When selecting **“Yes”**, the gateway will show the communication objects related with the water tank or the Domestic Hot Water system.

#### Domestic Hot Water

By means of Control\_ DHW Run/Stop and Control\_ DHW Setpoint, it is possible to turn on/off the DHW system and to control its setpoint temperature.


Through the Status\_ DHW Temperature communication object, it is possible to read the instantaneous temperature of the DHW system.

- ↕ 36: Control\_ DHW Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↕ 39: Control\_ DHW Setpoint [DPT\_9.001] - °C
- ↕ 85: Status\_ DHW Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↕ 88: Status\_ DHW Setpoint [DPT\_9.001] - °C
- ↕ 89: Status\_ DHW Temperature [DPT\_9.001] - °C

**Figure 4.21** DHW mode communication objects

### 4.2.6 Swimming pool is available

This parameter enables or disables the Control\_ and Status\_ objects corresponding to the control and monitoring of a swimming pool system present in the project



**Figure 4.22** Swimming pool parameter details

- When selecting **“No”**, the gateway will hide communication objects related with the swimming pool.
- When selecting **“Yes”**, the gateway will show communication objects related with the swimming pool.

#### Swimming pool

By means of Control\_ SwimPool Run/Stop and Control\_ SwimPool Setpoint, it is possible to turn on/off the Swimming pool system and also to control its setpoint temperature.

Through the Status\_ SwimPool Temperature communication object, it is possible to read the instantaneous temperature of the Swimming pool system.

- ↕ 40: Control\_ SwimPool Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↕ 41: Control\_ SwimPool Setpoint [DPT\_9.001] - °C

- ↔|90: Status\_ SwimPool Run/Stop [DPT\_1.010] - 0-Stop;1-Run
- ↔|91: Status\_ SwimPool Setpoint [DPT\_9.001] - °C
- ↔|92: Status\_ SwimPool Temperature [DPT\_9.001] - °C

**Figure 4.23** Swimming pool mode communication objects

#### 4.2.7 Show extra information objects (for Status)

These parameters enable or disable the Status\_ communication objects related to the monitoring of extra information depending on the installed Hitachi model (Yutaki S or Yutaki S80).

- When selecting **"No"**, the gateway will hide communication objects related with the extra information provided by the Hitachi units.
- When selecting **"Yes"**, the gateway will offer you to select extra information for a Yutaki S80 model or the rest of Yutaki S models.

The image shows a configuration panel with a light blue background. On the left, the text 'Show extra information objects (for status)' is displayed. To the right of this text is a dropdown menu with a downward-pointing arrow. The dropdown menu is currently open, showing the word 'Yes' as the selected option.

**Figure 4.24** Extra Information parameters detail

#### Yutaki S Extra Information

- ↔|98: Status\_ Operation State Unit On/Off [DPT\_1.001] - 0-Off;1-On
- ↔|99: Status\_ Operation State Cool Demand [DPT\_1.001] - 0-Off;1-On
- ↔|100: Status\_ Operation State Cool Thermo [DPT\_1.001] - 0-Off;1-On
- ↔|101: Status\_ Operation State Heat Demand [DPT\_1.001] - 0-Off;1-On
- ↔|102: Status\_ Operation State Heat Thermo [DPT\_1.001] - 0-Off;1-On
- ↔|103: Status\_ Operation State DHW [DPT\_1.001] - 0-Off;1-On
- ↔|104: Status\_ Operation State SwimPool [DPT\_1.001] - 0-Off;1-On
- ↔|105: Status\_ Operation State Alarm [DPT\_1.005] - 0-No alarm;1-Alarm
- ↔|106: Status\_ Outdoor Ambient Temp [DPT\_9.001] - °C
- ↔|107: Status\_ Second Ambient Temp [DPT\_9.001] - °C
- ↔|108: Status\_ Water Inlet Temp [DPT\_9.001] - °C
- ↔|109: Status\_ Water Outlet Temp [DPT\_9.001] - °C

- ↕ 110: Status\_ Defrost Operation [DPT\_1.001] - 0-Off;1-On
- ↕ 111: Status\_ Water Pump 1 Operation [DPT\_1.001] - 0-Off;1-On
- ↕ 112: Status\_ Water Pump 2 Operation [DPT\_1.001] - 0-Off;1-On
- ↕ 113: Status\_ Water Pump 3 Operation [DPT\_1.001] - 0-Off;1-On
- ↕ 114: Status\_ Disch. Gas Temp [DPT\_9.001] - °C
- ↕ 115: Status\_ Suct. Gas Temp [DPT\_9.001] - °C
- ↕ 116: Status\_ Gas Temp THMg [DPT\_9.001] - °C
- ↕ 117: Status\_ Liquid Temp THMI [DPT\_9.001] - °C
- ↕ 118: Status\_ Water Outlet Temp 3 [DPT\_9.001] - °C
- ↕ 119: Status\_ Outdoor AmbAvg Temp [DPT\_9.001] - °C
- ↕ 120: Status\_ Inv Oper Freq [DPT\_14.033] - Hz
- ↕ 121: Status\_ Indoor Exp. Valve Opening [DPT\_5.001] - %
- ↕ 122: Status\_ Outdoor Exp. Valve Opening [DPT\_5.001] - %
- ↕ 123: Status\_ Mixing Valve Position [DPT\_5.001] - %
- ↕ 124: Status\_ Compressor Run Current [DPT\_9.021] - mA

**Figure 4.25** Extra Information for non Yutaki S80 status communication objects

#### Yutaki S80 Extra Information

- ↕ 135: Status\_ Disch. Gas Temp R134A [DPT\_9.001] - °C
- ↕ 136: Status\_ Suct. Gas Temp R134A [DPT\_9.001] - °C
- ↕ 137: Status\_ Liquid Gas Temp R134A [DPT\_9.001] - °C
- ↕ 138: Status\_ Evap. Gas Temp R134A [DPT\_9.001] - °C
- ↕ 139: Status\_ Disch. Pressure R134A [DPT\_14.058] - Pa
- ↕ 140: Status\_ Suct. Pressure R134A [DPT\_14.058] - Pa
- ↕ 141: Status\_ Inv Oper Freq R134A [DPT\_14.033] - Hz
- ↕ 142: Status\_ Indoor Exp. Valve Open R134A [DPT\_5.001] - %
- ↕ 143: Status\_ Compressor Run Current R134A [DPT\_9.021] - mA
- ↕ 144: Status\_ Error Code R134A [1byte] - HI error code


**Figure 4.26** Extra Information for Yutaki S80 status communication objects

For more details about the information provided by those communication objects, please check the Hitachi user manual.

## 5. Technical Specifications

<b>Enclosure</b>	Plastic, type ABS (UL 94 V-0) de 2,5 mm thick
<b>Dimensions</b>	71 X 71 X 27 mm
<b>Weight</b>	70g
<b>Color</b>	White, RAL 9010
<b>Power supply</b>	29V DC, 6mA (KNX bus)
<b>External Power Supply</b>	10-40V DC, 100mA ( <b>Recommended:</b> 12V DC, 100 mA) Must use a NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply. Plug-in terminal block for power connection (2 poles).
<b>Terminal wiring (for power supply and low-voltage signals)</b>	Per terminal: solid wires or stranded wires (twisted or with ferrule) 1 core: 0.5mm <sup>2</sup> ... 2.5mm <sup>2</sup> 2 cores: 0.5mm <sup>2</sup> ... 1.5mm <sup>2</sup> 3 cores: not permitted
<b>KNX port</b>	1 x KNX TP1 (EIB) port opto-isolated. Plug-in terminal block (2 poles). TNV-1
<b>H-Link port</b>	Plug-in terminal block for H-Link bus connection (2 poles) with no polarity
<b>LED indicators</b>	1 x KNX programming.
<b>Push buttons</b>	1 x KNX programming.
<b>Configuration</b>	Configuration with ETS.
<b>Operating Temperature</b>	From 0°C to 40°C
<b>Storage Temperature</b>	From 0°C to 40°C
<b>Operating Humidity</b>	25-90% at 50°C, non condensing
<b>Isolation voltage</b>	External Power Supply – KNX: 2500V External Power Supply – H-Link: 1500V
<b>RoHS conformity</b>	Compliant with RoHS directive (2002/95/CE).
<b>Certifications</b>	CE conformity to EMC directive (2004/108/EC) and Low-voltage directive (2006/95/EC) EN 61000-6-2; EN 61000-6-3; EN 60950-1; EN 50491-3; EN 50090-2-2; EN 50428; EN 60669-1; EN 60669-2-1

External Power Supply connection

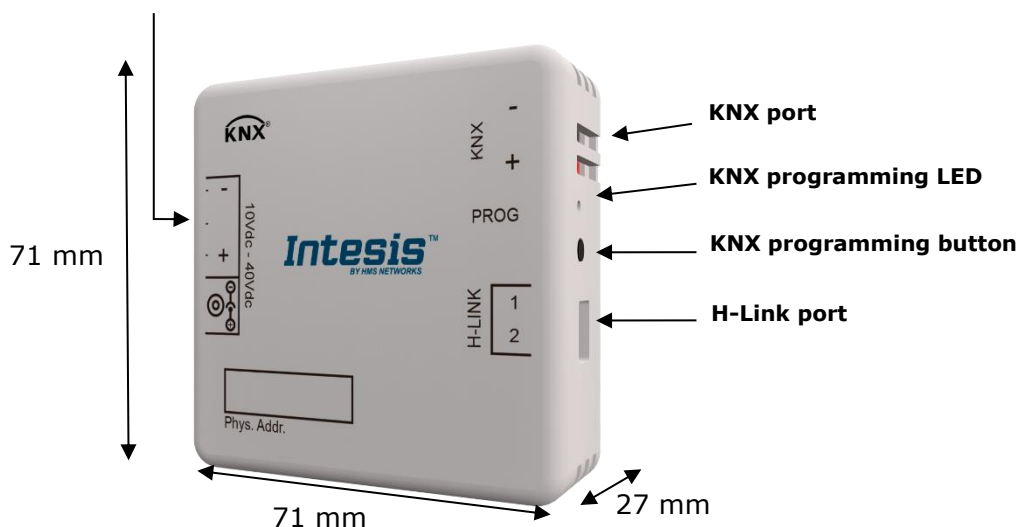



## 6. Compatible Air-to-Water (A.W.) units

A list of Hitachi unit model references compatible with INKNXHIT001A000 and their available features can be found in:

[https://www.intesis.com/docs/compatibilities/inxxxhit001a000\\_compatibility](https://www.intesis.com/docs/compatibilities/inxxxhit001a000_compatibility)

## 7. Error codes

### 7.1 Intesis Codes

Error Code	Error in Controller	Error Category	Error Description
-1 (65535)	N/A	Intesis AC Interface	Error in the communication of Intesis AC Interface or the Remote Controller with the AC Unit
0	N/A	Intesis AC Interface	No active error

### 7.2 Error Codes object #97: Status\_Error\_Code.

Error Code	Error in Controller	Error Category	Error Description
02	02		Activation of Outdoor Unit Protection Device (Except for Alarm Code 41, 42)
03	03		Transmission Error
04	04		Inverter Transmission Abnormality
05	05		Power Phase Detection Abnormality
06	06		Undervoltage, Overvoltage
07	07		Abnormal decrease of discharge gas superheat degree
08	08		Compressor-Top Temp Over-increase
11	11		Water inlet thermistor abnormally (THM <sub>WI</sub> )
12	12		Water outlet thermistor abnormally (THM <sub>WO</sub> )
13	13		Indoor Liquid Pipe Temp Thermistor Abnormality (THM <sub>L</sub> )
14	14		Indoor Gas Pipe Temp. Thermistor Abnormality (THM <sub>G</sub> )
15	15		Water outlet C2 thermistor abnormally (THM <sub>WO2</sub> )
16	16		Water DHWT thermistor abnormally (THM <sub>DHWT</sub> )
17	17		Swimming pool thermistor abnormally (THM <sub>SWP</sub> )
18	18		Water outlet boiler thermistor abnormally (THM <sub>WO3</sub> )
20	20		Compressor-Top Temp Thermistor Abnormality
21	21		2nd ambient thermistor abnormally (THM <sub>AMB2</sub> )
22	22		Outdoor Temp Thermistor Abnormality
24	24		Outdoor Heat Exchanger Liquid Pipe Thermistor Abnormality
31	31		Indoor/Outdoor Combination Setting Error
35	35		Indoor Unit Number Setting Error
38	38		Outdoor Protection Detection Circuit Abnormality
41	41		Cooling Overload
42	42		Heating Overload
47	47		Suction Pressure Decrease Prevention Activated
48	48		Inverter Current Sensor Abnormality
51	51		Overload Operation Protection Activation
53	53		Inverter Module Error
54	54		Inverter Fin Temp. Abnormality
55	55		Inverter Non-Operation
59	59		Inverter Fin Temp Thermistor Abnormality
70	70		Hydraulic alarm
71	71		Water Pump Feedback
72	72		Thermostat Heater Alarm
73	73		Mixing over-temperature limit protection for Mixed circuit
74	74		Unit over-temperature limit protection
75	75		Freeze Protection by Cold water inlet, outlet temperature detection

Error Code	Error in Controller	Error Category	Error Description
76	76		Freeze Protection Stop by indoor liquid temperature thermistor
77	77		Opentherm Communication failure
78	78		RF Communication failure
79	79		Unit Capacity setting Error
80	80		LCD H-link transmission error
81	81		Incorrect PCB operation
177	b1		Error in Address/Refrigerant System Setting
238	EE		Compressor Factor Alarm

### 7.3 Error Codes object #144: Status\_Error\_Code\_R134A.

Error Code	Error in Controller	Error Category	Error Description
101	101		Activation of high pressure switch
102	102		Activation of protection control for excessively high pressure
103	103		Activation of low pressure switch
104	104		Activation of low control
105	105		Excessively low pressure difference
106	106		Excessively high discharge gas temperature
107	107		Excessively low temperature of heating exchanger refrigerant inlet
108	108		Excessively low suction gas temperature
109	109		Activation of freeze protection control (water inlet)
110	110		Activation of freeze protection control (water outlet)
111	111		Cooler water failure
112	112		Condensor water failure
113	113		Excessively high water temperature
121	121		Failure of water inlet temperature thermistor
122	122		Failure of water outlet temperature thermistor
123	123		Free
124	124		Failure of refrigerant evaporating temperature thermistor
125	125		Failure of ambient Inverter E.BOX temperature thermistor
126	126		Failure of discharge gas temperature thermistor
127	127		Failure of refrigerant liquid temperature thermistor
128	128		Failure of suction gas temperature thermistor
129	129		Failure of discharge gas pressure sensor
130	130		Failure of suction gas pressure sensor
131	131		Free
132	132		Transmission error between Inverter PCB and Main PCB
133	133		Transmission error between Main PCBs
134	134		Abnormality of Power Supply Phase
135	135		Incorrect PCB Setting
136	136		Incorrect PCB operation
151	151		Excessively low voltage or excessively high voltage for the inverter
152	152		Abnormal operation of the current sensor
153	153		Activation of protection for inverter instantaneous over current
154	154		Transistor module protection activation
155	155		Increase in the inverter fin temperature
156	156		Free
157	157		No feed back signal from water pump

In case you detect an error code not listed, contact the technical support service from the HVAC Manufacturer for more information on the error meaning.

## Appendix A – Communication objects description table

### Control Objects

SECTION	OBJECT NUMBER	NAME	LONG.	DATAPOINT TYPE		FLAGS				FUNCTION
				DPT_NAME	DPT_ID	R	W	T	U	
Run/Stop	0	Control_ Unit Run/Stop	1 bit	DPT_Start	1.010		W	T		0 - Stop; 1 - Run
Mode	1	Control_ Unit Mode	1 byte	DPT_HVACContr Mode	20.105		W	T		0 - Auto; 1 - Heat; 3 - Cool
	2	Control_ Unit Mode Cool/Heat	1 bit	DPT_Heat/Cool	1.100		W	T		0 - Cool; 1 - Heat
	3	Control_ Unit Mode Auto	1 bit	DPT_Bool	1.002		W	T		1 - Set Auto Mode
	4	Control_ Unit Mode Heat	1 bit	DPT_Bool	1.002		W	T		1 - Set Heat Mode
	5	Control_ Unit Mode Cool	1 bit	DPT_Bool	1.002		W	T		1 - Set Cool Mode
Water Circuit (C1 and C2)	6/21	Control_ Cx <sup>1</sup> Run/Stop	1 bit	DPT_Start	1.010		W	T		0 - Stop; 1 - Run
	7/22	Control_ Cx <sup>1</sup> Heat OTC Mode Off	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode OFF
	8/23	Control_ Cx <sup>1</sup> Heat OTC Mode Points	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode POINTS
	9/24	Control_ Cx <sup>1</sup> Heat OTC Mode Grad	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode GRAD
	10/25	Control_ Cx <sup>1</sup> Heat OTC Mode Fix	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode FIX
	11/26	Control_ Cx <sup>1</sup> Cool OTC Mode Off	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode OFF
	12/27	Control_ Cx <sup>1</sup> Cool OTC Mode Points	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode POINTS

<sup>1</sup> X can be 1 or 2 depending on which circuit is being controlled.

	<b>13/28</b>	Control_ Cx <sup>1</sup> Cool OTC Mode Fix	1 bit	DPT_Bool	1.002		W	T	1 – Set OTC Mode FIX
	<b>14/29</b>	Control_ Cx <sup>1</sup> Water Heat Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T	°C (Between 20°C and 80°C)
	<b>15/30</b>	Control_ Cx <sup>1</sup> Water Cool Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T	°C (Between 5°C and 21°C)
	<b>16/31</b>	Control_ Cx <sup>1</sup> ECO Mode	1 bit	DPT_Bool	1.002		W	T	0 – Comfort Mode; 1 – ECO Mode
	<b>17/32</b>	Control_ Cx <sup>1</sup> ECO Heat Offset Temperature	2 bytes	DPT_Value_Temp	9.001		W	T	°C
	<b>18/33</b>	Control_ Cx <sup>1</sup> ECO Cool Offset Temperature	2 bytes	DPT_Value_Temp	9.001		W	T	°C
	<b>19/34</b>	Control_ Cx <sup>1</sup> Thermo Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T	°C (Between 0°C and 35°C)
	<b>20/35</b>	Control_ Cx <sup>1</sup> Ambient Temp	2 bytes	DPT_Value_Temp	9.001		W	T	°C (Between -20°C and 40°C)
<b>DHW</b>	<b>36</b>	Control_ DHW Run/Stop	1 bit	DPT_Start	1.010		W	T	0 - Stop; 1 - Run
	<b>37</b>	Control_ DHW Boost	1 bit	DPT_Bool	1.002		W	T	1 – Request
	<b>38</b>	Control_ DHW High Demand Mode	1 bit	DPT_Bool	1.002		W	T	0 - Standard; 1 - High
	<b>39</b>	Control_ DHW Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T	°C (Between 30°C and 75°C)
<b>Swimming pool</b>	<b>40</b>	Control_ SwimPool Run/Stop	1 bit	DPT_Start	1.010		W	T	0 - Stop; 1 - Run
	<b>41</b>	Control_ SwimPool Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T	°C (Between 24°C and 33°C)
<b>AntiLeg</b>	<b>42</b>	Control_ AntiLeg Run/Stop	1 bit	DPT_Start	1.010		W	T	0 - Stop; 1 - Run
	<b>43</b>	Control_ AntiLeg Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T	°C (Between 50°C and 75°C)
<b>KNX Block</b>	<b>44</b>	Control_ KNX Blocks/Enables Menu	1 bit	DPT_Enable	1.003		W	T	0 – Blocks; 1 – Enables

**Status Objects**

SECTION	OBJET NUMBER	NAME	LENGTH	DATAPOINT TYPE		FLAGS				FUNCTION
				DPT_NAME	DPT_ID	R	W	T	U	
Run/Stop	45	Status_ Unit Run/Stop	1 bit	DPT_Start	1.010	R		T		0 - Stop; 1 - Run
Mode	46	Status_ Unit Mode	1 byte	DPT_HVACContrMode	20.105	R		T		0 - Auto; 1 - Heat; 3 - Cool
	47	Status_ Unit Mode Cool/Heat	1 bit	DPT_Heat/Cool	1.100	R		T		0 - Cool; 1 - Heat
	48	Status_ Unit Mode Auto	1 bit	DPT_Bool	1.002	R		T		1 - Set Auto Mode
	49	Status_ Unit Mode Heat	1 bit	DPT_Bool	1.002	R		T		1 - Set Heat Mode
	50	Status_ Unit Mode Cool	1 bit	DPT_Bool	1.002	R		T		1 - Set Cool Mode
Water Circuit (C1 y C2)	51/68	Status_ Cx <sup>2</sup> Run/Stop	1 bit	DPT_Start	1.010	R		T		0 - Stop; 1 - Run
	52/69	Status_ Cx <sup>2</sup> Heat OTC Mode Off	1 bit	DPT_Bool	1.002	R		T		1 - OTC Mode Off Set
	53/70	Status_ Cx <sup>2</sup> Heat OTC Mode Points	1 bit	DPT_Bool	1.002	R		T		1 - OTC Mode POINTS Set
	54/71	Status_ Cx <sup>2</sup> Heat OTC Mode Grad	1 bit	DPT_Bool	1.002	R		T		1 - OTC Mode FIX Set
	55/72	Status_ Cx <sup>2</sup> Heat OTC Mode Fix	1 bit	DPT_Bool	1.002	R		T		1 - OTC Mode Off Set
	56/73	Status_ Cx <sup>2</sup> Cool OTC Mode Off	1 bit	DPT_Bool	1.002	R		T		1 - OTC Mode Off Set
	57/74	Status_ Cx <sup>2</sup> Cool OTC Mode Points	1 bit	DPT_Bool	1.002	R		T		1 - OTC Mode POINTS Set
	58/75	Status_ Cx <sup>2</sup> Cool OTC Mode Fix	1 bit	DPT_Bool	1.002	R		T		1 - OTC Mode FIX Set
	59/76	Status_ Cx <sup>2</sup> Water Heat Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	60/77	Status_ Cx <sup>2</sup> Water Cool Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	61/78	Status_ Cx <sup>2</sup> ECO Mode	1 bit	DPT_Bool	1.002	R		T		0 - Comfort; 1 - ECO
	62/79	Status_ Cx <sup>2</sup> ECO Heat Offset Temperature	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	63/80	Status_ Cx <sup>2</sup> ECO Cool Offset Temperature	2 bytes	DPT_Value_Temp	9.001	R		T		°C
64/81	Status_ Cx <sup>2</sup> Thermo Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C	
65/82	Status_ Cx <sup>2</sup> Ambient Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C	

<sup>2</sup> X can be 1 or 2 depending on which circuit is being observed.

	<b>66/83</b>	Status_ Cx <sup>2</sup> Wireless Setpoint Temp	2 bytes	DPT_Value_Temp	9.001	R		T	°C
	<b>67/84</b>	Status_ Cx <sup>2</sup> Wireless Ambient Temp	2 bytes	DPT_Value_Temp	9.001	R		T	°C
DHW	<b>85</b>	Status_ DHW Run/Stop	1 bit	DPT_Start	1.010	R		T	0 – Stop; 1 – Run
	<b>86</b>	Status_ DHW Boost	1 bit	DPT_Bool	1.002		W	T	0 – Not requested; 1 – Requested
	<b>87</b>	Status_ DHW High Demand Mode	1 bit	DPT_Bool	1.002		W	T	0 - Standard; 1 – High
	<b>88</b>	Status_ DHW Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T	°C
	<b>89</b>	Status_ DHW Temperature	2 bytes	DPT_Value_Temp	9.001	R		T	°C
Swimming pool	<b>90</b>	Status_ SwimPool Run/Stop	1 bit	DPT_Start	1.010	R		T	0 – Stop; 1 – Run
	<b>91</b>	Status_ SwimPool Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T	°C
	<b>92</b>	Status_ SwimPool Temperature	2 bytes	DPT_Value_Temp	9.001	R		T	°C
AntiLeg	<b>93</b>	Status_ AntiLeg Run/Stop	1 bit	DPT_Start	1.010	R		T	0 – Stop; 1 – Run
	<b>94</b>	Status_ AntiLeg Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T	°C
KNX Block	<b>95</b>	Status_ KNX Block/Enable Menu	1 bit	DPT_Enable	1.003	R		T	0 – Block; 1 – Enable
Error and Alarms	<b>96</b>	Status_ Error/Alarm	1 bit	DTP_Alarm	1.005	R		T	0 - No Alarm; 1 - Alarm
	<b>97</b>	Status_ Error Code	2 bytes	Enumerated		R		T	0 – No error; Other values see <b>Error! Reference source not</b>
Extra Information	<b>98</b>	Status_ Operation State Unit On/Off	1 bit	DPT_Switch	1.001	R		T	0 - Off; 1-On
	<b>99</b>	Status_ Operation State Cool Demand	1 bit	DPT_Switch	1.001	R		T	0 - Off; 1-On
	<b>100</b>	Status_ Operation State Cool Thermo	1 bit	DPT_Switch	1.001	R		T	0 - Off; 1-On
	<b>101</b>	Status_ Operation State Heat Demand	1 bit	DPT_Switch	1.001	R		T	0 - Off; 1-On
	<b>102</b>	Status_ Operation State Heat Thermo	1 bit	DPT_Switch	1.001	R		T	0 - Off; 1-On
	<b>103</b>	Status_ Operation State DHW	1 bit	DPT_Switch	1.001	R		T	0 - Off; 1-On
	<b>104</b>	Status_ Operation State Swim Pool	1 bit	DPT_Switch	1.001	R		T	0 - Off; 1-On
Extra Information	<b>105</b>	Status_ Operation State Alarm	1 bit	DTP_Alarm	1.005	R		T	0 - No Alarm; 1 - Alarm
	<b>106</b>	Status_ Outdoor Ambient Temp	2 bytes	DPT_Value_Temp	9.001	R		T	°C
	<b>107</b>	Status_ Second Ambient Temp	2 bytes	DPT_Value_Temp	9.001	R		T	°C

Extra Information	<b>108</b>	Status_ Water Inlet Temp	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>109</b>	Status_ Water Outlet Temp	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>110</b>	Status_ Defrost Operation	1 bit	DPT_Switch	1.001	R	T	0 - Off; 1-On
	<b>111</b>	Status_ Water Pump 1 Operation	1 bit	DPT_Switch	1.001	R	T	0 - Off; 1-On
	<b>112</b>	Status_ Water Pump 2 Operation	1 bit	DPT_Switch	1.001	R	T	0 - Off; 1-On
	<b>113</b>	Status_ Water Pump 3 Operation	1 bit	DPT_Switch	1.001	R	T	0 - Off; 1-On
	<b>114</b>	Status_ Dish. Gas Temp	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>115</b>	Status_ Suct. Gas Temp	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>116</b>	Status_ Gas Temp THMg	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>117</b>	Status_ Liquid Temp THMI	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>118</b>	Status_ Water Outlet Temp 3	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>119</b>	Status_ Outdoor AmbAvg Temp	2 bytes	DPT_Value_Temp	9.001	R	T	°C
	<b>120</b>	Status_ Inv Oper Freq	2 bytes	DPT_Value_Frequency	14.033	R	T	Hz
	<b>121</b>	Status_ Indoor Exp Valve Opening	1 byte	DPT_Scaling	5.001	R	T	%
	<b>122</b>	Status_ Outdoor Exp Valve Opening	1 byte	DPT_Scaling	5.001	R	T	%
	<b>123</b>	Status_ Mixing Valve Position	1 byte	DPT_Scaling	5.001	R	T	%
	<b>124</b>	Status_ Compressor Run Current	2 bytes	DPT_Value_Cur	9.021	R	T	mA
	<b>125</b>	Status_ Water Flow	2 bytes	DPT_Flow_Rate_M3_H	13.002	R	T	m <sup>3</sup> /h
	<b>126</b>	Status_ Water Pump Speed	1 byte	DPT_Scaling	5.001	R	T	%
	<b>127</b>	Status_ Unit model Yutaki S	1 bit	DPT_Bool	1.002	R	T	1 – Model is Yutaki S
<b>128</b>	Status_ Unit model Yutaki S Combi	1 bit	DPT_Bool	1.002	R	T	1 – Model is Yutaki S Combi	
<b>129</b>	Status_ Unit model Yutaki S80	1 bit	DPT_Bool	1.002	R	T	1 – Model is Yutaki S80	
<b>130</b>	Status_ Unit model Yutaki M	1 bit	DPT_Bool	1.002	R	T	1 – Model is Yutaki M	
<b>131</b>	Status_ PCB Software Version	2 bytes	DPT_Version	217.001	R	T	Software version	
<b>132</b>	Status_ LCD Software Version	2 bytes	DPT_Version	217.001	R	T	Software version	