

ISL85413DEMO3Z

User's Manual: Demonstration Board

Industrial Analog and Power



ISL85413DEMO3Z

Demonstration Board

UG132 Rev.0.00 Jul 14, 2017

1. Overview

The ISL85413DEMO3Z board uses the $\underline{ISL85413}$ in an isolated buck configuration. It replaces the filter inductor with a coupled inductor (or transformer) to produce a primary output and an inverting secondary output. The board is used to demonstrate the performance of the ISL85413 wide V_{IN} low quiescent current, high efficiency, synchronous buck regulator to produce a positive primary output and a negative isolated secondary output.

The ISL85413 is offered in a $3 \text{mm} \times 3 \text{mm} \times 8$ Ld TDFN package with 1 mm maximum height. The converter occupies 3.3cm^2 area.

1.1 Key Features

- Wide input voltage range of 3.5V to 40V
- Synchronous operation for high efficiency
- Integrated high-side and low-side NMOS devices
- Internal switching frequency (700kHz)
- Continuous output current up to 150mA (refer to Figures 10, 12, and 14 on page 10)
- Internal soft-start
- No compensation required
- Minimal external components required
- Power-good and enable functions available for primary output

1.2 Specifications

- This board has been configured and optimized for the following operating conditions:
- $V_{IN} = 9V \text{ to } 40V$
- $V_{OUT} = \pm 5V$, typical
- $I_{MAX\ PR} = -I_{MAX\ SC}$ up to 150mA (at $V_{OUT} = \pm 5.0$ V, $V_{IN} = 24$ V)

1.3 Recommended Equipment

The following materials are recommended to perform testing:

- 0V to 50V power supply with at least 1A source current capability
- Resistive loads capable of sinking current up to 1A
- Digital Multimeters (DMMs)
- 100MHz quad-trace oscilloscope

1.4 Ordering Information

| Part Number | Description |
|----------------|---|
| ISL85413DEMO3Z | Demonstration board with Isolated Outputs |

ISL85413DEMO3Z 1. Overview

1.5 **Related Literature**

- For a full list of related documents, visit our website
 - ISL85413 product page

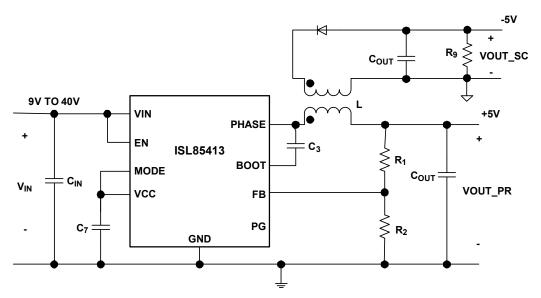


Figure 1. Block Diagram

2. Functional Description

2.1 Quick Setup Guide

- Ensure that the circuit is correctly connected to the supply and loads prior to applying any power.
- Connect the bias supply to VIN, the plus terminal to VIN (P4) and the negative return to GND (P5).
- Turn on the power supply.
- Without any load applied on the output, verify that the output voltage is 5.0V for V_{OUT_PR} (P7) and between 5.0 to 5.5V for V_{OUT_SC} (P11).

2.2 Switch/Jumper Control

The ISL85413DEMO3Z demonstration board contains SW1 for controlling the ON/OFF setting of the converter and JP1 to select between PFM and PWM modes. Turn switch SW1 to the ON position to enable the converter and the OFF position to disable the converter. The jumper is connected between Pins 1 and 2 to select the PWM operation by default for better coupling between the primary and secondary windings. Table 1 summarizes the switch and jumper settings.

Table 1. Switch and Jumper Setting

| Switch/Jumper | Function |
|---------------|---------------------------------|
| SW1 | Enable/Disable |
| JP1 | Select between PFM and PWM mode |

2.3 Operating Range

The ISL85413DEMO3Z board can be configured to operate at various output voltages. <u>Table 2</u> shows the operating range for each output voltage. <u>Table 3 on page 5</u> shows the recommended component selection for each V_{OLIT} .

Table 2. Operating Range for Output Voltages

| V _{OUT} (V) | V _{IN} (V) | I _{OUT_PR} = I _{OUT_SC} (mA) |
|----------------------|---------------------|--|
| ±12 | 18-40 | Up to 150mA |
| ±5 | 9-40 | Up to 150mA |
| ±3.3 | 5-40 | Up to 150mA |

2.4 Evaluating Other Output Voltages

The ISL85413DEMO3Z board output is preset to 5.0V. However, output voltages can be adjusted from 0.6V to 15V. The output voltage programming resistor, R_2 , will depend on the desired output voltage of the regulator and the value of the feedback resistor R_1 , as shown in (EQ. 1).

$$R_2 = R_1 \left(\frac{0.6}{V_{OUT} - 0.6} \right)$$
 (EQ. 1)

If the output voltage desired is 0.6V, then R_1 is shorted. Please refer to datasheet <u>ISL85413</u> for further information.

<u>Table 3</u> shows the external component selection for different V_{OUT} .

The curves in Figure 12 on page 10 indicate the secondary output voltage regulation versus the load applied in the secondary output, without any load on the primary output for $V_{OUT} = 5.0V$, at different input voltages. The curves in Figure 13 on page 10 indicate the secondary output voltage regulation versus V_{IN} , without any load on the primary output for $V_{OUT} = 5.0V$, at different load applied in the secondary output.

2.5 Secondary Isolation

The R₁₀ resistor, which shorts the PGND and the ISOGND on the ISL85413DEMO3Z board, can be replaced with a 2200pF ceramic capacitor (C2012X5R2E222K085AA) to isolate the secondary output from the primary output.



3. PCB Layout Guidelines

The ISL85413DEMO3Z PCB layout has been optimized for electrical and thermal performance. Proper layout of the power converter will minimize EMI and noise while ensuring first-pass success of the design.

PCB layout is provided on the Intersil web site. A multilayer printed circuit board with GND plane is recommended. The most critical connections are to tie the PGND pin to the package GND pad and then use vias to directly connect the GND pad to the system GND plane. This connection of the GND pad to the system plane ensures a low impedance path for all return current, as well as an excellent thermal path to dissipate heat.

With this connection made, place the high frequency MLCC input capacitors C_1 , and C_2 near the VIN pin and use vias directly at the capacitor pads to tie the capacitors to the system GND plane. Also, use vias directly at the C_5 , and C_6 output capacitor pads to tie the capacitors to the system GND plane. These measures will minimize the high dv/dt and di/dt loops. Minimize the PHASE connection by placing L_1 very close to the IC. Place a $1\mu F$ MLCC near the VCC pin and directly connect its return with a via to the system GND plane. Keep the power components path $(L_1, C_1, C_2, C_3, C_5, C_6)$ separated from the small signal node (FB) by placing the feedback divider close to the FB pin and do not route any feedback components near PHASE or BOOT. Keep the FB trace as short as possible.

| V _{OUT} (V) | L ₁ (µH) | C _{OUT} (μF) | R ₁ (kΩ) | R ₂ (kΩ) | C _{FB} (pF) | R ₉ (kΩ) |
|----------------------|---------------------|-----------------------|---------------------|---------------------|----------------------|---------------------|
| ±12 | 100 | 10 | 90.9 | 4.75 | 10 | 5 |
| ±5 | 47 | 22 | 90.9 | 12.4 | 68 | 1 |
| ±3.3 | 33 | 22 | 90.9 | 20 | 100 | 0.825 |

Table 3. External Component Selection







Figure 3. ISL85413DEMO3Z Evaluation Board Bottom View

3.1 ISL85413DEMO3Z Schematic

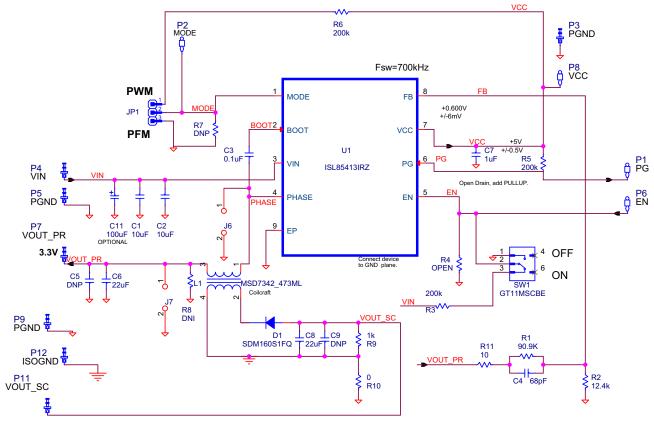


Figure 4. Schematic

3.2 ISL85413DEMO3Z Bill of Materials

| Manufacturer Part | Qty | Reference Designator | Description | Manufacturer | |
|-----------------------|-----|----------------------------|--|---------------------------------|--|
| EEE-FTH101XAP | 1 | C11 (OPTIONAL) | CAP ALUM 100µF 20% 50V SMD | PANASONIC | |
| C3216X5R1H106K | 2 | C1, C2 | CAP, SMD, 1206, 10µF, 50V, 10%, X5R, ROHS | TDK | |
| 06035C104KAT2A | 1 | C3 | CAP, SMD, 0603, 0.1µF, 50V, 10%, X7R, ROHS | AVX | |
| ECJ-0EC1H680J | 1 | C4 | CAP, SMD, 0402, 68pF, 50V, 1%, NP0, ROHS | PANASONIC | |
| ECJ-DV50J226M | 2 | C6, C8 | CAP, SMD, 1206, 22µF, 6.3V, 20%, X5R, ROHS | PANASONIC | |
| GRM188R61C105KA12D | 1 | C7 | CAP, SMD, 0603, 1µF, 16V, 10%, X5R, ROHS | MURATA | |
| 1514-2 | 7 | P3-P5, P7, P9, P11, P12 | CONN-TURRET, TERMINAL POST, TH, ROHS | KEYSTONE | |
| 5002 | 4 | P1, P2, P6, P8 | CONN-MINI TEST POINT, VERTICAL, WHITE, ROHS | KEYSTONE | |
| SDM160S1FQ | 1 | D1 | SCHOTTKY DIODE, SMD, 2P, SOD-123F, 60V, 1A, ROHS | DIODES, INC. | |
| ISL85413FRZ | 1 | U1 | IC-300mA BUCK REGULATOR, 12P, DFN, 3x3, ROHS | INTERSIL | |
| MSD7342-473ML | 1 | L1 | COUPLED INDUCTOR, SMD, 4P, 47µH, 10%, 2.5A, ROHS | COILCRAFT | |
| CRCW040290K9FKED | 1 | R1 | RES, SMD, 0402, 90.9k, 1/16W, 1%, TF, ROHS | VISHAY/DALE | |
| CRCW040212K4FKED | 1 | R2 | RES, SMD, 0402, 12.4k, 1/16W, 1%, TF, ROHS | VISHAY/DALE | |
| MCR01MZPF2003 | 3 | R3, R5, R6 | RES, SMD, 0402, 200k, 1/16W, 1%, TF, ROHS | ROHM | |
| ERJ-3EKF1001V | 1 | R9 | RES, SMD, 0603, 1k, 1/10W, 1%, TF, ROHS | PANASONIC | |
| ERJ-6GEY0R00V | 1 | R10 | RES, SMD, 0805, 0, 1/8W, 1%, TF, ROHS | PANASONIC | |
| CRCW040210R0FKED | 1 | R11 | RES, SMD, 0402, 10, 1/16W, 1%, TF, ROHS | VISHAY/DALE | |
| GT11MSCBE | 1 | SW1 | SWITCH-TOGGLE, SMD, 6PIN, SPDT, 2POS, ON-NONE-ON, ROHS | ITT INDUSTRIES/ C&K DIVISION | |
| 68001-203HLF | 1 | JP1 | CONN-HEADER, 1x3, BRKAWY 1x3, 2.54mm, ST | Amphenol FCI | |
| SPC02SYAN | 1 | JP1-Pins 1 and 2 | CONN-JUMPER, SHORTING, 2PIN, BLACK, GOLD, ROHS | SULLINS | |
| 310-43-164-41-001000 | 2 | J6, J7 | CCONN-BRD-BRD, TH, 1x2, SKTSTRIP-1x64, 2.54mm, TIN, ROHS | MILL-MAX | |
| | 0 | C5, C9 | CAP, SMD, 1206, DNP-PLACE HOLDER, ROHS | | |
| | 0 | R4, R7 | RESISTOR, SMD, 0402, MF, DNP-PLACE HOLDER | | |
| | 0 | R8 | RESISTOR, SMD, 0603, MF, DNP-PLACE HOLDER | | |
| D810 (212403-012) | 1 | PLACE ASSY IN BAG | AG BAG, STATIC, 3x5, ZIP LOC INTERSIL COMMON STO | | |
| LABEL-DATE CODE | 1 | AFFIX TO BACK OF PCB | LABEL-DATE CODE_LINE 1: YRWK/REV#, INTERSIL LINE 2: BOM NAME | | |
| ISL85413DEMO3ZREVAPCB | 1 | | PWB-PCB, ISL85413DEMO3Z, REVA, ROHS | IMAGINEERING INC | |

3.3 ISL85413DEMO3Z Board Layout

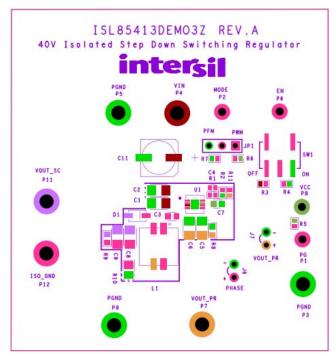


Figure 5. Silkscreen Top

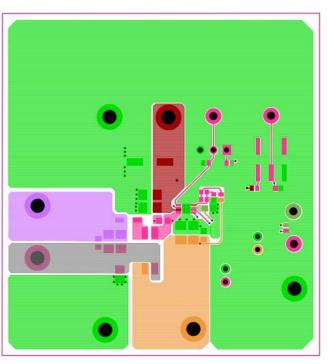


Figure 6. Top Layer

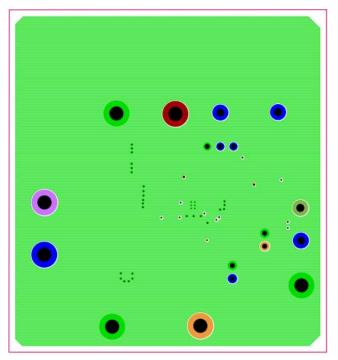


Figure 7. Layer 2 and Layer 3

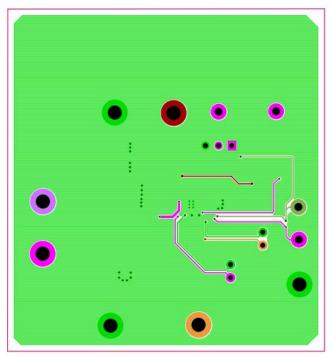


Figure 8. Bottom Layer

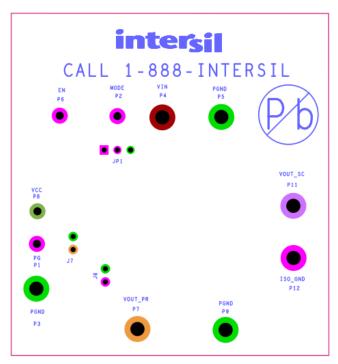


Figure 9. Silkscreen Bottom

4. Typical Performance Curves

 f_{SW} = 700kHz, T_A = +25°C.

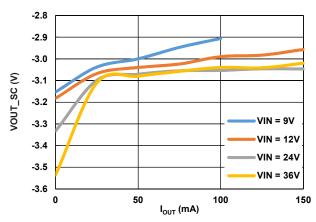


Figure 10. V_{OUT_SC} Regulation vs I_{OUT} , $V_{OUT} = \pm 3.3V$

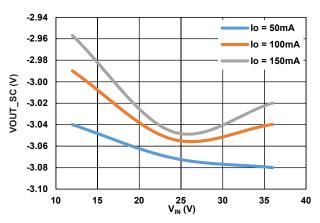


Figure 11. V_{OUT_SC} Regulation vs V_{IN} , $V_{OUT} = \pm 3.3V$

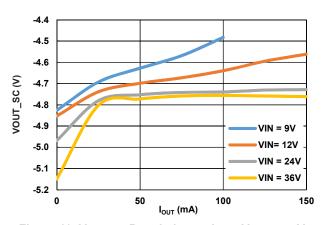


Figure 12. V_{OUT_SC} Regulation vs I_{OUT} , $V_{OUT} = \pm 5V$

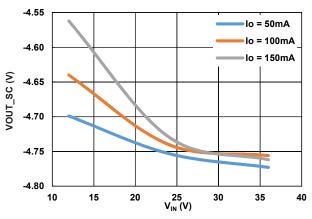


Figure 13. V_{OUT_SC} Regulation vs V_{IN} , $V_{OUT} = \pm 5V$

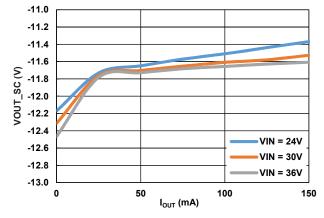


Figure 14. V_{OUT_SC} Regulation vs I_{OUT} , $V_{OUT} = \pm 12V$

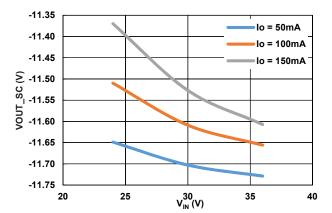


Figure 15. V_{OUT_SC} Regulation vs V_{IN} , $V_{OUT} = \pm 12V$

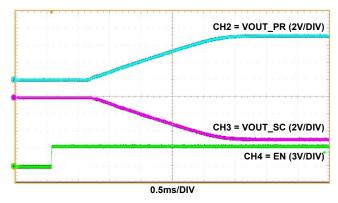


Figure 16. Start-Up by EN (V_{IN} = 24V, VOUT_PR = 5V, VOUT_SC = -5V at IOUT_PR = 0.1A, IOUT_SC = 0.1A, 700kHz, FCCM)

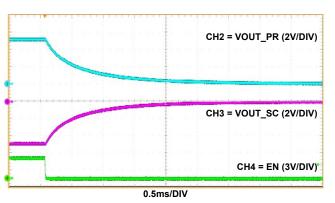


Figure 17. Shutdown by EN (V_{IN} = 24V, VOUT_PR = 5V, VOUT_SC = -5V at IOUT_PR = 0.1A, IOUT_SC = 0.1A, 700kHz, FCCM)

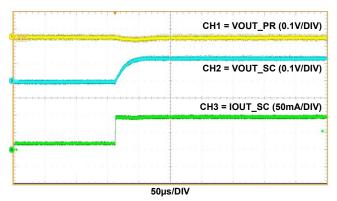


Figure 18. Loading Transient (V_{IN} = 24V, VOUT_PR = 5V, VOUT_SC = -5V at IOUT_PR = 0A, IOUT_SC = 25mA to 75mA, 700kHz, FCCM)

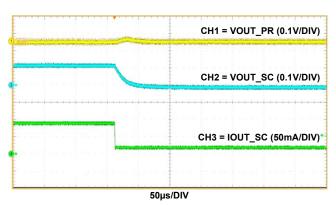


Figure 19. Unloading Transient (V_{IN} = 24V, VOUT_PR = 5V, VOUT_SC = -5V at IOUT_PR = 0A, IOUT_SC = 75mA to 25mA, 700kHz, FCCM)

ISL85413DEMO3Z 5. Revision History

5. Revision History

| Rev. | Date | Description | | |
|------|--------------|-----------------|--|--|
| 0.00 | Jul 14, 2017 | Initial release | | |

Notice

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information
- 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
- 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the
 - Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc. Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

- 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified
- 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
- 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable
- 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or
- 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
- 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics

(Rev.4.0-1 November 2017)



SALES OFFICES

Renesas Electronics Corporation

http://www.renesas.com

Refer to "http://www.renesas.com/" for the latest and detailed information.

Renesas Electronics America Inc.

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A. Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics Canada Limited 9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3 Tel: +1-905-237-2004

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-651-700, Fax: +44-1628-651-804

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited Unit 1601-1611, 16/F., Tower 2, Grand Cent Tel: +852-2265-6688, Fax: +852 2886-9022 ntury Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong

Renesas Electronics Taiwan Co., Ltd. 13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd. 80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949 Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd. Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd. 17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea Tel: +82-2-558-3737, Fax: +82-2-558-5338