



Click [here](#) to ask an associate for production status of specific part numbers.

## Evaluates: MAX31888

## MAX31888 Evaluation System

### General Description

The MAX31888 evaluation system (EV system) demonstrates the MAX31888 1-Wire<sup>®</sup> temperature sensor with alarm function. The MAX31888 EV system includes the MAX31888 evaluation kit (EV kit) and the USB2PMB2 module. Windows<sup>®</sup> 7/8/8.1/10 -compatible software provides a user-friendly interface that demonstrates the features of the MAX31888.

The MAX31888 EV kit contains an on-board DS2484 I<sup>2</sup>C to 1-Wire converter and comes with the 6-pin  $\mu$ DFN MAX31888ALT+T installed.

### MAX31888 EV Kit Files

FILE	DESCRIPTION
MAX31888_uDFN_EVKIT_A_SCHEMATIC	EVKIT SCHEMATIC
MAX31888_uDFN_EVKIT_A_MARKETING_PCB	EVKIT PCB LAYOUT
BUILD_BOM_MAX31888_uDFN_EVKIT_A	EVKIT BILL OF MATERIALS
MAX31888_uDFN_EVKIT_A_ODB	EVKIT ODB

### Features

- On-Board I<sup>2</sup>C to 1-Wire Converter (DS2484)
- Proven PCB Layout
- Fully Assembled and Tested
- Windows 7/8/8.1/10-Compatible Software

[Ordering Information](#) appears at end of data sheet.

### Quick Start

#### Required Equipment

- MAX31888 EV system (USB cable included)
- Windows PC
- MAX31888GUISetup.msi file

**Note:** In the following sections, software-related items are identified by bolding. Text in **bold** refers to items directly from the EV kit software. Text in **bold and underlined** refers to items from the Windows operating system.

#### Procedure

The EV system is fully assembled and tested. Follow the steps to verify board operation:

**Caution: Do not turn on the power supply until all connections are completed.**

- 1) Install the MAX31888GUISetup.msi software on a computer.
- 2) Align the X2 connector of the USB2PMB2 with the J1 connector of the MAX31888 EV kit.
- 3) Verify that the shunts are in the default position as shown in [Table 1](#).
- 4) Connect the USB cable from the computer to the USB2PMB2 board.
- 5) Open the EV kit GUI, MAX31888EvaluationKitTool.exe ([Figure 1](#)).
- 6) Click the **Scan Adapters** button. Then select the option **PMODxxxxxx** (where xxxxxx is numeric) and click the **Connect** button.
- 7) Click the **Convert T** button.
- 8) Click the **Read** button. [Figure 2](#) shows the measured temperature.

1-Wire is a registered trademark of Maxim Integrated Products, Inc.

Windows is a registered trademark of Microsoft Corporation.

Pmod™ is a trademark of Digilent Inc.

319-100839; Rev 0; 11/21

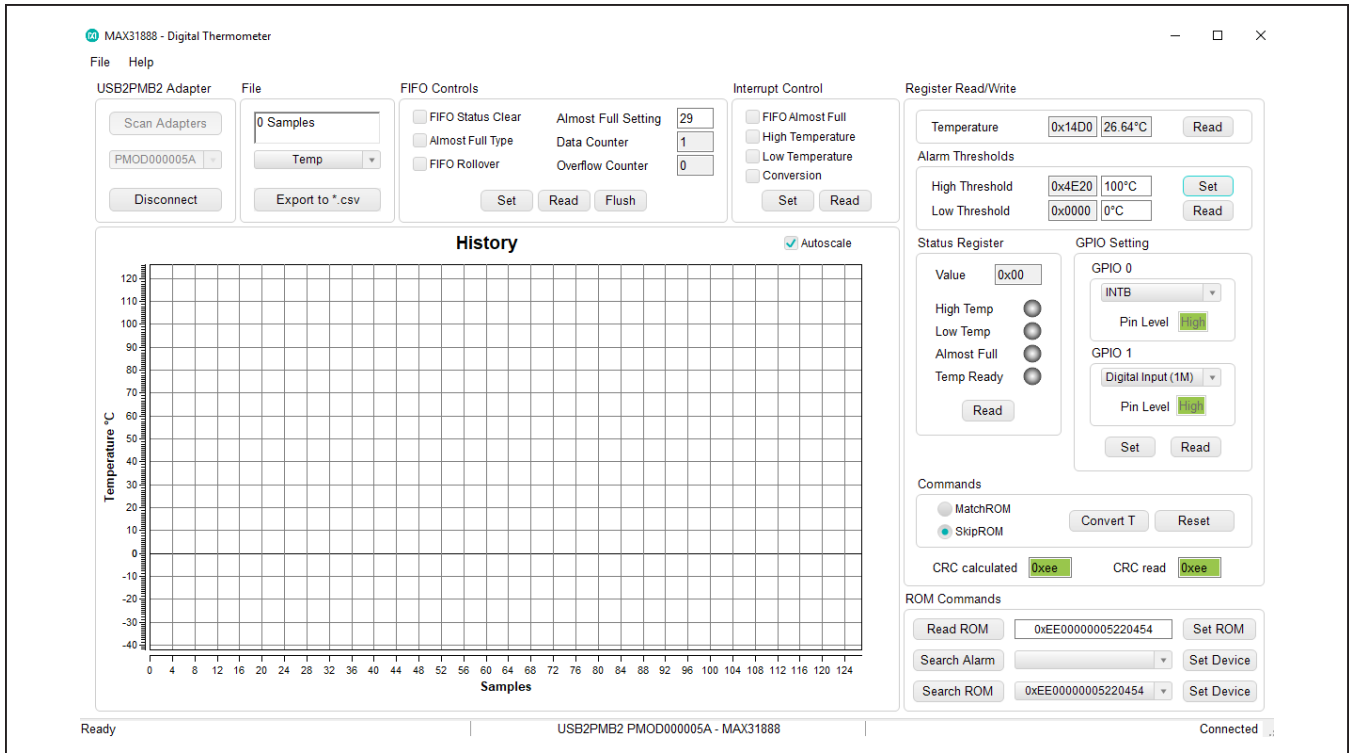


Figure 1. MAX31888 Main Window

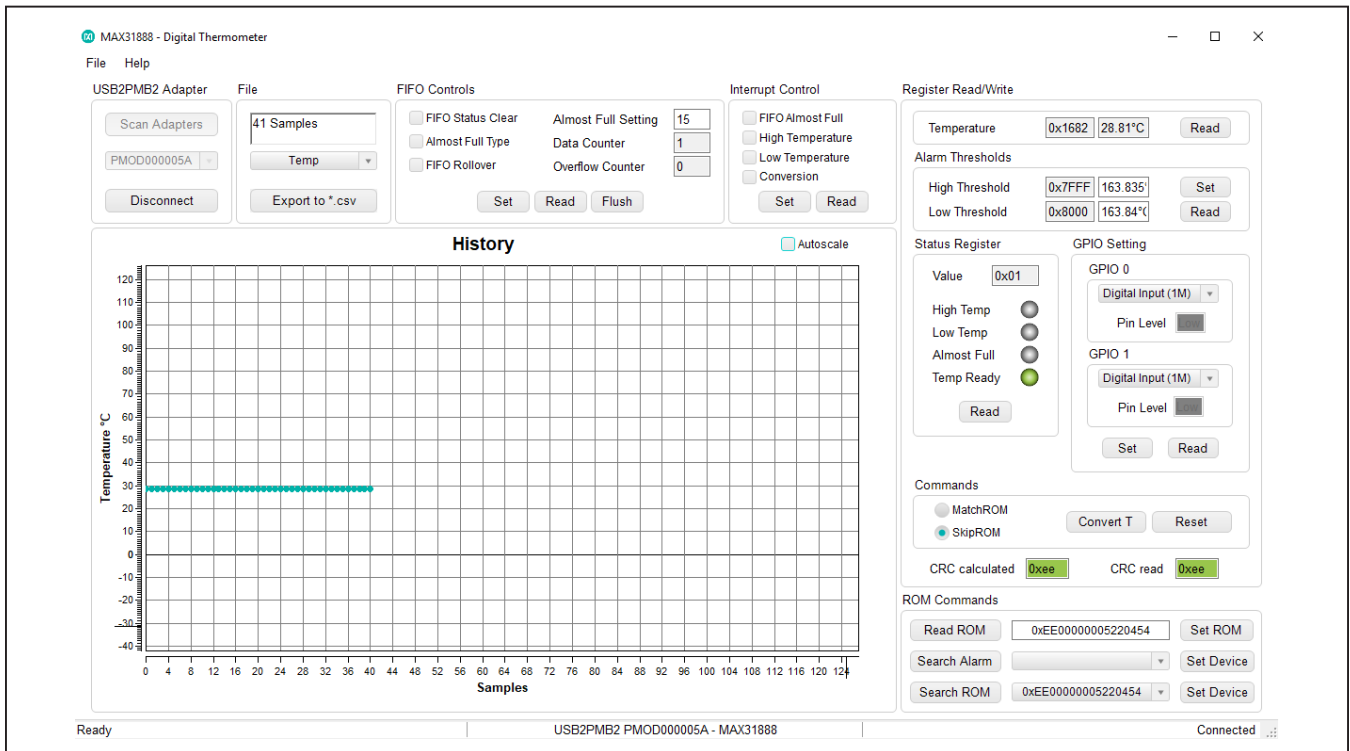


Figure 2. Measuring Temperature on the MAX31888

### General Description of Software

The main window of the MAX31888 EV kit software contains controls to evaluate the MAX31888 IC.

#### FIFO Controls

The **FIFO Controls** groupbox allows the user to select the **FIFO Status Clear**, **Almost Full Type**, **FIFO Rollover**, and **Almost Full Setting**. Click the checkbox to enable them and click again to disable. The **Data Counter** shows the quantity of the data stored in the FIFO and the **Overflow Counter** shows the quantity the data overflowed.

Click **Set** to apply the above settings.

Click **Read** to confirm the settings.

Click **Flush** to clear the FIFO data.

#### Alarm Thresholds

Adjust the **High Threshold** (Temperature High) and **Low Threshold** (Temperature Low) edit boxes to the desired temperature threshold. When the desired setting is set, click the **Set** button to apply. Click the **Read** button to confirm they are set correctly.

#### Status Register

The **High Temp** or **Low Temp** fault status bit displays red when the **Read** button is clicked and the temperature exceeds the threshold range.

The **Almost Full** fault status bit displays red when the **Read** button is clicked and the FIFO data quantity exceeds 32 minus **Almost Full Setting**.

The **Temp Ready** status bit displays green when the **Read** button is clicked and temp data has been converted.

#### ROM

The controls within the **Commands** groupbox include **Convert T**, **Reset**, **Match ROM**, and **Skip ROM**.

#### Temperature

The temperature is displayed in a graph. View hexadecimal code and converted temperature by clicking on the **Read** button.

#### Logging Data

The temperature and raw code can be saved to a file. Click the **Export to \*.CSV** button before collecting data.

### General Description of Hardware

The MAX31888 EV system demonstrates the MAX31888, a 1-Wire temperature sensor with alarm. The USB2PMB2 module and the EV kit complete the system. The DS2484 acts as the 1-Wire master for the MAX31888 and as an I<sup>2</sup>C slave for the USBPMBP2.

#### User-Supplied I<sup>2</sup>C and I/O

To evaluate the EV kit with a user-supplied I<sup>2</sup>C bus, use connector J1 which is a PMod™-compatible connector. If the master does not have a PMod-compatible connector, then make the connection directly to the SCL and SDA test points. Make sure the return ground is the same as the DS2484.

#### User-Supplied VPU

The MAX31888 is powered through USB by default when a PMod-compatible master module is connected to the J1 connector of the EV kit. If the user-supplied VPU is used, change J6 jumper position from default to 2-3 and apply a voltage between +1.7V and +3.6V at the VPU test point and ensure that ground is connected at the GND test point.

**Table 1. Jumper Descriptions**

JUMPER	SHUNT POSITION	DESCRIPTION
J1	1-2*	Connects VCC (onboard power supply)
	2-3	Connects VPU (external power supply)

\*Default position.

## Component Suppliers

SUPPLIER	PHONE	WEBSITE
KEYSTONE	(516) 328-7500	<a href="https://www.keyelco.com/">https://www.keyelco.com/</a>
WURTH ELECTRONICS INC	+1 877 6902207	<a href="https://www.we-ics.com">https://www.we-ics.com</a>
TDK	+81 3 67 78 10 00	<a href="https://www.tdk-electronics.tdk.com/">https://www.tdk-electronics.tdk.com/</a>
KEMET	+91-95131-45888	<a href="https://www.kemet.com/en/us.html">https://www.kemet.com/en/us.html</a>
AVX	+1 (864) 967-2150	<a href="https://www.avx.com/">https://www.avx.com/</a>
LITE-ON ELECTRONICS INC.	0515-83368598	<a href="https://www.liteon.com/en-us">https://www.liteon.com/en-us</a>
SAMTEC	1-800-726-8329	<a href="https://www.samtec.com/">https://www.samtec.com/</a>
VISHAY	1-800-344-4539	<a href="https://www.vishay.com/">https://www.vishay.com/</a>
PANASONIC	0571-87257895	<a href="https://panasonic.cn/">https://panasonic.cn/</a>
BOURNS	+1 951-781-5500	<a href="https://www.bourns.com/">https://www.bourns.com/</a>
YAGEO	+886 2 6629 9999	<a href="https://www.yageo.com/en/Home">https://www.yageo.com/en/Home</a>
MAXIM	408-601-1000	<a href="https://www.maximintegrated.com/en.html">https://www.maximintegrated.com/en.html</a>

**Note:** Indicate that you are using the MAX31888 when contacting these component suppliers.

## Ordering Information

PART	TYPE
MAX31888EVSYS#	EV System (EV Kit + Master Board)
MAX31888EVKIT#	EV Kit
USB2PMB2#	Master Board

#Denotes RoHS compliant.


MAX31888 EV Kit Bill of Materials

ITEM	QTY	REF DES	MAXINV	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION	STATUS	EST_PRICE	COMMENTS
1	2	C1, C2	20-000U1-03	885012206071; C1608X7R1E104K080AA; C0603C104K3RAC; GRM188R71E104KA01; C1608X7R1E104K; 06033C104KAT2A	WURTH ELECTRONICS INC;TDK; KEMET;MURATA;TDK;AVX	0.1UF	CAP; SMT (0603); 0.1UF; 10%; 25V; X7R; CERAMIC	ACTIVE	\$0.03	
2	4	DQ, SCL, SDA, VPU	02-TPCOMP5007-00	5007	KEYSTONE	N/A	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.35IN; BOARD HOLE=0.063IN; WHITE; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH; RECOMMENDED FOR BOARD THICKNESS=0.062IN; NOT FOR COLD TEST	ACTIVE	\$1.56	
3	2	GND, GND1	02-TPCOMP5006-00	5006	KEYSTONE	N/A	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.35IN; BOARD HOLE=0.063IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH; RECOMMENDED FOR BOARD THICKNESS=0.062IN; NOT FOR COLD TEST	ACTIVE	\$0.46	
4	1	J1	01-TSW10608SDRA12P-17	TSW-106-08-S-D-RA	SAMTEC	TSW-106-08-S-D-RA	CONNECTOR; THROUGH HOLE; DOUBLE ROW; RIGHT ANGLE; 12PINS; THIS PART IS DEDICATED FOR PMOD PERIPHERAL BOARD	EVKIT-NOT FOR TEST	\$3.23	
5	1	J2	01-TSW10307TS3P-17	TSW-103-07-T-S	SAMTEC	TSW-103-07-T-S	CONNECTOR; THROUGH HOLE; TSW SERIES; SINGLE ROW; STRAIGHT; 3PINS	EVKIT-NOT FOR TEST	\$0.47	
6	3	R1-R3	80-004K7-19	CRCW06034K70FK	VISHAY DALE	4.7K	RES; SMT (0603); 4.7K; 1%; +/-100PPM/DEGC; 0.1000W	TEMPLATE	\$0.02	
7	4	SPACER1-SPACER4	02-SOM35016H-00	9032	KEYSTONE	9032	MACHINE FABRICATED; ROUND-THRU HOLE SPACER; NO THREAD; M3.5; 5/8IN; NYLON	EVKIT-NOT FOR TEST	\$0.98	
8	1	U1	10-DS2484R-U	DS2484R+	MAXIM	DS2484R+	IC, INFC; SINGLE-CHANNEL 1-WIRE MASTER WITH ADJUSTABLE TIMING AND SLEEP MODE; SOT23-6	ACTIVE	\$0.66	
9	1	U2	00-SAMPLE-01	MAX31888	MAXIM	MAX31888	EVKIT PART - IC; PACKAGE OUTLINE DRAWING: 21-100397; PACKAGE LAND PATTERN: 90-100138; PACKAGE CODE: L622-2; UDFN6	EVKIT-CUSTOM	\$0.00	
10	1	VCC	02-TPCOMP5005-00	5005	KEYSTONE	N/A	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.35IN; BOARD HOLE=0.063IN; RED; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH; RECOMMENDED FOR BOARD THICKNESS=0.062IN	ACTIVE	\$0.19	
11	1		USB2PMB2				Adapter Board for the Munich			
TOTAL	20								\$7.60	


PACKOUT (These are purchased parts but not assembled on PCB and will be shipped with PCB)

ITEM	QTY	REF DES	MAXINV	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION	STATUS	EST_PRICE	COMMENTS
TOTAL	0								\$0.00	
TOTAL	20								\$7.60	


MAX31888 EV Kit Schematics

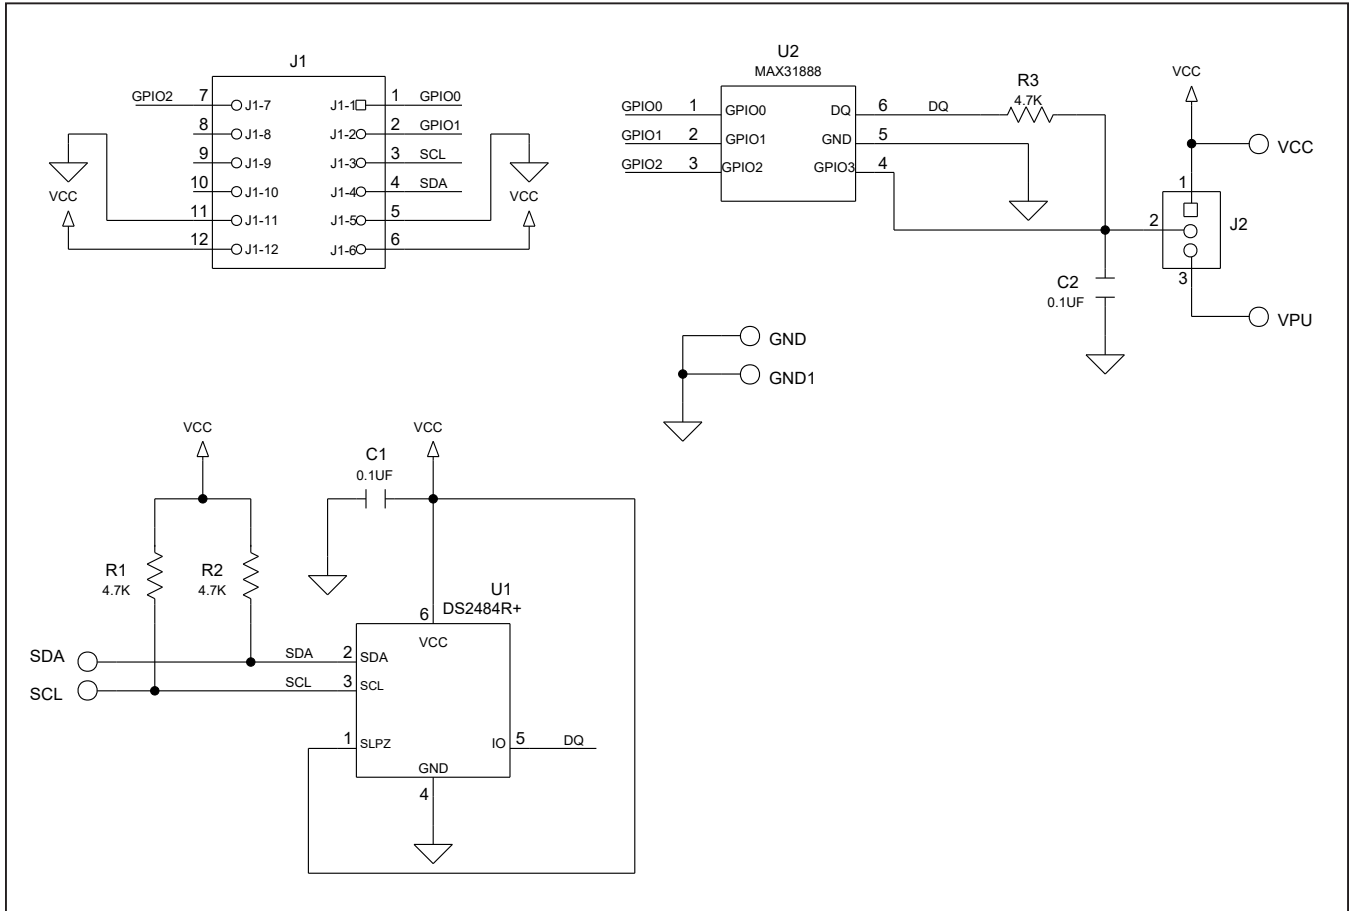


MAX31888 EV Kit PCB Layout

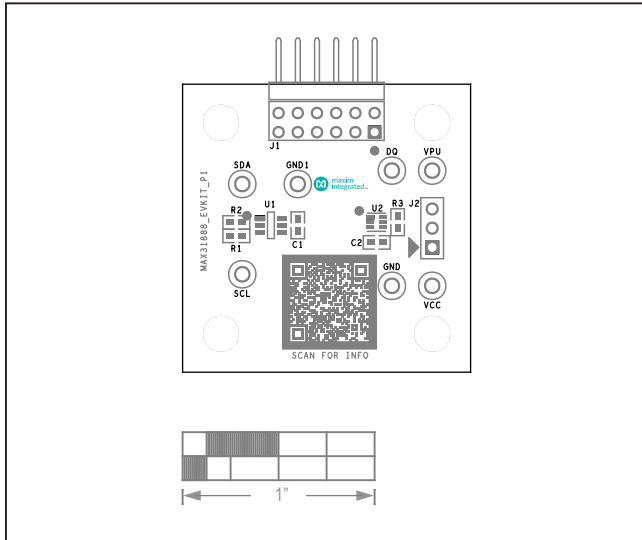

MAX31888 EV Kit–Silk Top

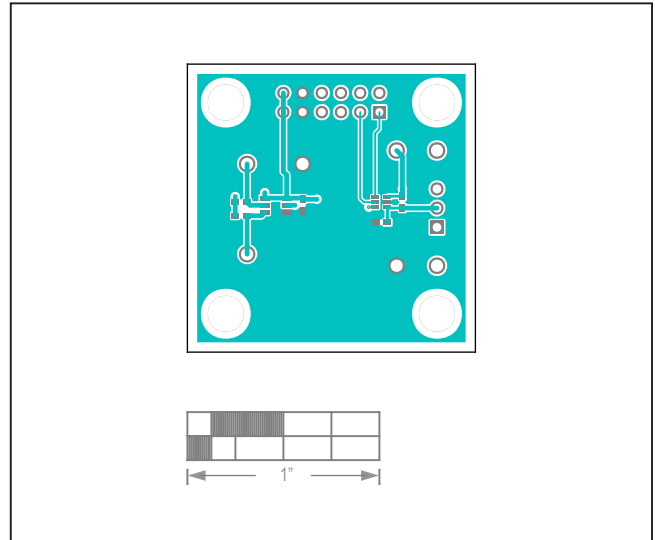

MAX31888 EV Kit–Top

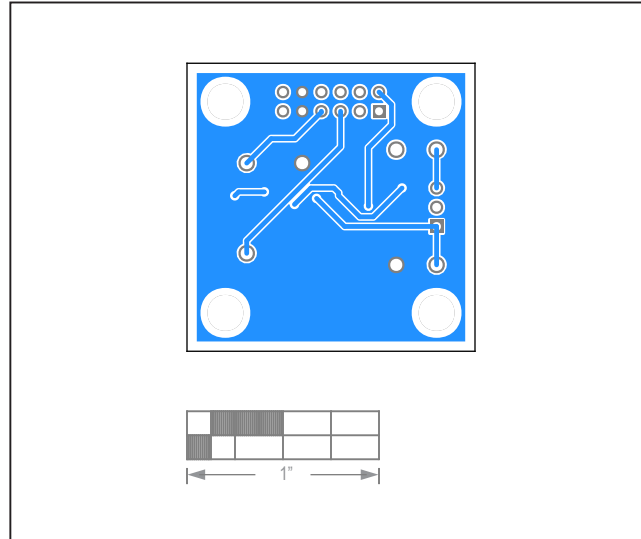

MAX31888 EV Kit–Bottom