


Datasheet



- Capable of detecting vehicles that have stopped within the sensor's sensing field
- 3-axis magnetoresistive-based technology; senses 3-dimensional changes to the Earth's magnetic field caused by the presence of ferrous objects
- Easy sensor installation
- Compact, robust one-piece, self-contained sensor package replaces inductive-loop sensing technology; no external controller needed
- Designed to minimize the effects of temperature swings and destabilizing magnetic fields
- Sensor learns ambient background and stores settings; sensor will not lose configuration or range when power is cycled
- US Patent # 6,546,344 B1



WARNING:

- **Appropriate use for vehicle detection**—The mechanical opening, braking, and reversing systems of the door will not respond in sufficient time to prevent moving trucks, cars, or material handling vehicles, even those traveling at low speeds, from coming in contact with the door. In addition, the detection zone of the device may fluctuate due to changes in the local magnetic environment.
- Failure to follow these procedures may result in serious injury or death.
- All vehicles should approach doors at speeds that allow the operator to ensure the door is operating properly and in an open position.



WARNING:

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

Models

Model	Cable ¹	Cable Type	Supply Voltage	Output Type	Range
Q7MB	1.98 m (6.5 ft) cable	26 gage/5-wire shielded cable with 4 mm (0.160 in) diameter polyethylene jacket	10 to 30 V DC	Bipolar NPN/ PNP ²	Range varies depending on application and target being sensed. See Typical Target Excess Gain Curves on p. 6.
Q7MB W/15	4.57 m (15 ft) cable				
Q7MB W/30	9.14 m (30 ft) cable				
Q7MB W/50	15.2 m (50 ft) cable				
Q7MB W/100	30.5 m (100 ft) cable				
Q7MBQ	150 mm (5.9 in) cable with a 5-pin M12 quick disconnect	26 gage/5-wire cable with PVC jacket			

¹ Other cable lengths are available - up to 61 m (200 ft); consult factory for more information. A model with a QD connector requires a mating cable; see [Cordsets](#) on p. 7.

² Consult factory for other output options.



Overview

The Q7M sensors implement a passive sensing technology to detect large ferrous objects. The sensor measures the change in the Earth's natural magnetic field (the ambient magnetic field) caused by the introduction of a ferromagnetic object.

The Q7M sensors provide an alternative to inductive loop systems.

Mount the Q7M above-ground .

Theory of Operation

The sensor uses three mutually perpendicular magnetoresistive transducers. Each transducer detects magnetic field changes along one axis. By incorporating three sensing elements, maximum sensor sensitivity is achieved.

A ferrous object will alter the local (ambient) magnetic field surrounding the object. The magnitude of this magnetic field change is dependent both on the object (size, shape, orientation, and composition) and on the ambient magnetic field (strength and orientation).

During a simple programming procedure, the Q7M measures the ambient magnetic field. When a large ferrous object (for example, a truck, automobile, or rail car) alters that magnetic field, the sensor detects the magnetic field changes (anomalies). When the degree of magnetic field change reaches the sensor's threshold, the sensor's discrete outputs switch.

Sensor Field of View and Range

The sensor range depends on three variables:

1. The local magnetic environment (including nearby ferrous material)
2. The magnetic properties of the object to be sensed
3. Sensor settings

The Q7M can detect changes in the ambient magnetic field in all directions. As with other sensors, the range will depend on the target. The strong disturbance of a large ferrous object decreases as the distance from the sensor increases, and the magnitude and shape of the disturbance is dependent on the object's shape and content.

The sensor can be programmed to react to magnetic field disturbances of greater or lesser intensity using two adjustments: background condition and sensitivity level.

Once background condition and sensitivity level are set, the sensor is ready to detect the target object. Both settings are stored in non-volatile memory.




Note: The Q7M will continue to sense a vehicle in its sensing field, even when the vehicle is stopped.




Tip: Sensor may be mounted inside a non-ferrous architectural detail for cosmetic or security reasons. It is important that, wherever it is mounted, the sensor is securely attached during configuration and all later use. If the sensor moves after being taught, detection errors may occur and sensor must be re-taught. If a sensor appears to lose its taught settings, it may be a result of having shifted position after setup.

Figure 1. Baseline Magnetic Field

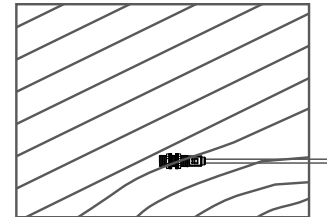

A. Baseline magnetic field, with slight disturbances caused by permanent ferrous-metal objects within or near the sensor.

Figure 2. Introduction of Large Steel Object

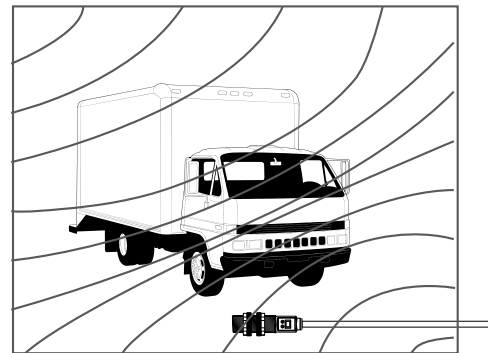

B. After a large steel target object is introduced, the sensor detects the differential (magnetic strength and orientation) between fields A and B. If the differential is greater than the sensitivity threshold, the sensor's outputs conduct.

Installation

The Q7M is non-directional, and can be mounted in any position. The sensor may be mounted inside a non-ferrous architectural detail for cosmetic or security reasons.


The end caps provide mounting holes at either end of the sensor. The sensor can be mounted to any desired surface (for example, cement or metal). Select a location as close as possible to the vehicle(s) to be detected.

In applications where the sensor is mounted to the side of the vehicle traffic lane (for example, in a kiosk, menu board, or gate control box), consideration must be made for movement of metallic objects within a few feet of the sensor on the opposite side of the traffic lane, even if the activity is not visible (for example, behind a wall or inside a building). Consult Banner Applications Engineer for further information.

When mounting a QD-cable model, it is recommended to route the cable through conduit for protection from environmental conditions. The integral cable does not need such protection.

Verify the sensor is securely attached during configuration and operation. If the sensor moves after being taught, detection errors may occur and the sensor must be re-taught. If a sensor appears to lose its taught settings, the sensor may have shifted position after configuration.

Figure 3. Installation using the mounting holes in the sensor's end caps

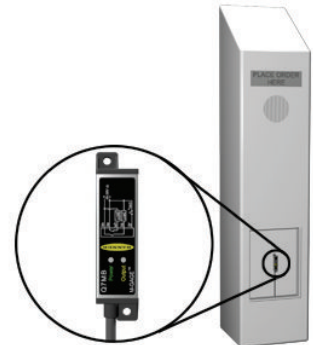


Install the Sensor Above Ground



Restriction: The models listed in this datasheet are not intended to be installed below ground because of inherent installation and environmental variability. Contact Banner Engineering for models designed for below ground installations.

Installation Placement Considerations


Figure 4. Example good sensor placement

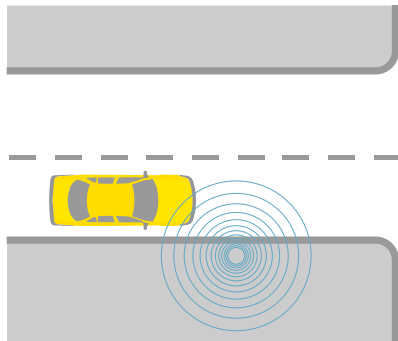

Good Placement

Figure 4 on p. 3 shows an example of appropriate M-GAGE sensor placement for vehicle detection. The sensor is placed at the edge of a traffic lane to detect the vehicle in the near lane. This type of placement is often used for a kiosk, menu board, or gate control box.

Figure 5. Example bad sensor placement

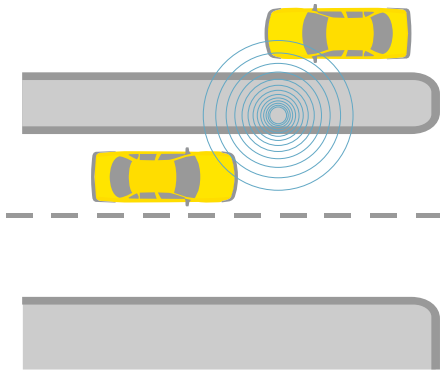

Bad Placement

Figure 5 on p. 4 depicts a potential problem installation. While mounting the sensor at the side of a lane may be successful, this mounting location increases the potential for detection problems. To reliably detect a vehicle from the side, the sensor sensitivity must be increased in order to see objects further away in the lane of interest. Unfortunately, this enables the sensor to also detect another object operating behind the sensor or vehicles in adjacent lanes, which will cause false counts.

Place the M-GAGE sensor at the edge of a traffic lane only if there is no possibility of other objects being detected by the sensor. A good practice is to ensure that no vehicles will be within 3.05 m (10 ft) of the sensor on the non-traffic side.

Sensor Configuration

The sensor is configured via its gray Remote wire. The gray wire is always active and the sensor may be re-configured at any time. **For optimum performance, secure the sensor so that it will not move either during or following the configuration.**

Programming pulses may be executed by connecting the sensor's gray wire to the sensor's blue (common) wire with a normally open mechanical button connected between them, or as a low (< 2 V DC) signal from a programmable logic controller (PLC), or using the model DPB1 Portable Programming Box, as shown. When a PLC is used for configuration, the pulses are acknowledged via the sensor output signal.

When the DPB1 is used, the pulses are accomplished by clicking the DPB1 **TEACH** push button (0.04 seconds ≤ click ≤ 0.8 seconds). The sensor's output status is reflected by the DPB1 Output indicator LED.

Figure 6. Sensor features


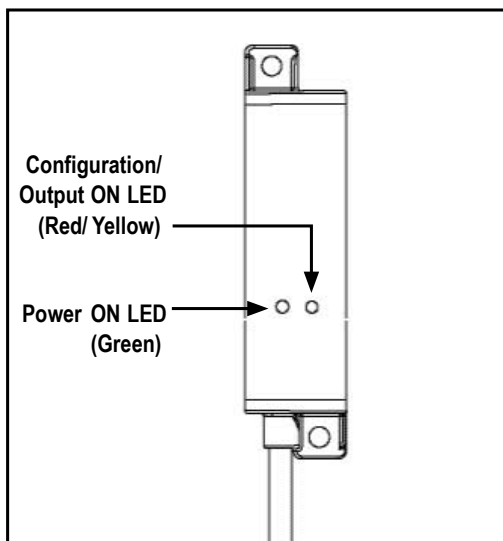


Figure 7. Connecting to the model DPB1 Portable Programming Box

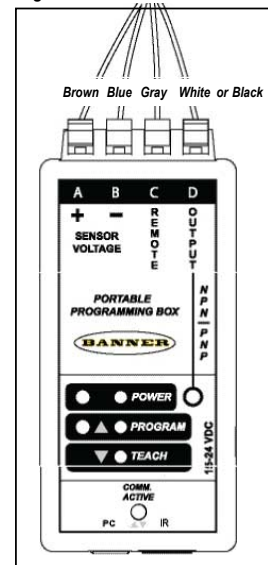


Push the TEACH button to pulse the remote wire.

Configuration



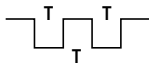
Set Background Condition (No Vehicle Present)

Wire the M-GAGE™ sensor as directed. Remove all vehicles and all other metal objects that are temporarily in the sensing area before setting the background condition.




Configuration (0.04 ≤ T ≤ 0.8 seconds)		Result
Set Background	Single-pulse the remote wire. 	Sensor learns background. Output indicator LED flashes approximately 12 times while the background is taught. Sensor returns to Run mode.

Set Sensitivity Level

Level 1 = least sensitive, Level 6 = most sensitive.

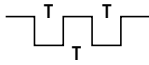Configuration (0.04 ≤ T ≤ 0.8 seconds)		Result
Access Sensitivity Mode	Double-pulse the remote wire. 	Red output LED flashes every 2 seconds to indicate the current sensitivity level; the sensor always begins at sensitivity level 1.
Adjust Sensitivity	To increase the sensitivity incrementally, single-pulse the remote wire again; continue until the desired sensitivity level is reached. 	Output LED flashes from 1 to 6 times every 2 seconds to indicate the sensor's sensitivity level (for example, two flashes indicates level 2).
	Double-pulse the remote wire to save the setting. 	Sensor returns to Run mode.
Test Operation	Drive a vehicle past the sensor to trip the output. Use a small/light vehicle to ensure larger vehicles will be detected later. Adjust the sensitivity as needed.	Verify Output LED comes On as expected.
Prepare for Operation	Disconnect DPB1 or other temporary switch used for configuration and connect the sensor to a permanent power supply/ output device (user-supplied). See Wiring on p. 5.	

Wiring

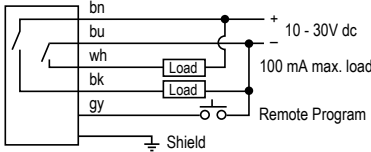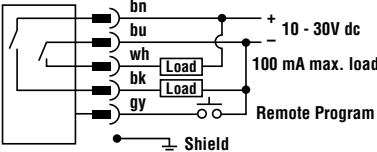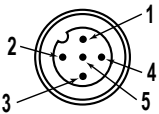Cabled Model	Quick-Disconnect Model	Pinout
		 <ul style="list-style-type: none"> 1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray

Specifications

Supply Voltage

10 V DC to 30 V DC (10% maximum ripple) at 43 mA, exclusive of load
Above +50° C (+122° F), supply voltage is 10 V DC to 24 V DC (10% maximum ripple)

Sensing Range

See [Typical Target Excess Gain Curves](#) on p. 6

Sensing Technology

Passive three-axis magnetoresistive transducer

Supply Protection Circuitry

Protected against reverse polarity and transient voltages

Output Configuration

Two SPST solid-state outputs conduct when object is sensed; one NPN (current sinking) and one PNP (current sourcing)

Output Protection

Protected against short-circuit conditions

Output Ratings

100 mA maximum (each output)
NPN saturation: < 200 mV at 10 mA and < 600 mV at 100 mA
NPN OFF-state leakage current: < 200 microamps
PNP saturation: < 1.2 V at 10 mA and < 1.6 V at 100 mA
PNP OFF-state leakage current: < 5 microamps

Output Response Time

20 milliseconds

Delay at Power-Up

0.5 seconds

Temperature Effect

< 0.5 milligauss / °C

Remote TEACH Input

Impedance 12K ohms (low \leq 2 V DC)

Connections

Shielded 5-conductor (with drain) polyethylene jacketed attached cable or 5-pin M12 quick-disconnect PVC pigtail

Patent

U.S. Patent 6,546,344 B1

Environmental Rating

Leak proof design is rated IEC IP69K; NEMA 6P

Vibration and Mechanical Shock

All models meet Mil. Std. 202F requirements method 201A (vibration: 10 to 60 Hz maximum, double amplitude 0.06 inch, maximum acceleration 10G). Also meets IEC 947-5-2: 30G 11 ms duration, half sine wave.

Operating Conditions

-40 °C to +70 °C (-40 °F to +158 °F)
100% maximum relative humidity

Adjustments

Configuration of Background Condition and Sensitivity Level may be set by pulsing the gray wire remotely via the portable programming box

Indicators

Two indicators
Power Indicator: Green
Configuration/Output Indicator: Red/Yellow

Construction

Lightpipes: Acrylic
Housing: Anodized aluminum
End Caps: Thermoplastic polyester

Certifications



Required Overcurrent Protection



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table. Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply. Supply wiring leads < 24 AWG shall not be spliced. For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

Typical Target Excess Gain Curves

After the sensor has been securely mounted and configured, it is ready to operate. The following example application shows typical responses for the M-GAGE™ sensor.


This example depicts mounting the M-GAGE™ 1 meter (3.3 ft) above the ground to sense an automobile. The graph shows the excess gain for a typical car. Excess gain is a measure of the amount of extra signal detected by the sensor over and above the Level needed to detect the target. This example assumes a Level 5 sensitivity threshold.

The table at right compares the change in excess gain if the sensitivity Level changes. If the sensitivity is at Level 6, then the excess gain at a given distance would be 1.3 times larger than for a Level 5 sensitivity. Conversely, if the sensitivity threshold is Level 1, then the excess gain would be one third as big as for Level 5.


Table 1: Excess Gain vs Sensitivity Level (Assumes Level 5)

Level	Excess Gain Multiplier
1	0.33
2	0.4
3	0.5
4	0.66
5	1.0 (default)
6	1.3

Figure 8. Application example: Sensor mounted 1 meter (3.3 ft) above ground

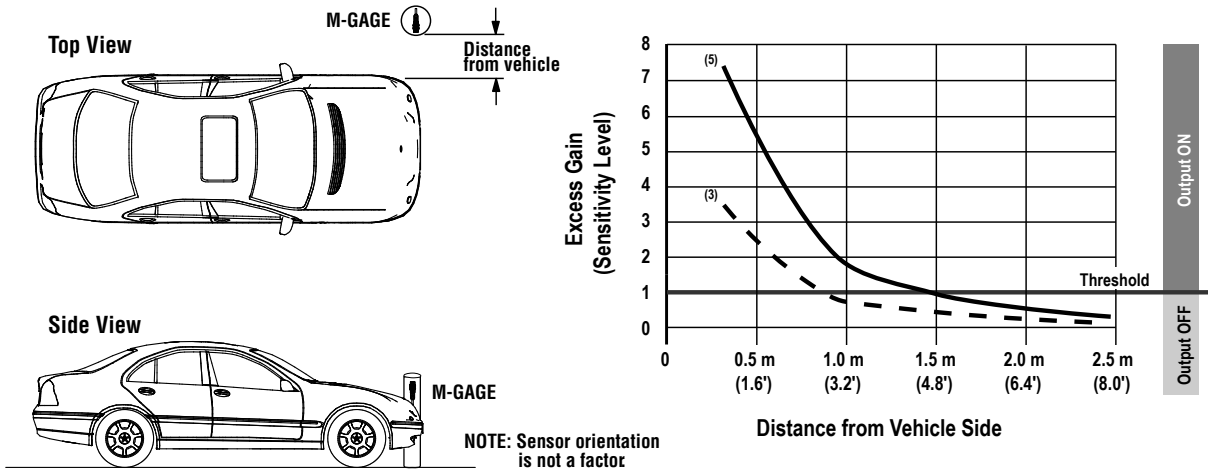

Dimensions

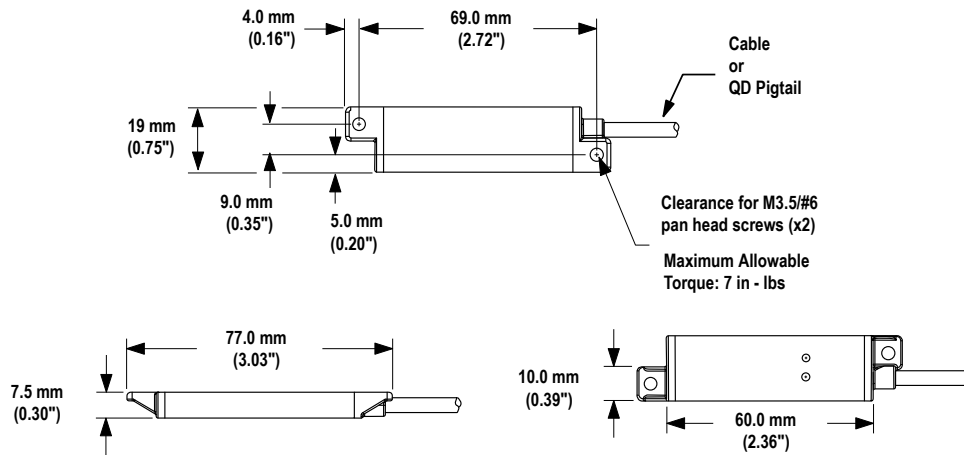

Accessories

Model	Description
DPB1	Handheld Portable Programming Box, used for configuring sensor when push button is not accessible
SP-DPB1	Optional 115V ac power supply for DPB1 Handheld Portable Programming Box

Cordsets

Quick-disconnect cordsets are not suitable for buried applications.