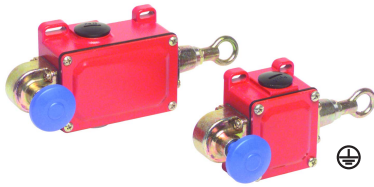
















# RP-QM72 Series Rope Pull Switch




## Datasheet



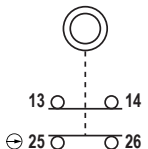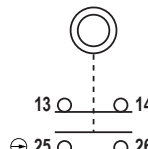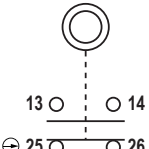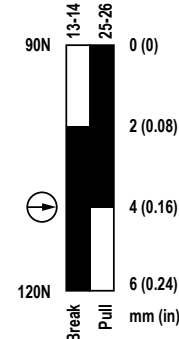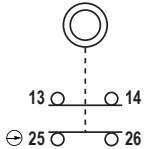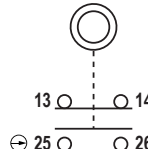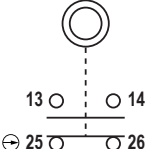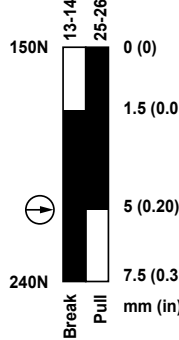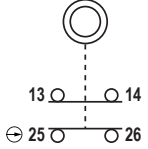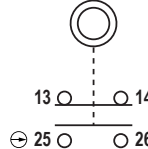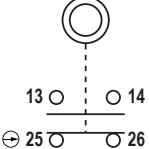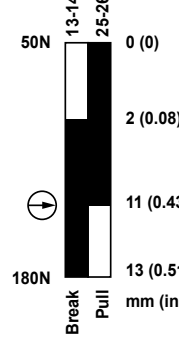-  Positive-opening safety contacts (IEC 60947-5-1), not dependent upon springs
- The cable pulled contact(s) latch open when rope is pulled and requires a manual reset after rope is released.
- Heavy-duty die cast metal housing, rated IP65, suitable for demanding industrial environments
- Rope spans up to 6 m, 12 m or 20 m (20 ft, 40 ft, or 66 ft), depending on model
- All safety contacts are closed with normal rope tension; the cable pulled contact(s) opens when rope is pulled, the cable break contact(s) opens if rope breaks (or if tension is reduced from normal amount)
- Some models include extra contacts for monitoring or to provide dual-channel input to a safety device
- Indicator mark on switch shows when rope has proper tension for operation
- Long life, switch rated at 1 million mechanical operations, minimum
- Five available models; all with latching outputs
-  Protective Earth Terminal (IEC 60947-1)

Model	Max. Rope Length	Run Position	Cable Pulled	Cable Break	Switching Diagram
RP-QM72D-6L	6 m (20 ft)				
RP-QM72D-12L	12 m (40 ft)				
RP-QM72D-20L	20 m (66 ft)				

**Note:** This symbol  for a positive-opening safety contact (IEC 60947-5-1) is used in the switching diagram to identify the point in actuator travel where the normally-closed safety contact is fully open.



Model	Max. Rope Length	Run Position	Cable Pulled	Cable Break	Switching Diagram
RP-QMT72F-12L	12 m (40 ft)				
RP-QMT72E-12L	12 m (40 ft)				

Contacts: Open Closed Transition



**Note:** This symbol for a positive-opening safety contact (IEC 60947-5-1) is used in the switching diagram to identify the point in actuator travel where the normally-closed safety contact is fully open.

### Important... Read This First

**Regarding the Use of Rope Pull Switches.** In the United States, the functions that Banner rope pull switches are intended to perform are regulated by the Occupational Safety and Health Administration (OSHA). Whether or not any particular rope pull switch installation meets all applicable OSHA requirements depends upon factors that are beyond the control of Banner Engineering Corp. These factors include the details of how the switches are applied, installed, wired, operated, and maintained.

Banner Engineering Corp. has attempted to provide complete application, installation, operation, and maintenance instructions in this document. Direct any questions regarding the use or installation of rope pull switches to the factory applications department.

Banner Engineering Corp. recommends that rope pull switches be applied according to the guidelines set forth in the standards listed below. In addition, the user is responsible for ensuring all local, state, and national laws, rules, codes, and regulations relating to the use of Banner rope pull switches in each application are satisfied. Extreme care is urged that all legal requirements are met and that all installation and maintenance instructions are followed.

#### Applicable U.S. Standards

OSHA Code of Federal Regulations: Title 29, Parts 1900 to 1910

Available from: Superintendent of Documents, Government Printing Office, P.O. Box 371954, Pittsburgh, PA 15250-7954, Tel: 202-512-1800

ANSI B11 Standards for Machine Tools Safety

Contact: Safety Director, AMT – The Association for Manufacturing Technology, 7901 Jones Branch Drive, Suite 900, McLean, VA 22102-4206 USA, [www.amtonline.org](http://www.amtonline.org)

#### Applicable European and International Standards

EN ISO 12100 Safety of Machinery – Basic Concepts, General Principles for Design

ISO 13852 (EN 294) Safety of Machinery—Safety Distances to Prevent Danger Zones Being Reached by the Upper Limbs

ISO 13853 (EN 811) Safety of Machinery—Safety Distances to Prevent Danger Zones Being Reached by the Lower Limbs

EN ISO 13849-1 Safety-Related Parts of Control Systems

EN 13855 (EN 999) The Positioning of Protective Equipment in Respect to Approach Speeds of Parts of the Human Body

ISO 14119 (EN 1088) Interlocking Devices Associated with Guards – Principles for Design and Selection

EN 60204-1 Electrical Equipment of Machines Part 1: General Requirements

IEC 60947-5-1 Low Voltage Switchgear – Electromechanical Control Circuit Devices


Contact: IHS Markit (Global Engineering Documents), 15 Inverness Way East, Englewood, CO 80112 USA, <https://global.ihs.com/>

### Overview

Models RP-QM..72-..L are rope pull switches in heavy-duty metal housings. When used with steel wire rope, they can provide stop actuation along conveyors and similar machinery. Red PVC-covered 3 mm diameter wire rope is recommended (see Accessories).

Some models have redundant terminal pairs (see model listing). In such models, terminals 33/34 will follow the action of terminals 13/14 and terminals 45/46 will follow the action of terminals 25/26. Either or both contacts 33/34 and/or 45/46 may be used as monitoring contacts. Contact pairs 33/34 also may be jumpered to pairs 45/46 (in the same way that 13/14 is jumpered to 25/26) to provide dual-channel input to a safety device. When the rope is properly tensioned (using a turnbuckle), both contacts of the switch are closed. A groove on the actuator aligns with the end of the housing flange when tension is set for operation. When the rope is pulled, the positive-break contact between terminals 25 and 26 (and terminals 45 and 46, for model RP-QMT72E-12L) latches open. If the rope breaks or goes slack, the contact between terminals 13 and 14 (and terminals 33 and 34, for models RP-QMT72E-12L and RP-QMT72F-12L) opens. These contacts typically should be wired together, in series.

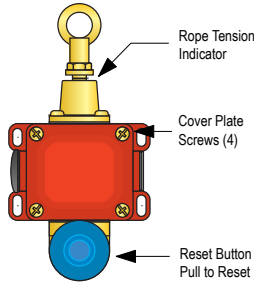Figure 1. Features



These rope pull switches are not safeguarding devices, in that they do not protect personnel from injury. They provide the same function as other types of stop switches.

All five models feature "latching" operation. When the rope is pulled, the switch contacts 25/26 (and 45/46, depending on model) open and remain open until the built-in reset button is manually pulled to reset.



**WARNING:**

- **Not a safeguarding device**
- Failure to follow these instructions could result in serious injury or death.
- This device is not considered a safeguarding device because it requires an overt action by an individual to stop machine motion or hazards. A safeguarding device limits or eliminates an individual's exposure to a hazard without action by the individual or others. This device cannot be substituted for required safeguarding. Refer to the applicable standards to determine those requirements.

## Mechanical Installation


### Installation Guidelines

- The rope should be easily accessible and visible along its entire length. Markers or flags may be fixed on the rope to increase its visibility
- Mounting points, including support points, must be rigid and allow sufficient space around the rope to allow easy access
- The rope should be free of friction at all supports. Pulleys are recommended
- Use only pulleys (not eye bolts) when routing the rope around a corner or whenever direction changes, even slightly
- Never run rope through conduit or other tubing
- Never attach weights to the rope
- Temperature affects rope tension. The rope expands (lengthens) when temperature increases, and contracts (shrinks) when temperature decreases. Significant temperature variations require frequent checks of the tension adjustment
- Do not exceed the maximum specified total rope length. Banner offers models for other spans; contact Banner Engineering or visit [www.bannerengineering.com](http://www.bannerengineering.com) for model selection



**WARNING:** Failure to use pulleys or eye bolts to support the wire rope can result in damage to the switch and may create a dangerous situation that could lead to serious injury or death.

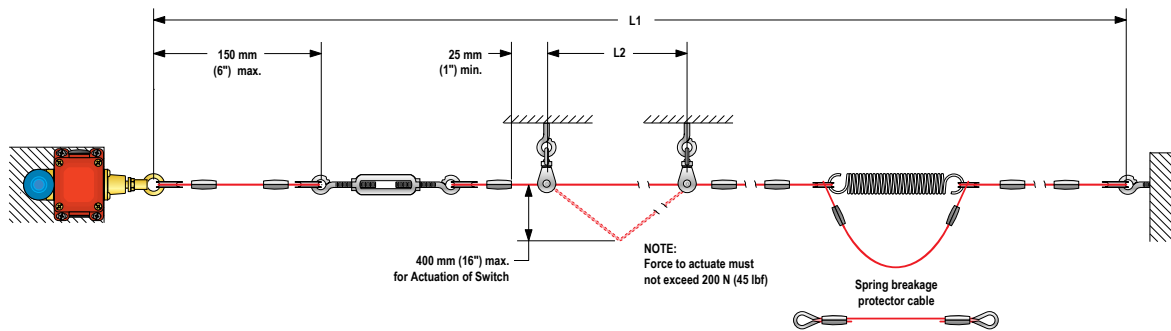Figure 2. Assembly of Rope and Hardware



Model	Max. Total Length L1	Max. Distance Between Pulleys L2
RP-QM72D-6L	6 m (20 ft)	3 m (10 ft)
RP-QM72D-12L	12 m (40 ft)	4 m (13 ft)
RP-QMT72D-20L	20 m (66 ft)	5 m (17 ft)
RP-QMT72E-12L	12 m (40 ft)	4 m (13 ft)
RP-QMT72F-12L	12 m (40 ft)	4 m (13 ft)

### Installation Procedure

1. Mount the switch securely on a solid, stationary surface.
2. Fasten an eye bolt at the opposite end of the rope span, up to 6 m (20 ft), or 12 m (40 ft) or 20 m (66 ft) from the switch, depending on model. The anchor for the eye bolt also must be solid and stationary, to withstand the constant tension and possible pulling of the rope.

3. Assemble the rope, as shown. Keep the rope's PVC cover intact along its complete length, except at locations where the rope is clamped (remove the sheath at these locations). Note: A tensioning spring is required to ensure compliance with direction-independent actuation of the wire rope.
4. Use pulleys (recommended) or eye bolts at each support point. A pulley must be used when routing the rope around a corner, regardless of the angle.
5. Apply tension to the rope using the turnbuckle until the indicator mark on the switch aligns with the leading edge of the housing flange. This indicates sufficient rope tension. (Contacts 25/26, and 45/46, if applicable, will close.)
6. Pull hard on the rope and reset the latch several times. If contact 25/26 (45/46) remains open following the reset, further tighten the turnbuckle, until contact 25/26 (45/46) closes.
7. Repeat step 6 until contact 25/26 (45/46) remains closed for the Run condition.

All hardware is supplied by the user. The switch mounting holes are on a mounting pattern of 72 x 40 or 72 x 76 millimeters, and accept M5 (#10) hardware. Wire rope and associated hardware may be ordered separately; see [Accessories](#) on page 6.

Figure 3. Run Position: Proper Rope Tension

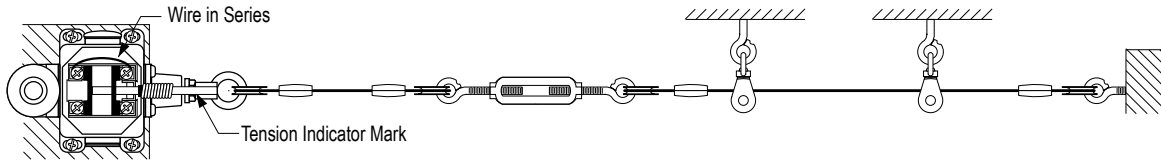


Figure 4. Rope Pulled: Contact 25/26 (45/46) Opens



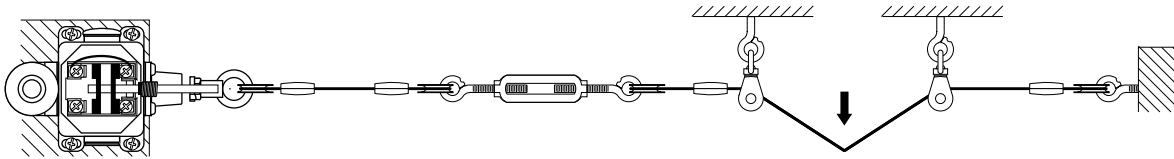


Figure 5. Rope Break or Slack: Contact 13/14 (33/34) Opens

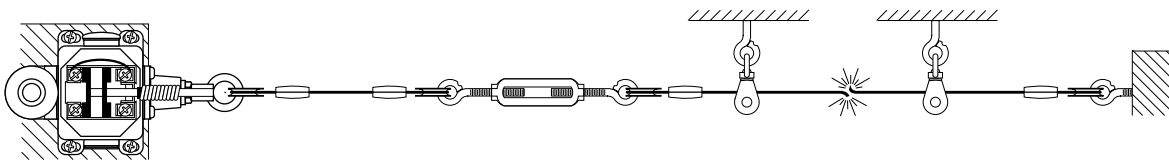

## Electrical Installation

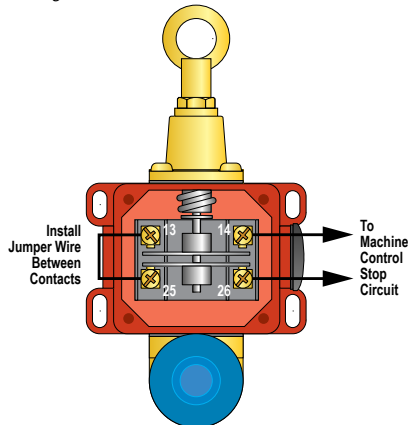Figure 6. Wire the two switch contacts in series



### Access to the Wiring Chamber

The wiring chamber is accessed via a cover plate (remove four screws). A conduit adapter is supplied to convert the 20 millimeter threaded entrance to 1/2-inch NPT. An accessory cable gland that fits the M20 thread is also available (see [Accessories](#) on page 6).

### Typical Wiring

Install a jumper wire to place switch contacts 13/14 and 25/26 in series, as shown.

For model RP-QMT72F-12L, install a jumper wire to place contacts 33/34 and 45/46 in series, to provide a dual-channel output to a safety device. If dual-channel output is not required, either or both contacts may instead be used as monitoring outputs (in which case no jumper is required).

## Latch Reset

After the rope is pulled, the latch must be manually reset.

The unit can be reset only when proper tension is indicated. Pull the blue reset button up until the latch has been reset (there will be an audible click, indicating the contacts changing state).

## Specifications

### Contact Rating

10 A at 24 V AC  
 10 A at 110 V AC  
 6 A at 230 V AC  
 6 A at 24 V DC  
 2.5 kV maximum transient tolerance  
 NEMA A300 (same polarity)

### European Rating

Rated Insulation Voltage (U<sub>i</sub>): 400 V AC  
 Rated Impulse Voltage (U<sub>imp</sub>): 4 kV  
 Conv. Thermal Current (I<sub>thel</sub>): 16 A  
 Rated Operational Voltage (U<sub>a</sub>): 240 V  
 Utilization Category: AC-15, U<sub>a</sub>/I<sub>e</sub> 240 V/10 A

### Contact Material

Silver-nickel alloy

### Maximum Switching Speed

20 operations per minute

### Recommended Rope Size

3 mm diameter steel rope

### Maximum Rope Pull Length

RP-QM72D-6L: 6 m (20 ft)  
 RP-QM72D-12L: 12 m (40 ft)  
 RP-QMT72D-20L: 20 m (66 ft)  
 RP-QMT72E-12L: 12 m (40 ft)  
 RP-QMT72F-12L: 12 m (40 ft)

### Short Circuit Protection

16 amp General Purpose (Slow Blow, gG). Recommended external fusing or overload protection.

### Wire Connections

Screw terminals with pressure plates accept the following wire sizes –  
 Stranded and solid: 20 AWG (0.5 mm<sup>2</sup>) to 16 AWG (1.5 mm<sup>2</sup>) for one wire  
 Stranded: 20 AWG (0.5 mm<sup>2</sup>) to 18 AWG (1.0 mm<sup>2</sup>) for two wires

### Cable Entry

M20 x 1.5 threaded entrance. Adapter supplied to convert M20 x 1.5 to ½"-14 NPST threaded entrance

### Mechanical Life

1 million operations

### Construction

Housing: Aluminum alloy die-cast  
 Cover: Aluminum alloy sheet metal  
 Pull Ring: Zinc die-cast

### Weight

RP-QM72D-6L: 0.49 kg (1.08 lbs)  
 RP-QM72D-12L: 0.52 kg (1.15 lbs)  
 RP-QMT72D-20L: 0.64 kg (1.41 lbs)  
 RP-QMT72E-12L: 0.64 kg (1.41 lbs)  
 RP-QMT72F-12L: 0.64 kg (1.41 lbs)

### Environmental Rating

IP65 according to IEC/EN 60529

### Operating Conditions

Temperature: -30 °C to +80 °C (-22 °F to +176 °F)

### B10d

2 x 10<sup>6</sup> cycles at DC-13; 24 V; Ie2 = 0.2 A based on ISD 13849-1

### Required Overcurrent Protection



**WARNING:** Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.  
 Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.  
 Supply wiring leads < 24 AWG shall not be spliced.  
 For additional product support, go to [www.bannerengineering.com](http://www.bannerengineering.com).

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

### Certifications



RP-QM72D-6L and RP-QMT72-20L models only



### Banner Engineering Europe

Park Lane, Culliganlaan 2F  
 bus 3, 1831 Diegem,  
 BELGIUM

### Turck Banner LTD Blenheim

House, Blenheim Court,  
 Wickford, Essex SS11 8YT,  
 Great Britain

## Dimensions

Figure 7. RP-QM72D-6L and RP-QM72D-12L


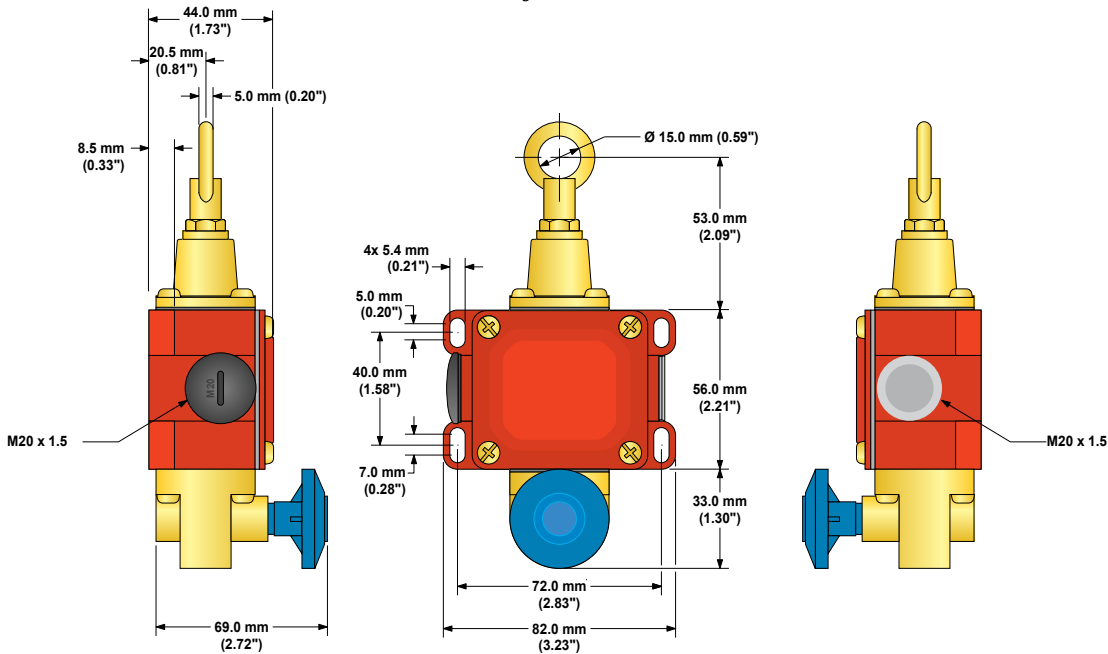


Figure 8. RP-QMT72D-20L, RP-QMT72E-12L, and RP-QMT72F-12L

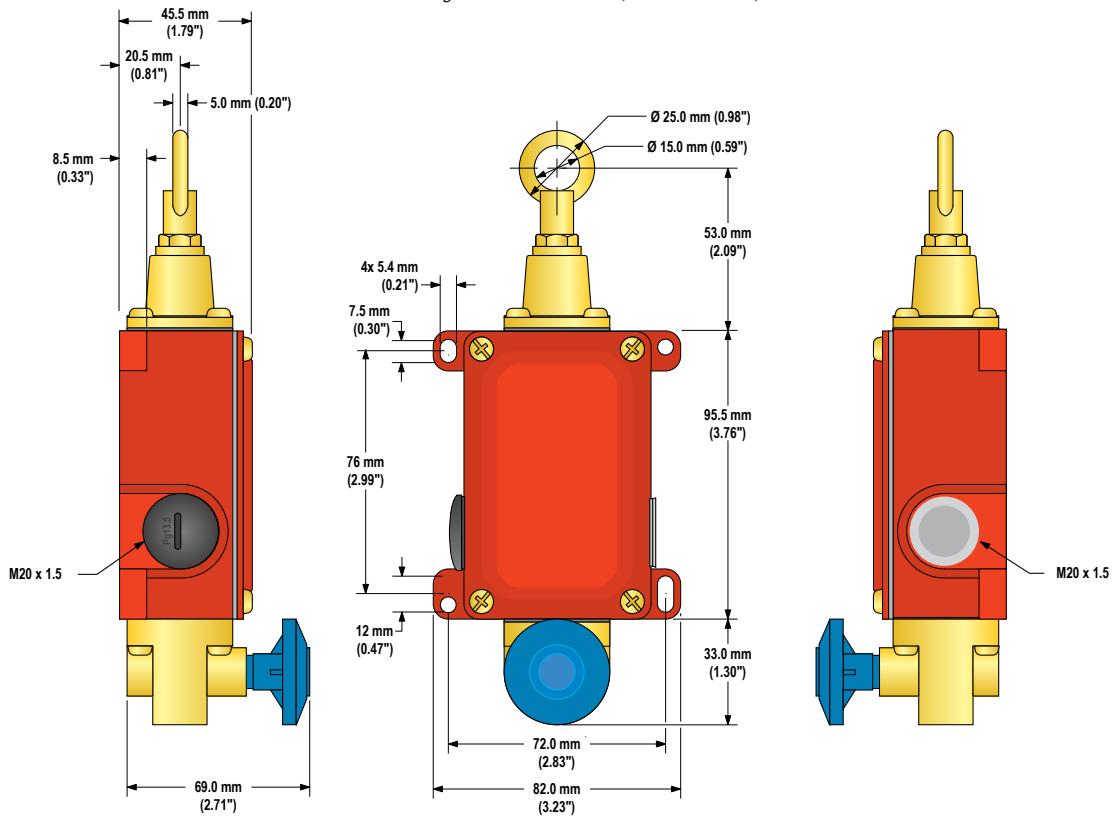

## Accessories

### Cable Glands

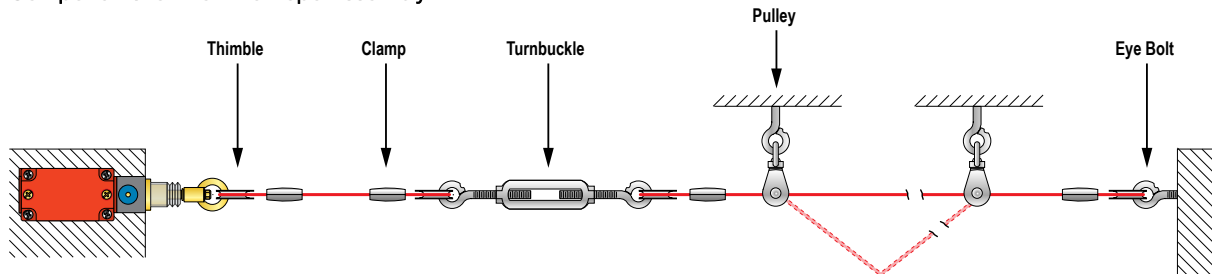
Model	Size	For Cable Diameter	Dimensions	Used With
SI-QM-CGM20	M20 x 1.5 Metal	5.0 to 12.0 mm (0.20 to 0.47 inches)		RP-RM83 Rope Pull Switch RP-LM40 Rope Pull Switch RP-QM72/QMT72 Rope Pull Switch RP-QM90 Rope Pull Switch SI-LM40 Safety Interlock Switch


### Conduit Adapters


Model	Size	Thread Conversion	Dimensions	Used With
SI-QM-M20	½ in-14 NPT Metal	M20 x 1.5 to ½ in-14 NPT		SI-LM40 Safety Interlock Switches RP-LM40 Rope Pull Switches RP-QM72/QMT72 Rope Pull Switches RP-QM90 Rope Pull Switches RP-RM83 Rope Pull Switches


One conduit adapter is supplied with each switch.


### Components for the Wire Rope Assembly






Model	Length	Description	Wire Rope
RPA-C2-10	10 m (32.8 ft)	3 mm steel wire rope with 0.5 mm red PVC jacket (unterminated)	
RPA-C2-20	20 m (65.6 ft)		
RPA-C2-40	40 m (131.2 ft)		
RPA-C2-50	50 m (164.0 ft)		
RPA-C2-80	80 m (262.4 ft)		


Model	Quantity	Description	Thimble
RPA-T2-4	4	Thimble for 3 mm wire rope	

Model	Quantity	Description	Clamp
RPA-CC2-4	4	Clamp for 3 mm wire rope	

Model	Quantity	Description	Turnbuckle
RPA-TA1-1	1	#4 Turnbuckle	

Model	Quantity	Description	Eye Bolt
RPA-EB1-1	1	¼ in -20 Eye bolt (3 in bolt shaft)	

Model	Quantity	Description	Pulley
RPA-P1-1	1	Hanging pulley for in-line use	
RPA-DP1-1	1	Right-angle mount deflection pulley for corner turns (90° to 180°)	

Model	Quantity	Description	Tensioning Spring	Used With
RPA-S1-1	1	Tensioning spring #1		RP-QM72 and RP-QM90 cable runs less than 10 m
RPA-S2-1	1	Tensioning spring #2		RP-QM72, RP-QMT72, and RP-QM90 cable runs over 10 m
RPAK-C2SBP-1	1	Spring breakage protector cable kit		Makes 300 mm spring breakage protector cable



**Note:** Hardware kits are available that contain the required hardware (except the spring) for a given cable run length. To find these kits, go to [www.bannerengineering.com](http://www.bannerengineering.com) and search for "RPAK".

## Product Support and Maintenance

### Maintenance/Checkout

At switch installation or replacement and at machine set up, a Designated Person<sup>¶</sup> must test each switch for proper machine shutdown response and check the switch(es) and installation for proper operation, physical damage, mounting (looseness), and excessive environmental contamination. This must also take place on a periodic schedule determined by the user, based on the severity of the operating environment and the frequency of switch actuations. This is generally determined by a risk assessment, such as the one contained in ANSI B11.0. Adjust, repair, or replace components as needed. If inspection reveals contamination on the switch, thoroughly clean the switch and eliminate the cause of the contamination. Replace the switch and/or appropriate components when any parts or assemblies are damaged, broken, deformed, or badly worn; or if the electrical/mechanical specifications (for the environment and operating conditions) have been exceeded. Always test the control system for proper functioning under machine control conditions after performing maintenance, replacing the switch, or replacing any component of the switch.

Additional items that should be included in the checkout and/or regularly scheduled maintenance of a rope pull system:

- Check for proper rope tension and adjust as needed

<sup>¶</sup> A Designated Person is identified in writing by the employer as being appropriately trained to perform a specified checkout procedure.